
 


INSTRUCTIONS FOR INSTALLATION AND ASSEMBLY OF TL1 TYPE LED LAMP.
INSTALLATION AND ASSEMBLY MUST BE CARRIED OUT BY A CLASSIFIED PERSON,
PERSON PERFORMING PROFESSIONAL ACTIVITIES IN THE QUESTION OF
ELECTRICAL INSTALLATIONS, ELECTRICIAN. THE LED LAMP CAN BE MOUNTED ON
ALL TYPES OF SURFACES SUCH AS WOODEN SURFACES, KNAUF, BRICK AND
CONCRETE.
ANY UNPROFESSIONAL INSTALLATION CAN LEAD TO DAMAGE TO THE LED LAMP.
INSTALLATION ON FLAT AND SLOPED CEILINGS IN DRY PREMISES OF THE BUILDING
WHERE THERE IS NO MOISTURE IS ALLOWED.

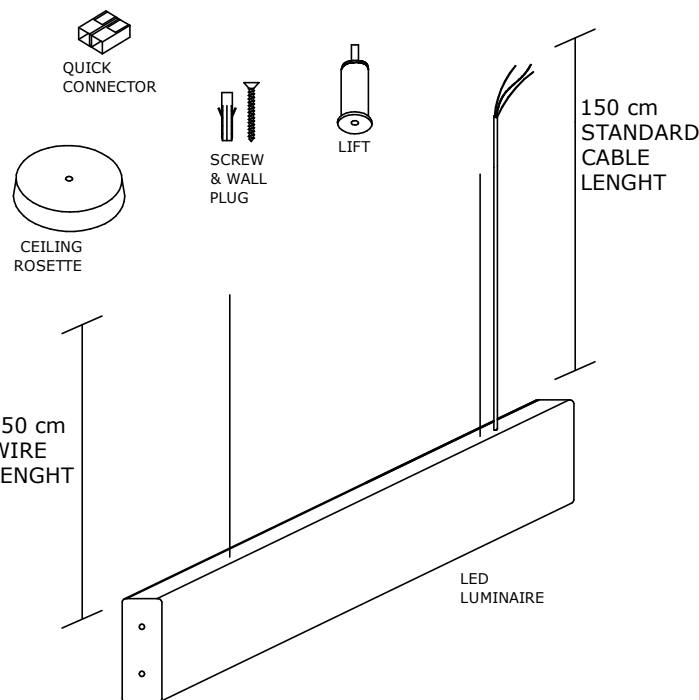

① TURN OFF THE POWER

TURN OFF THE POWER AT THE FUSE BOX AND SECURE THE FUSE
AGAINST RESTARTING. PLACE AT LEAST ONE WARNING SIGN ON
THE FUSE BOX.




② CHECKING THE PRESENCE OF VOLTAGE

USE A MULTIMETER OR A TWO-POLE CONTINUITY TESTER
TO MAKE SURE THAT THE LEAD TO WHICH THE LED LAMP IS
CONNECTED TO THEY ARE NOT POWERED.




③ BRACKET ASSEMBLY - LIFT

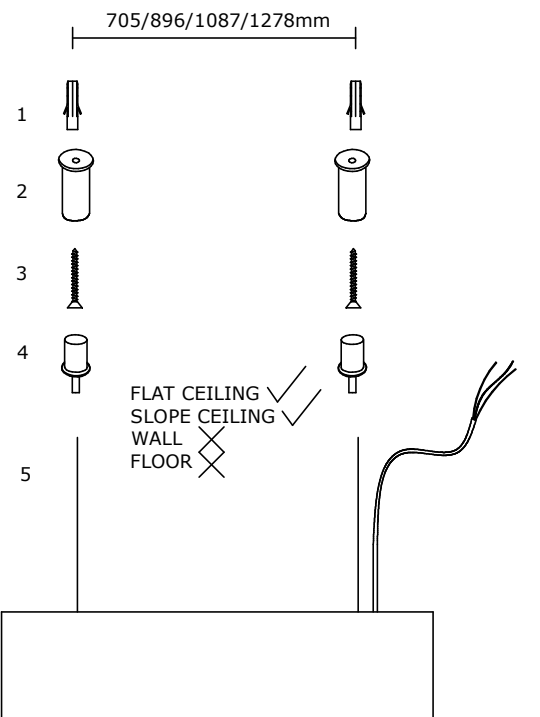

④ CONNECTING THE LED LAMP


IMPORTANT: THE CONNECTION VOLTAGE OF THE LED LAMP IS 230V 50Hz !!!

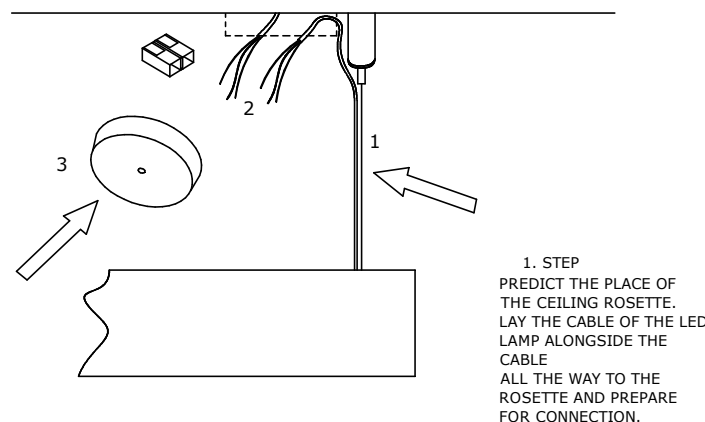

2. STEP

CONNECT THE LED LAMP TO THE MAINS VOLTAGE 230V
50Hz ACCORDING TO THE FOLLOWING SCHEMES.


ON/OFF VARIANT

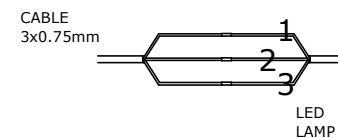

LED LAMP-WIRING

1. BROWN COLOUR
PHASE LEAD
2. BLUE COLOUR
ZERO LEAD
3. YELLOW GREEN COLOUR
GROUND


PUSH DIMMING VARIANT

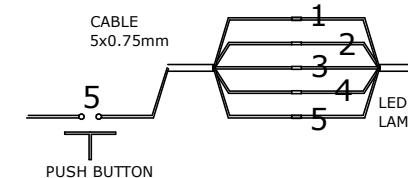

LED LAMP- WIRING

1. BLACK COLOUR
PERMANENT - PHASE LEAD
2. BLUE COLOUR
PERMANENT - NUL LEAD
3. YELLOW GREEN COLOUR
GROUND
4. GRAY COLOUR
IMPULS AC/N NUL
5. BROWN COLOUR
IMPULS AC/L PHASE

 NOTE: THE BUTTON CAN ONLY BE CONNECTED
TO THE BROWN COLOR OF THE LED LAMP GUIDE



3. STEP

AFTER CONNECTING THE LED LAMP, CLOSE THE CEILING ROSETTE.

PUSH DIMMING CONTROLLING

BY SHORT PRESSING THE BUTTON	0.1-1 SEC.	SWITCHING THE LED LAMP ON AND OFF
BY LONG PRESSING THE BUTTON	1.5-10 SEC.	STRENGTHENING OR REDUCING THE INTENSITY OF THE LED LAMP LIGHT
RESET	>11 SEC.	LED LAMP CONTROL RESET

⑥ CHECKING FOR CORRECT ASSEMBLY AND COMMISSIONING

BY CHECKING THE STABILITY OF THE LED LAMP, DETERMINE IF
THE LED LAMP IS PROPERLY MOUNTED.

TURN ON THE POWER AT THE FUSE BOX AND TURN ON THE LED
LAMP THROUGH THE SWITCH.

WARRANTY

"TURKOVIĆ" PRODUCTION GUARANTEE THAT THE LED LAMP HAS BEEN TECHNICALLY INSPECTED
WITH A POSITIVE OUTCOME.

THE WARRANTY LASTS 12 MONTHS FROM THE DATE OF SALE. THE WARRANTY DOES NOT COVER
DAMAGES DUE TO FALLING DOWN OF THE PRODUCT, DAMAGE OR POOR HANDLING OF THE LED
LAMP, FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS AND RULES. THE WARRANTY IS
NOT VALID IF THE CLIENT DID NOT COMPLY WITH THE TERMS OF PAYMENT. THE LAMP IS THE
PROPERTY OF TURKOVIĆ TRADE UNTIL THE ACCOUNT IS SETTLED IN FULL.

MODEL:

DELIVERY DATE: