


Instruction for LeArm



Screw List

 M4*40+6mm Brass Standoff (4pcs)		 M4*35mm Machine Screw (5pcs)	
 M4*15mm Brass Standoff (4pcs)	 M3*15mm Nylon Standoff (4pcs)	 M4*20mm Machine Screw (5pcs)	 M4*8mm Machine Screw (14pcs)
 M4*8mm Brass Standoff (4pcs)	 M3*8mm Nylon Standoff (10pcs)	 M3*6mm Machine Screw (20pcs)	 M3 Cup Bearing (1pcs)
 M3*10mm Flat Head Machine Screw (2pcs)	 M3*8mm Flat Head Machine Screw (25pcs)	 M2*6mm Machine Screw (10pcs)	 ST2.2*5mm Self-Tapping Screw (35pcs)
 M4 Screw Nut (20pcs)	 M3 Screw Nut (11pcs)	 M2 Screw Nut (15pcs)	

6 Channel Bluetooth Controller Interface Instruction

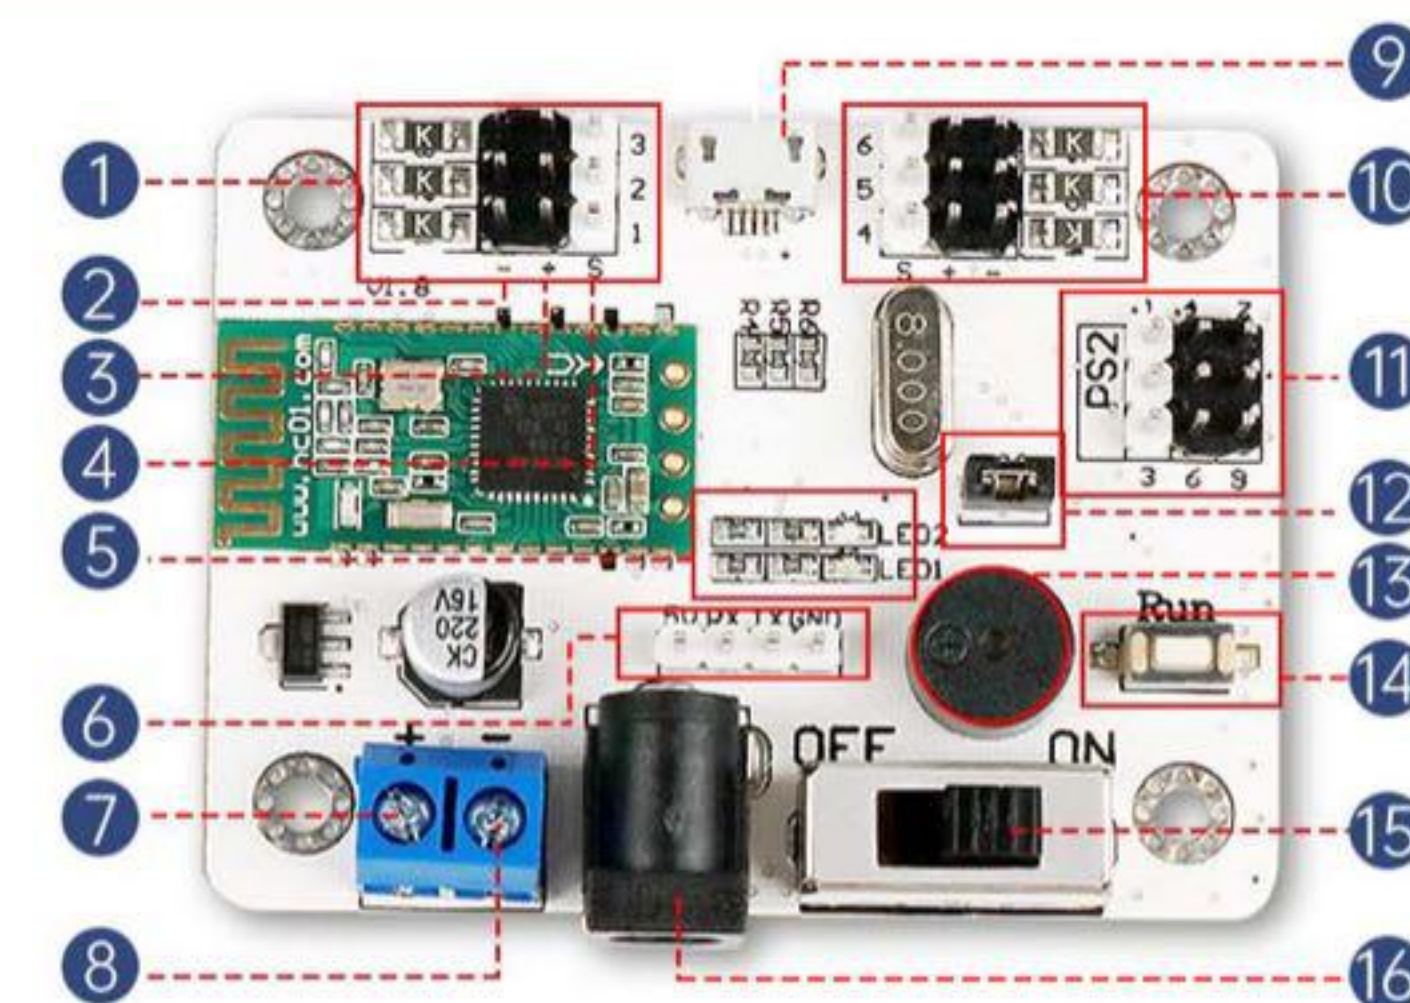


- 1-3th Servo Connection Port with Over-current Protection
2. Servo Negative
3. Servo Positive
4. Signal Terminal
5. LED1: Power Indicator LED2: Communication Indicator
6. Secondary Development Communication Port
7. VCC+
8. VCC-
9. Android Connector
10. 4-6th Servo Connection Port with Over-current Protection
11. PS2 Handle Receiver Port
12. Low Voltage Alarm Switch
13. Low-Pressure Buzzer Alarm
14. Offline Operation Button
15. Power Switch
16. DC Power Port


LeArm Assembly Instruction

This Assembly Instruction is designed to help you quickly understand the product structure and precautions. In order to ensure the stable operation of the body, please recognize the screws, nuts, and other accessories models during the installation process. For the assembly step video or more details, please scan the QR code at the right to get it.


Step1

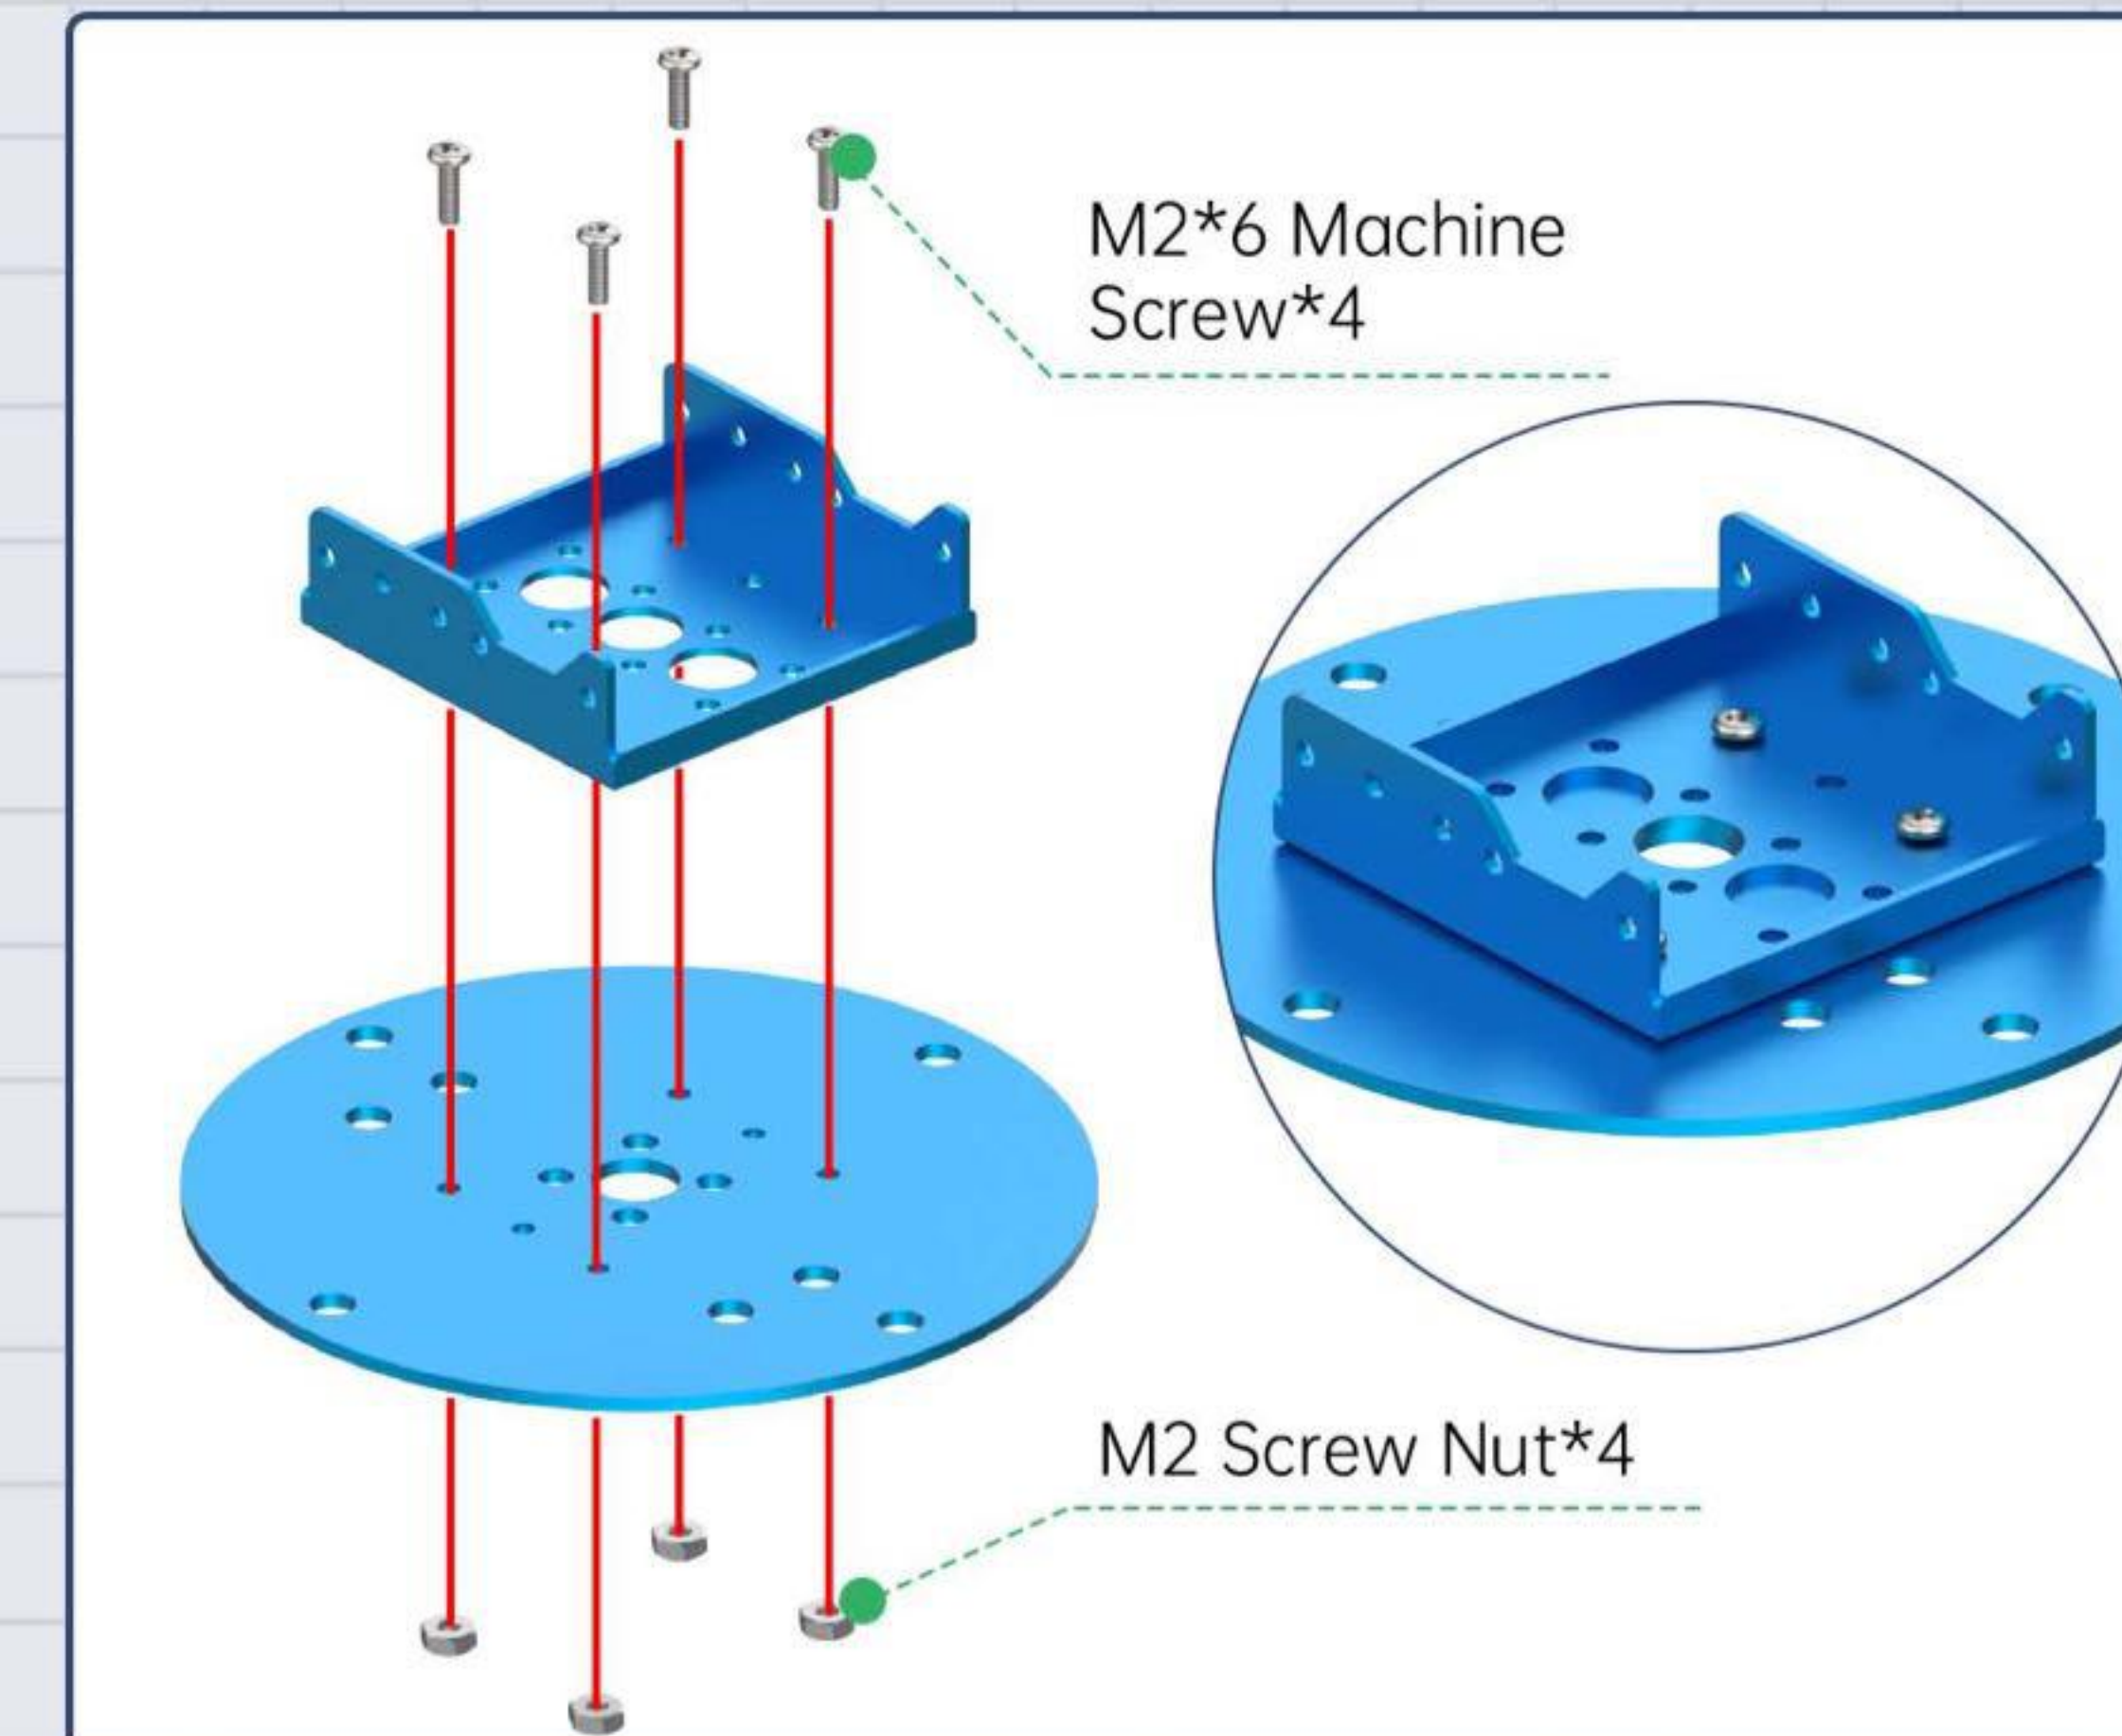


Step2

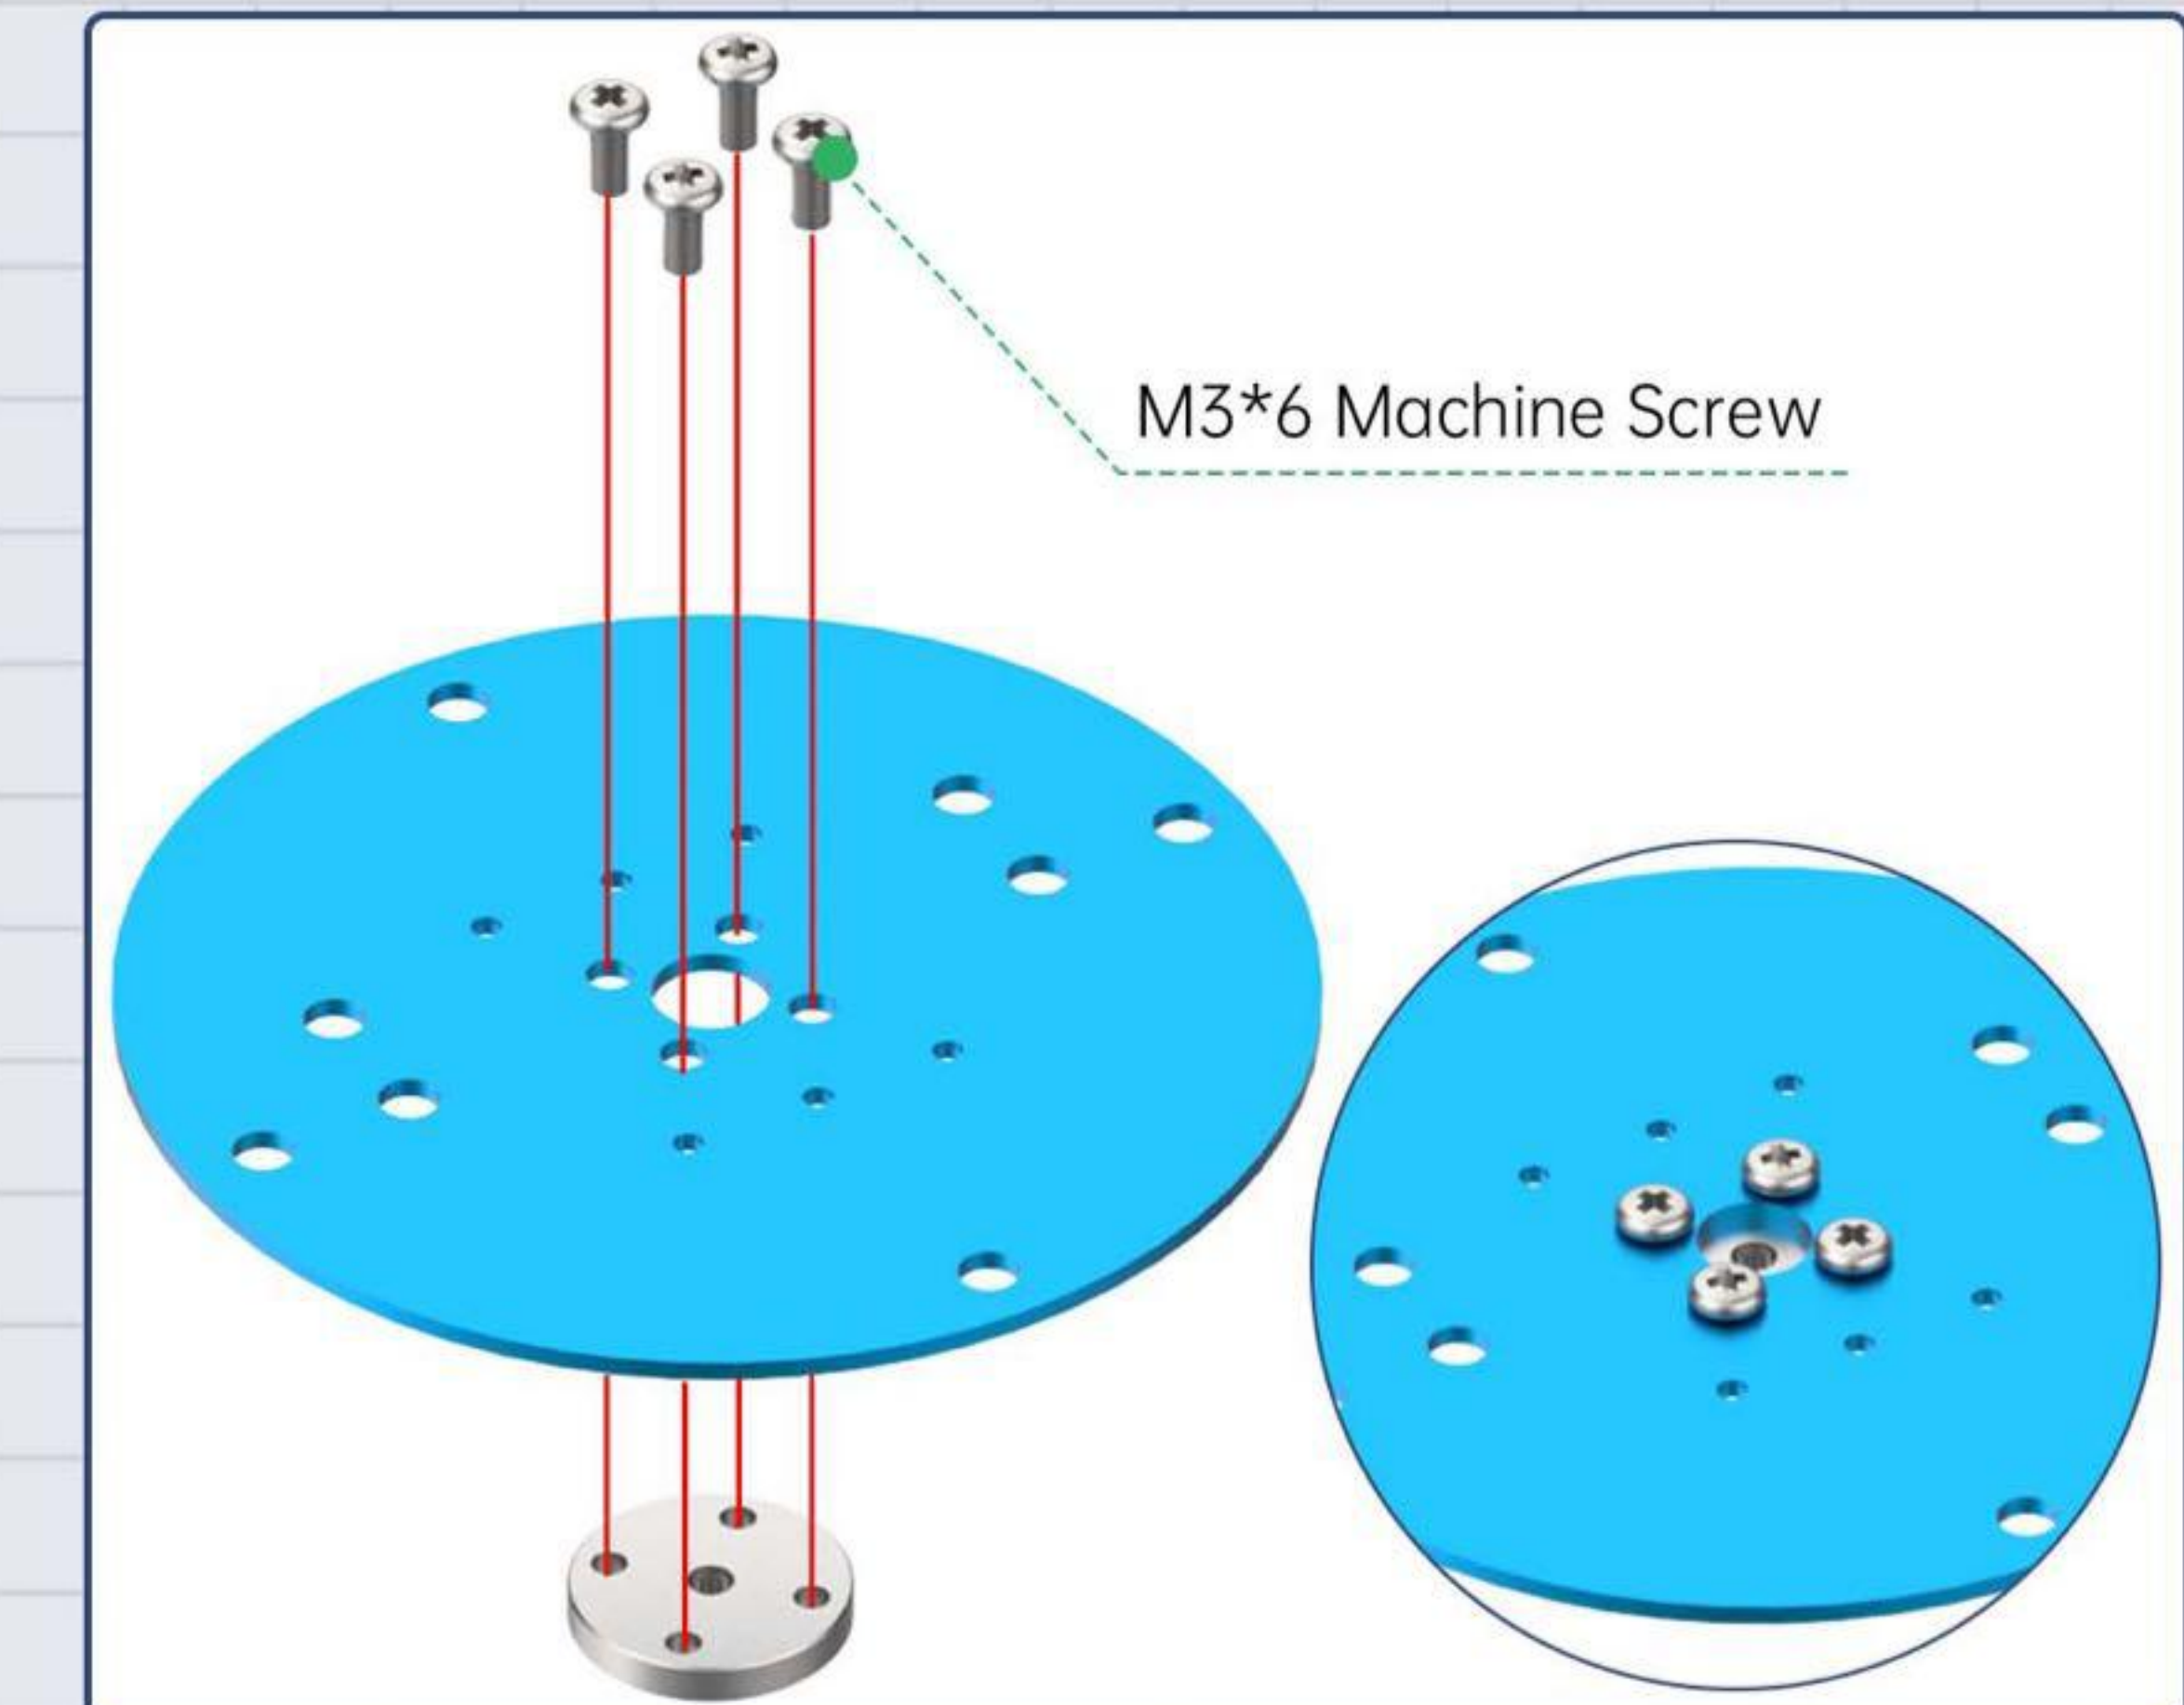


Step3

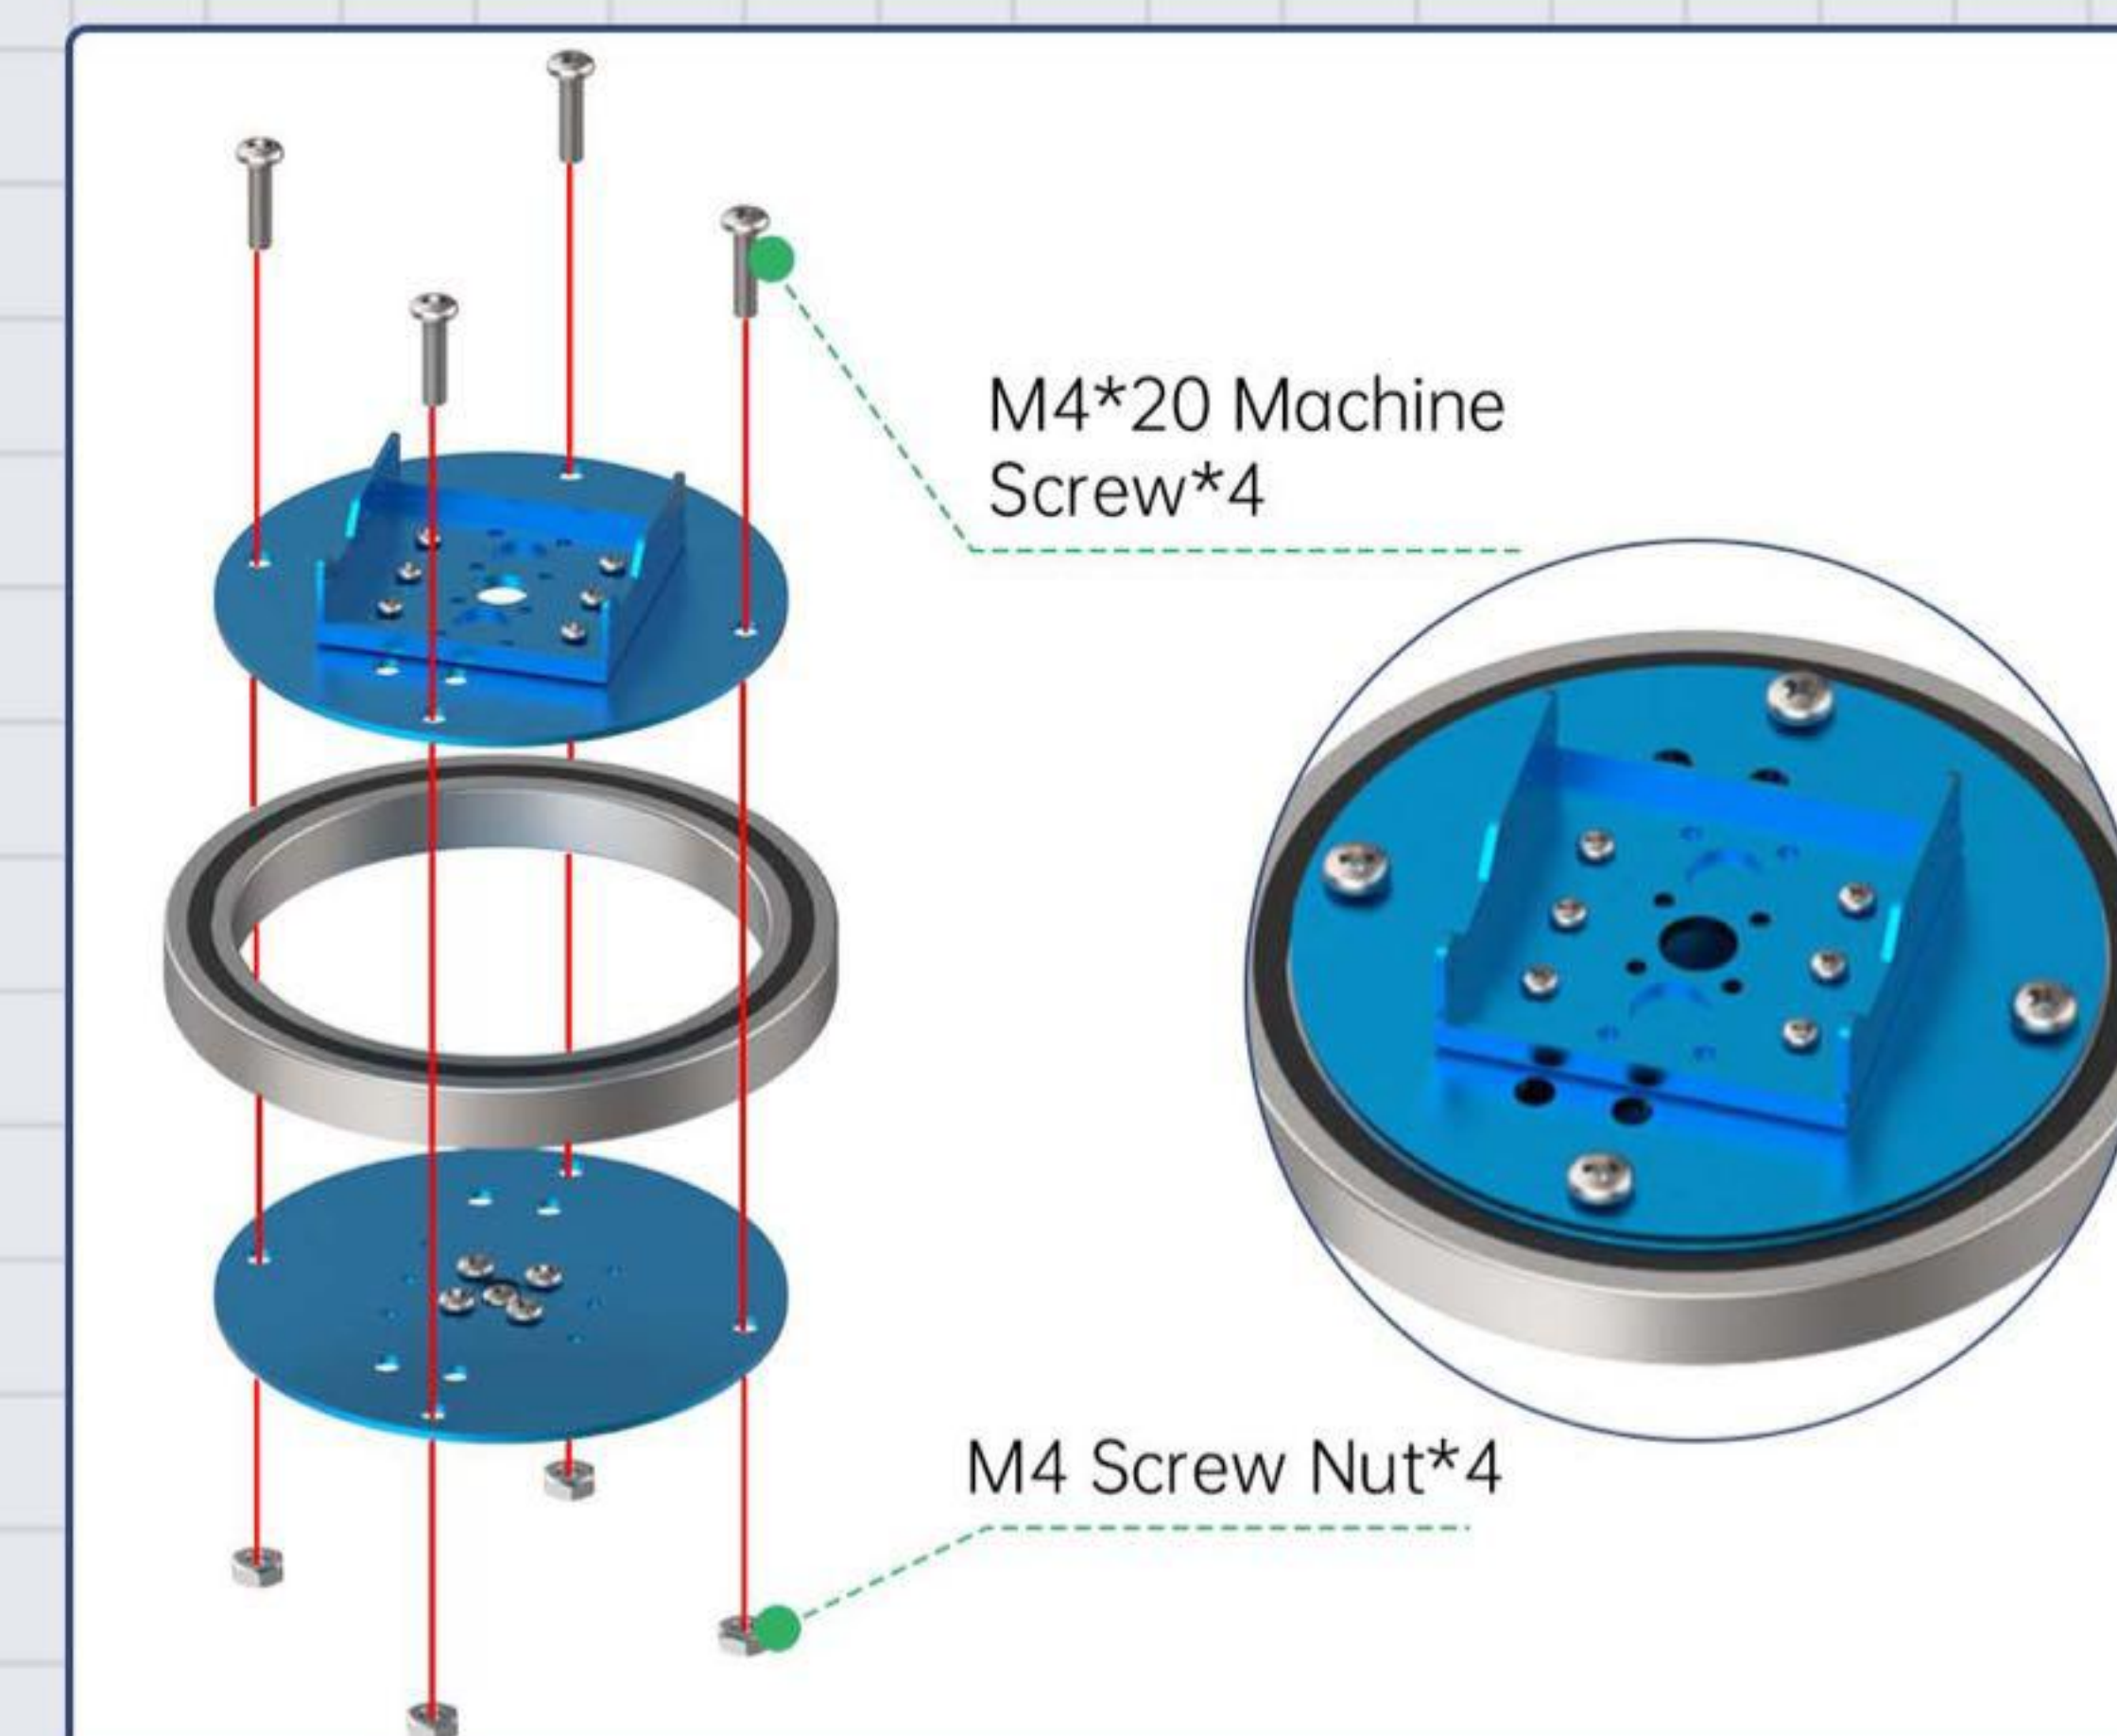


Step4

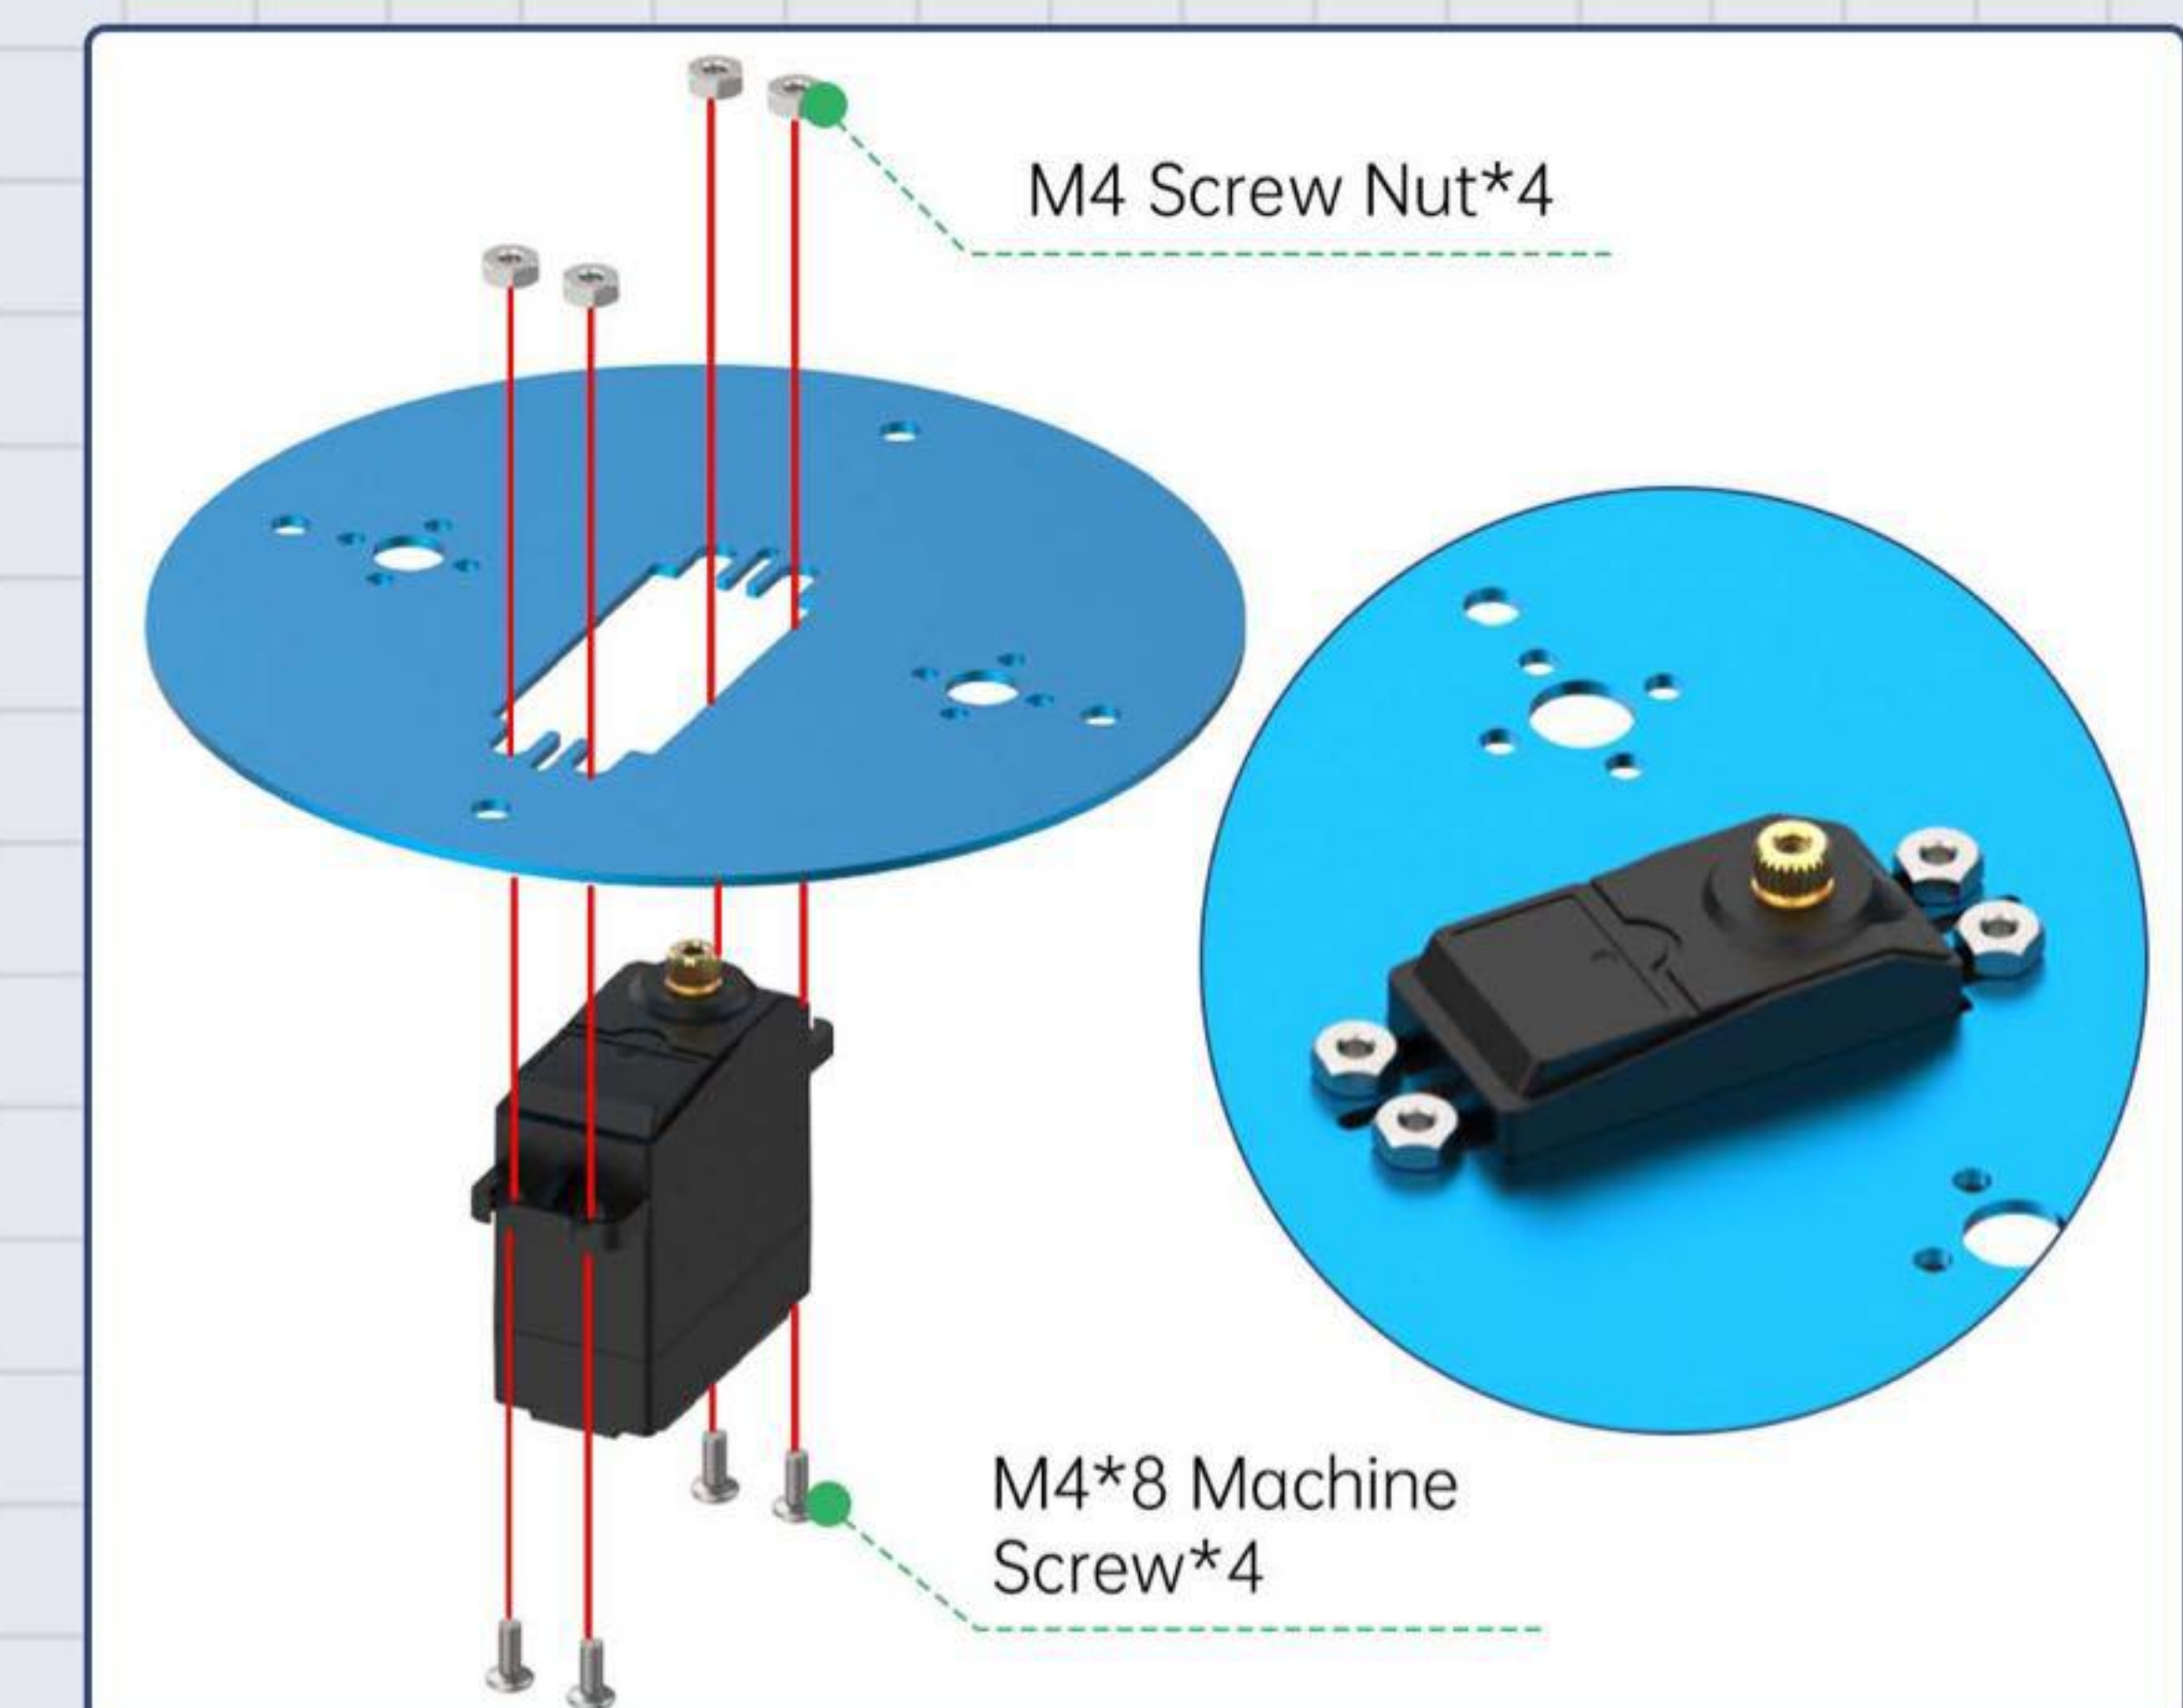


Step5

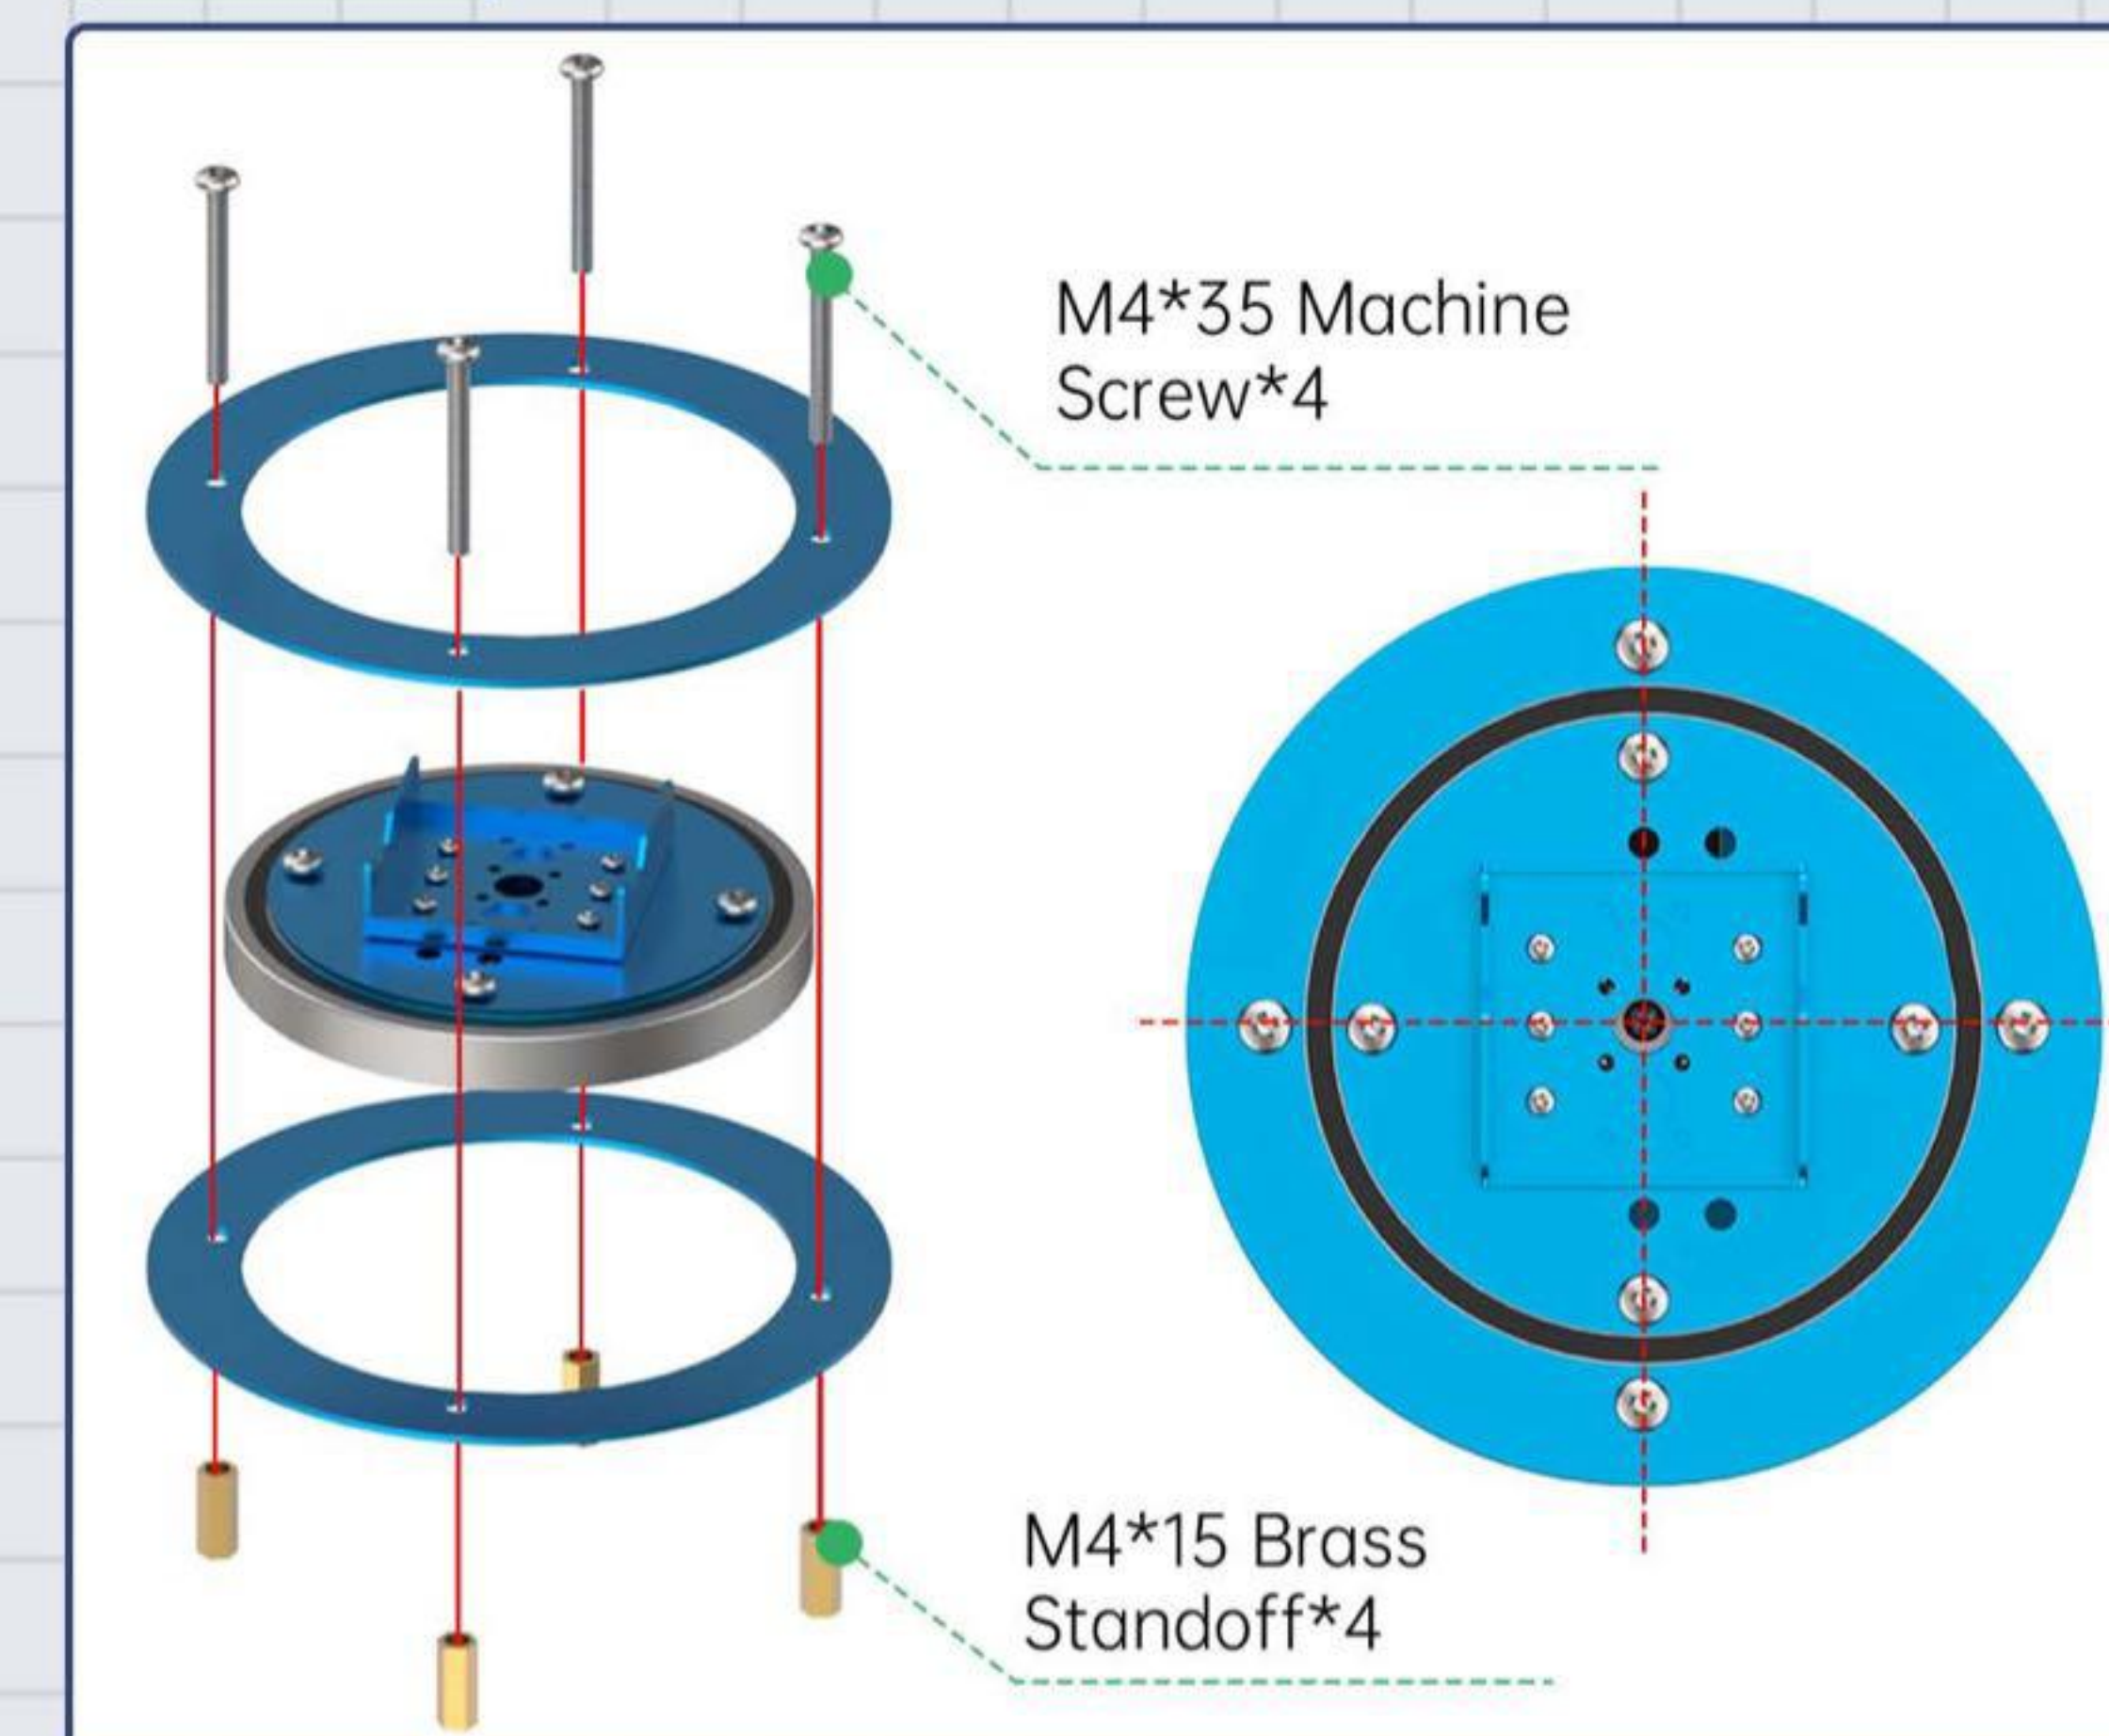

Step6

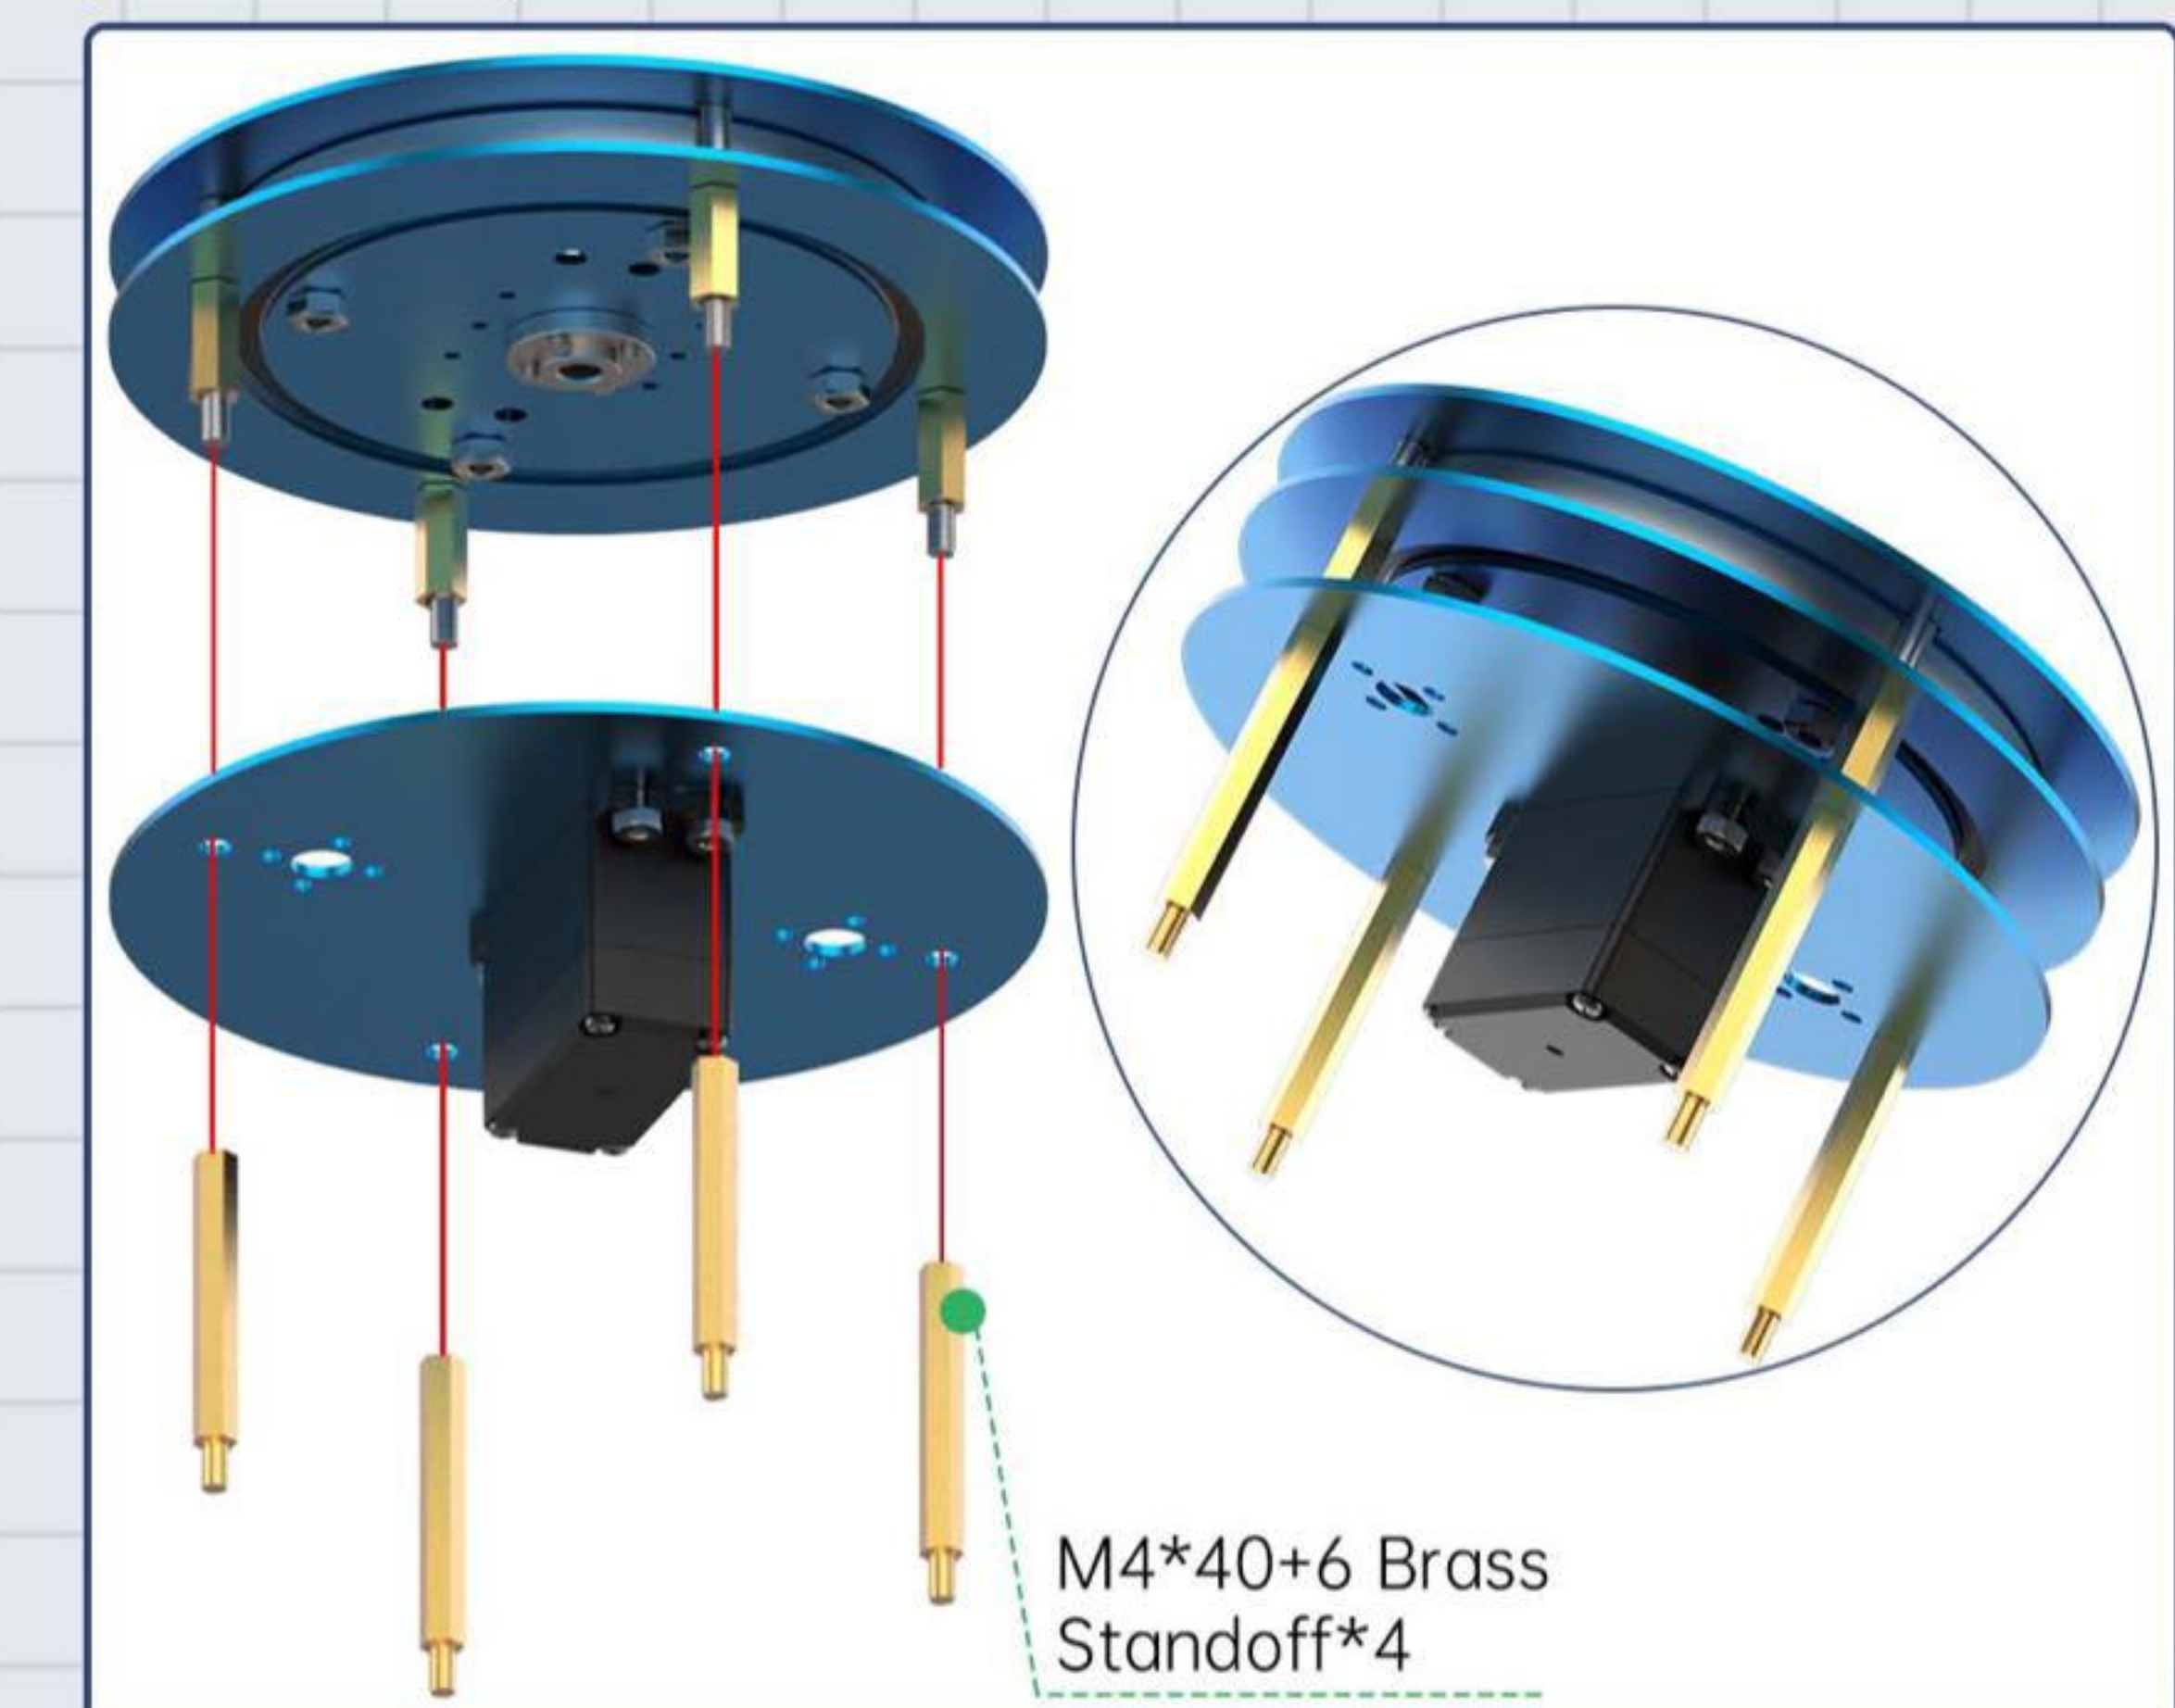


Step7

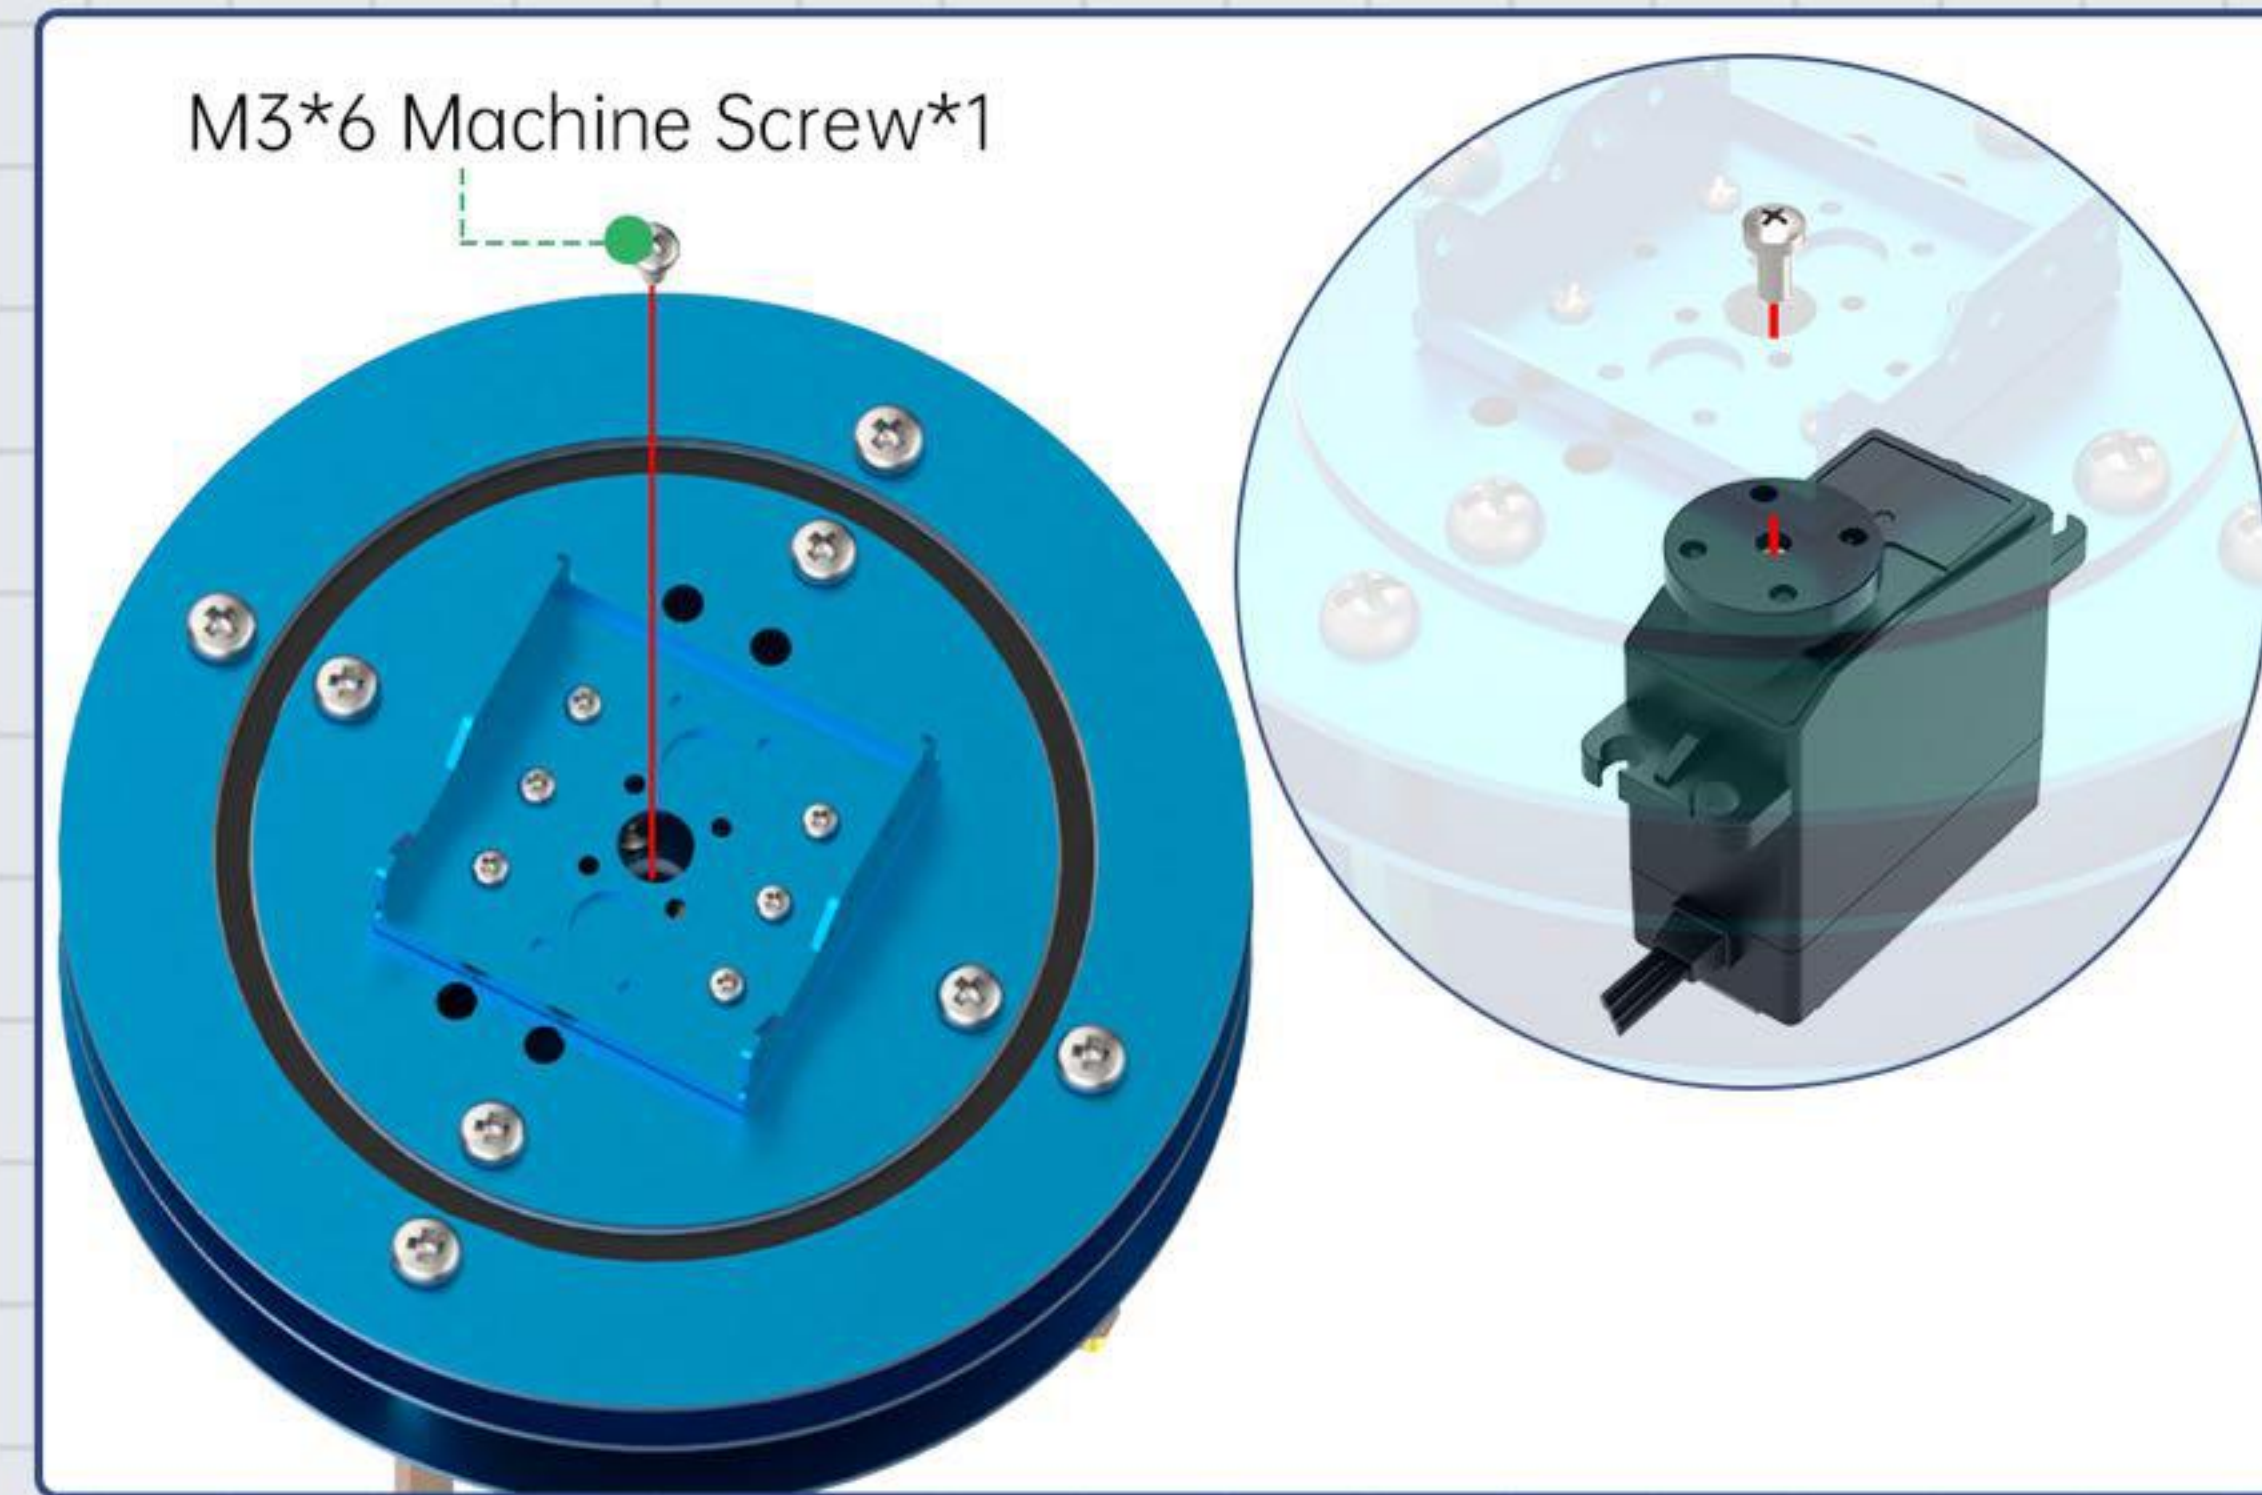

Step8




Step15

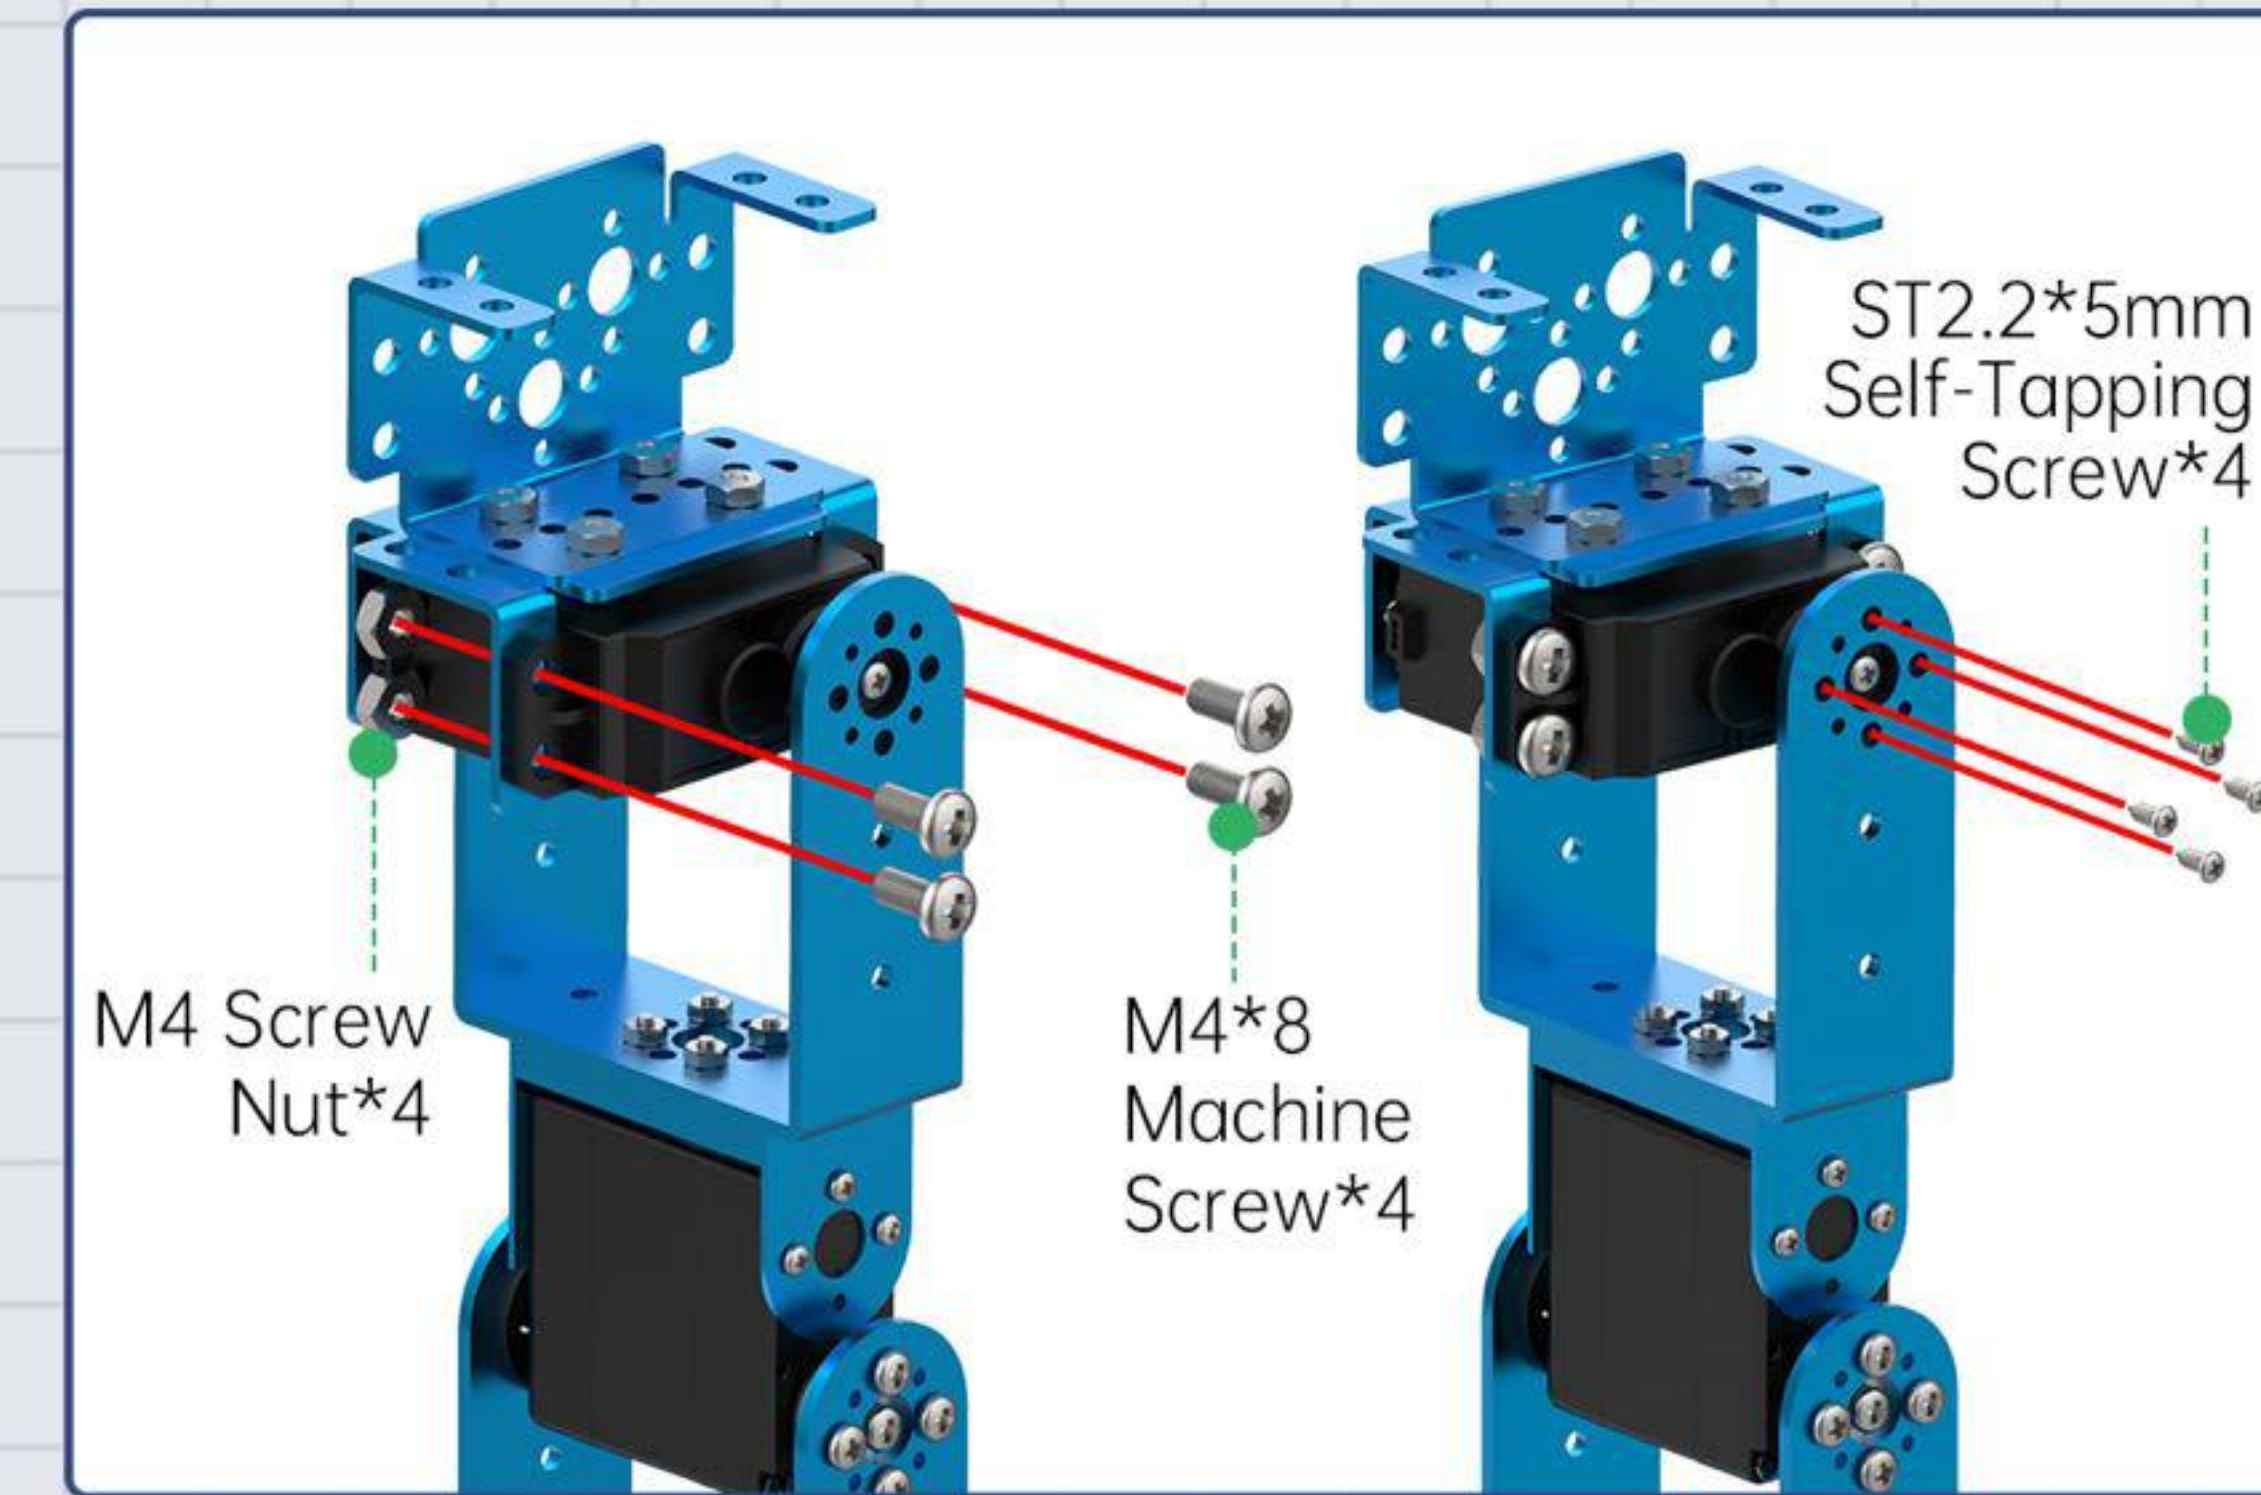


Step16



Step9

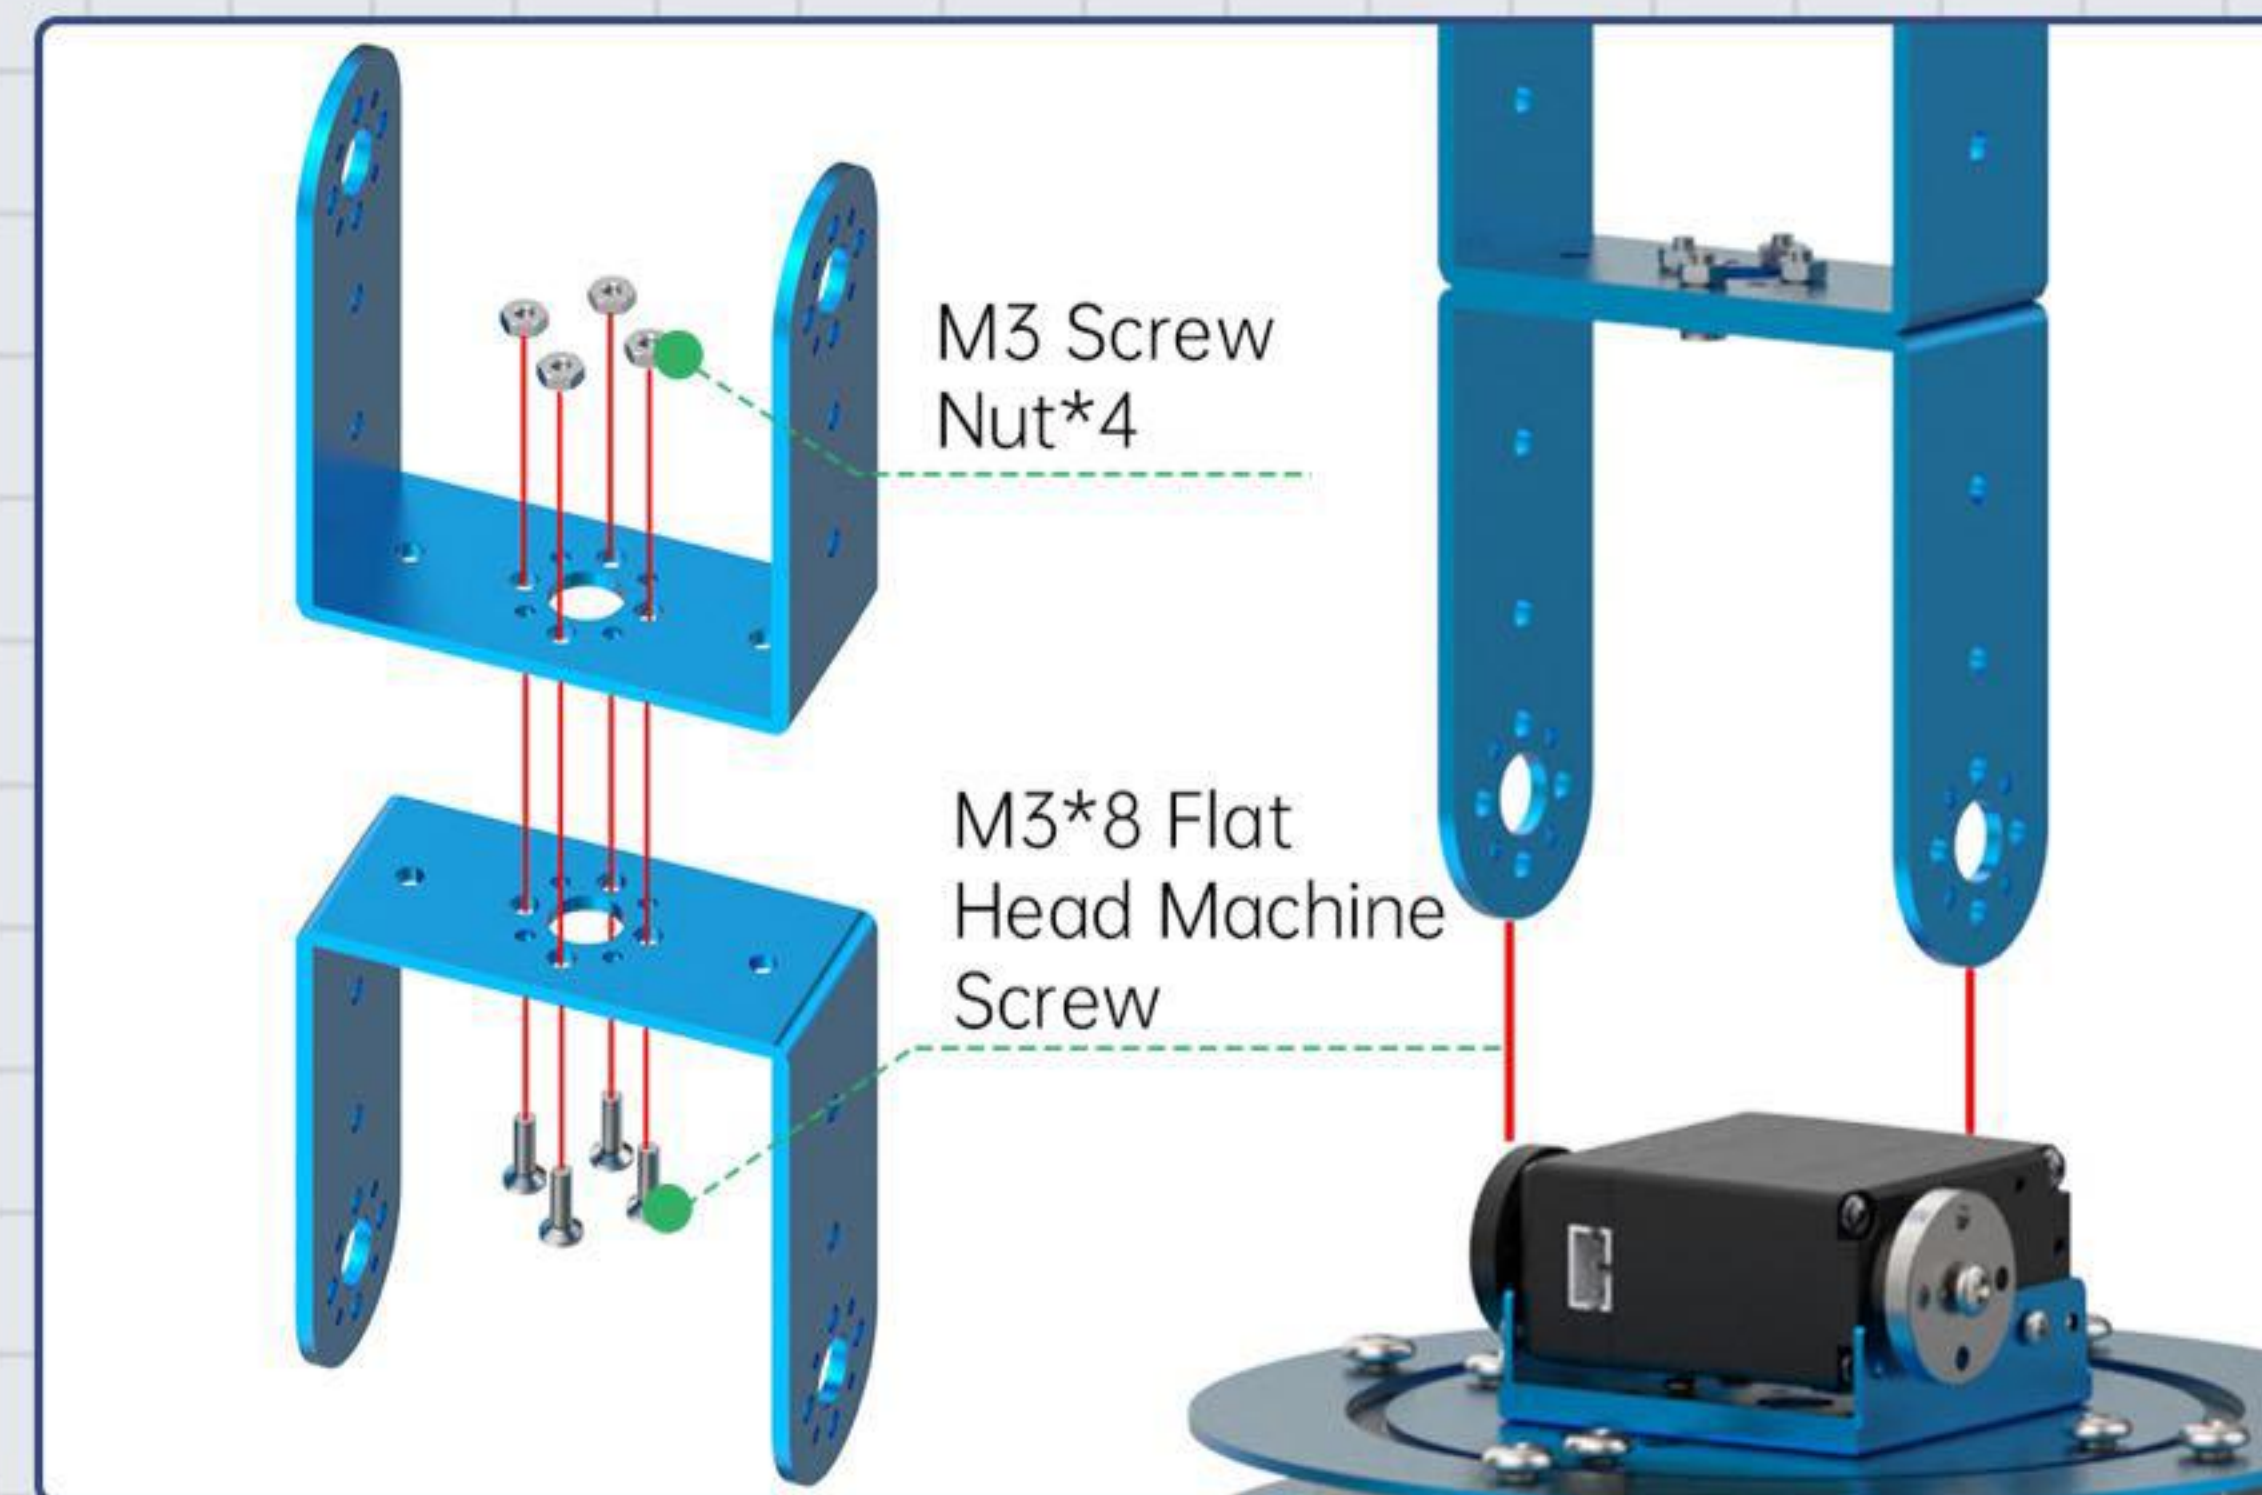


Step10

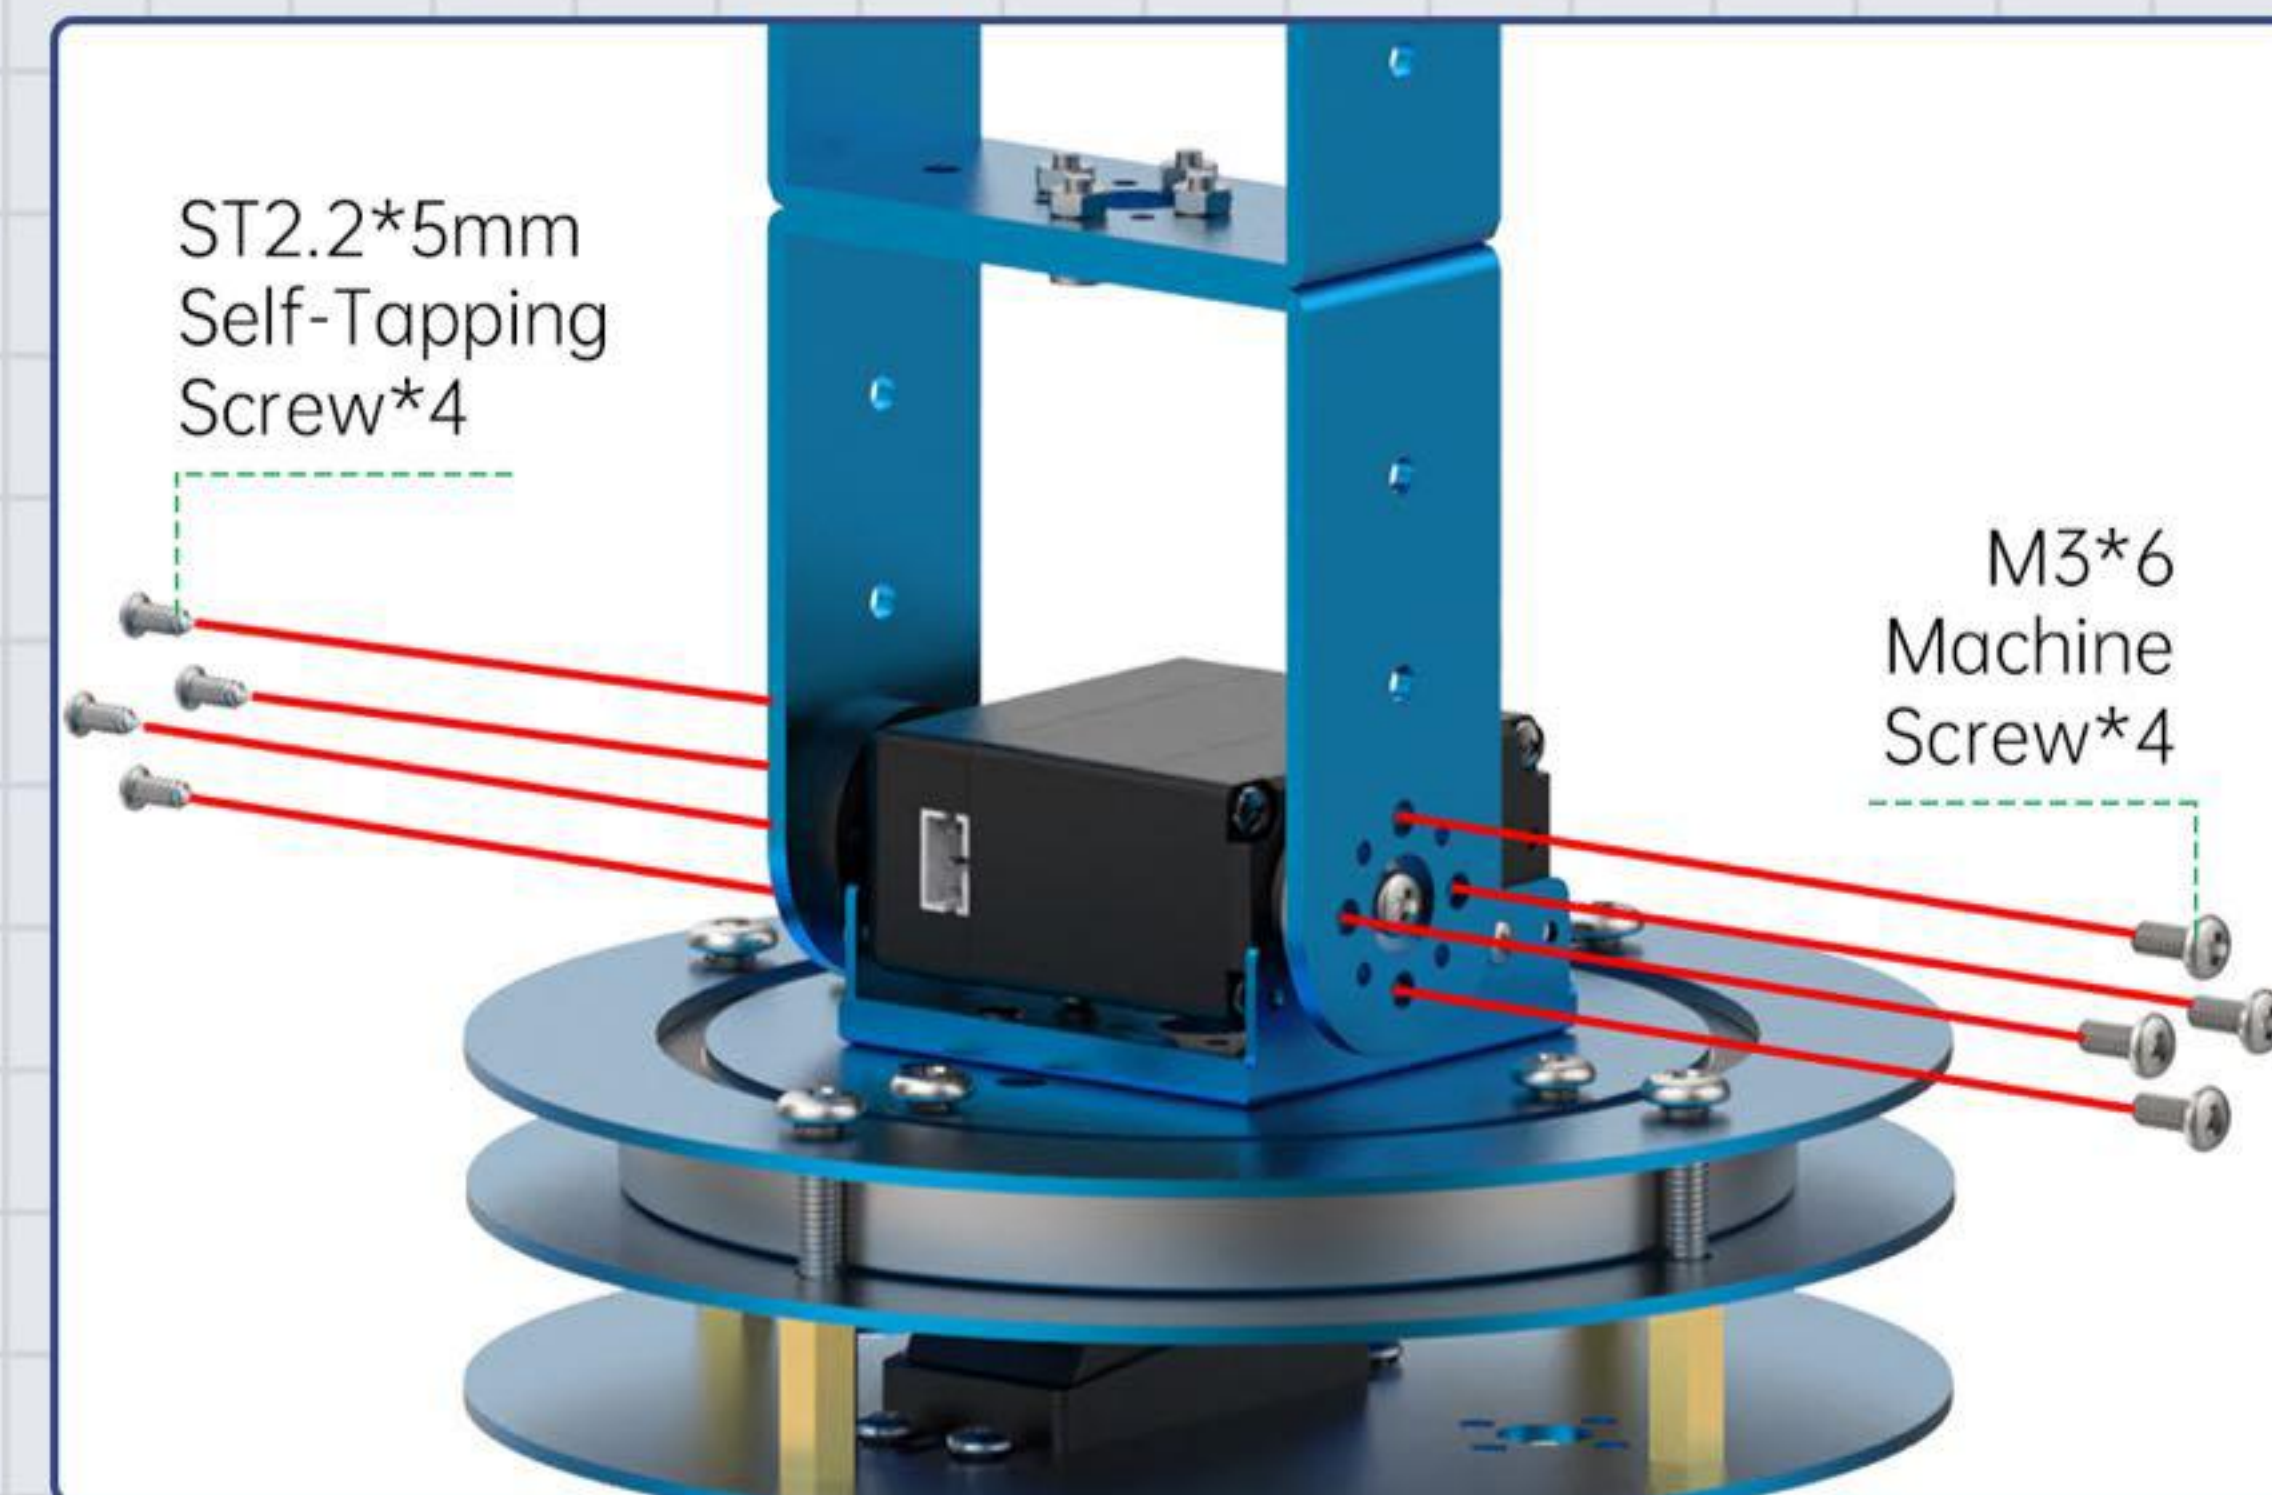


Step17




Step18

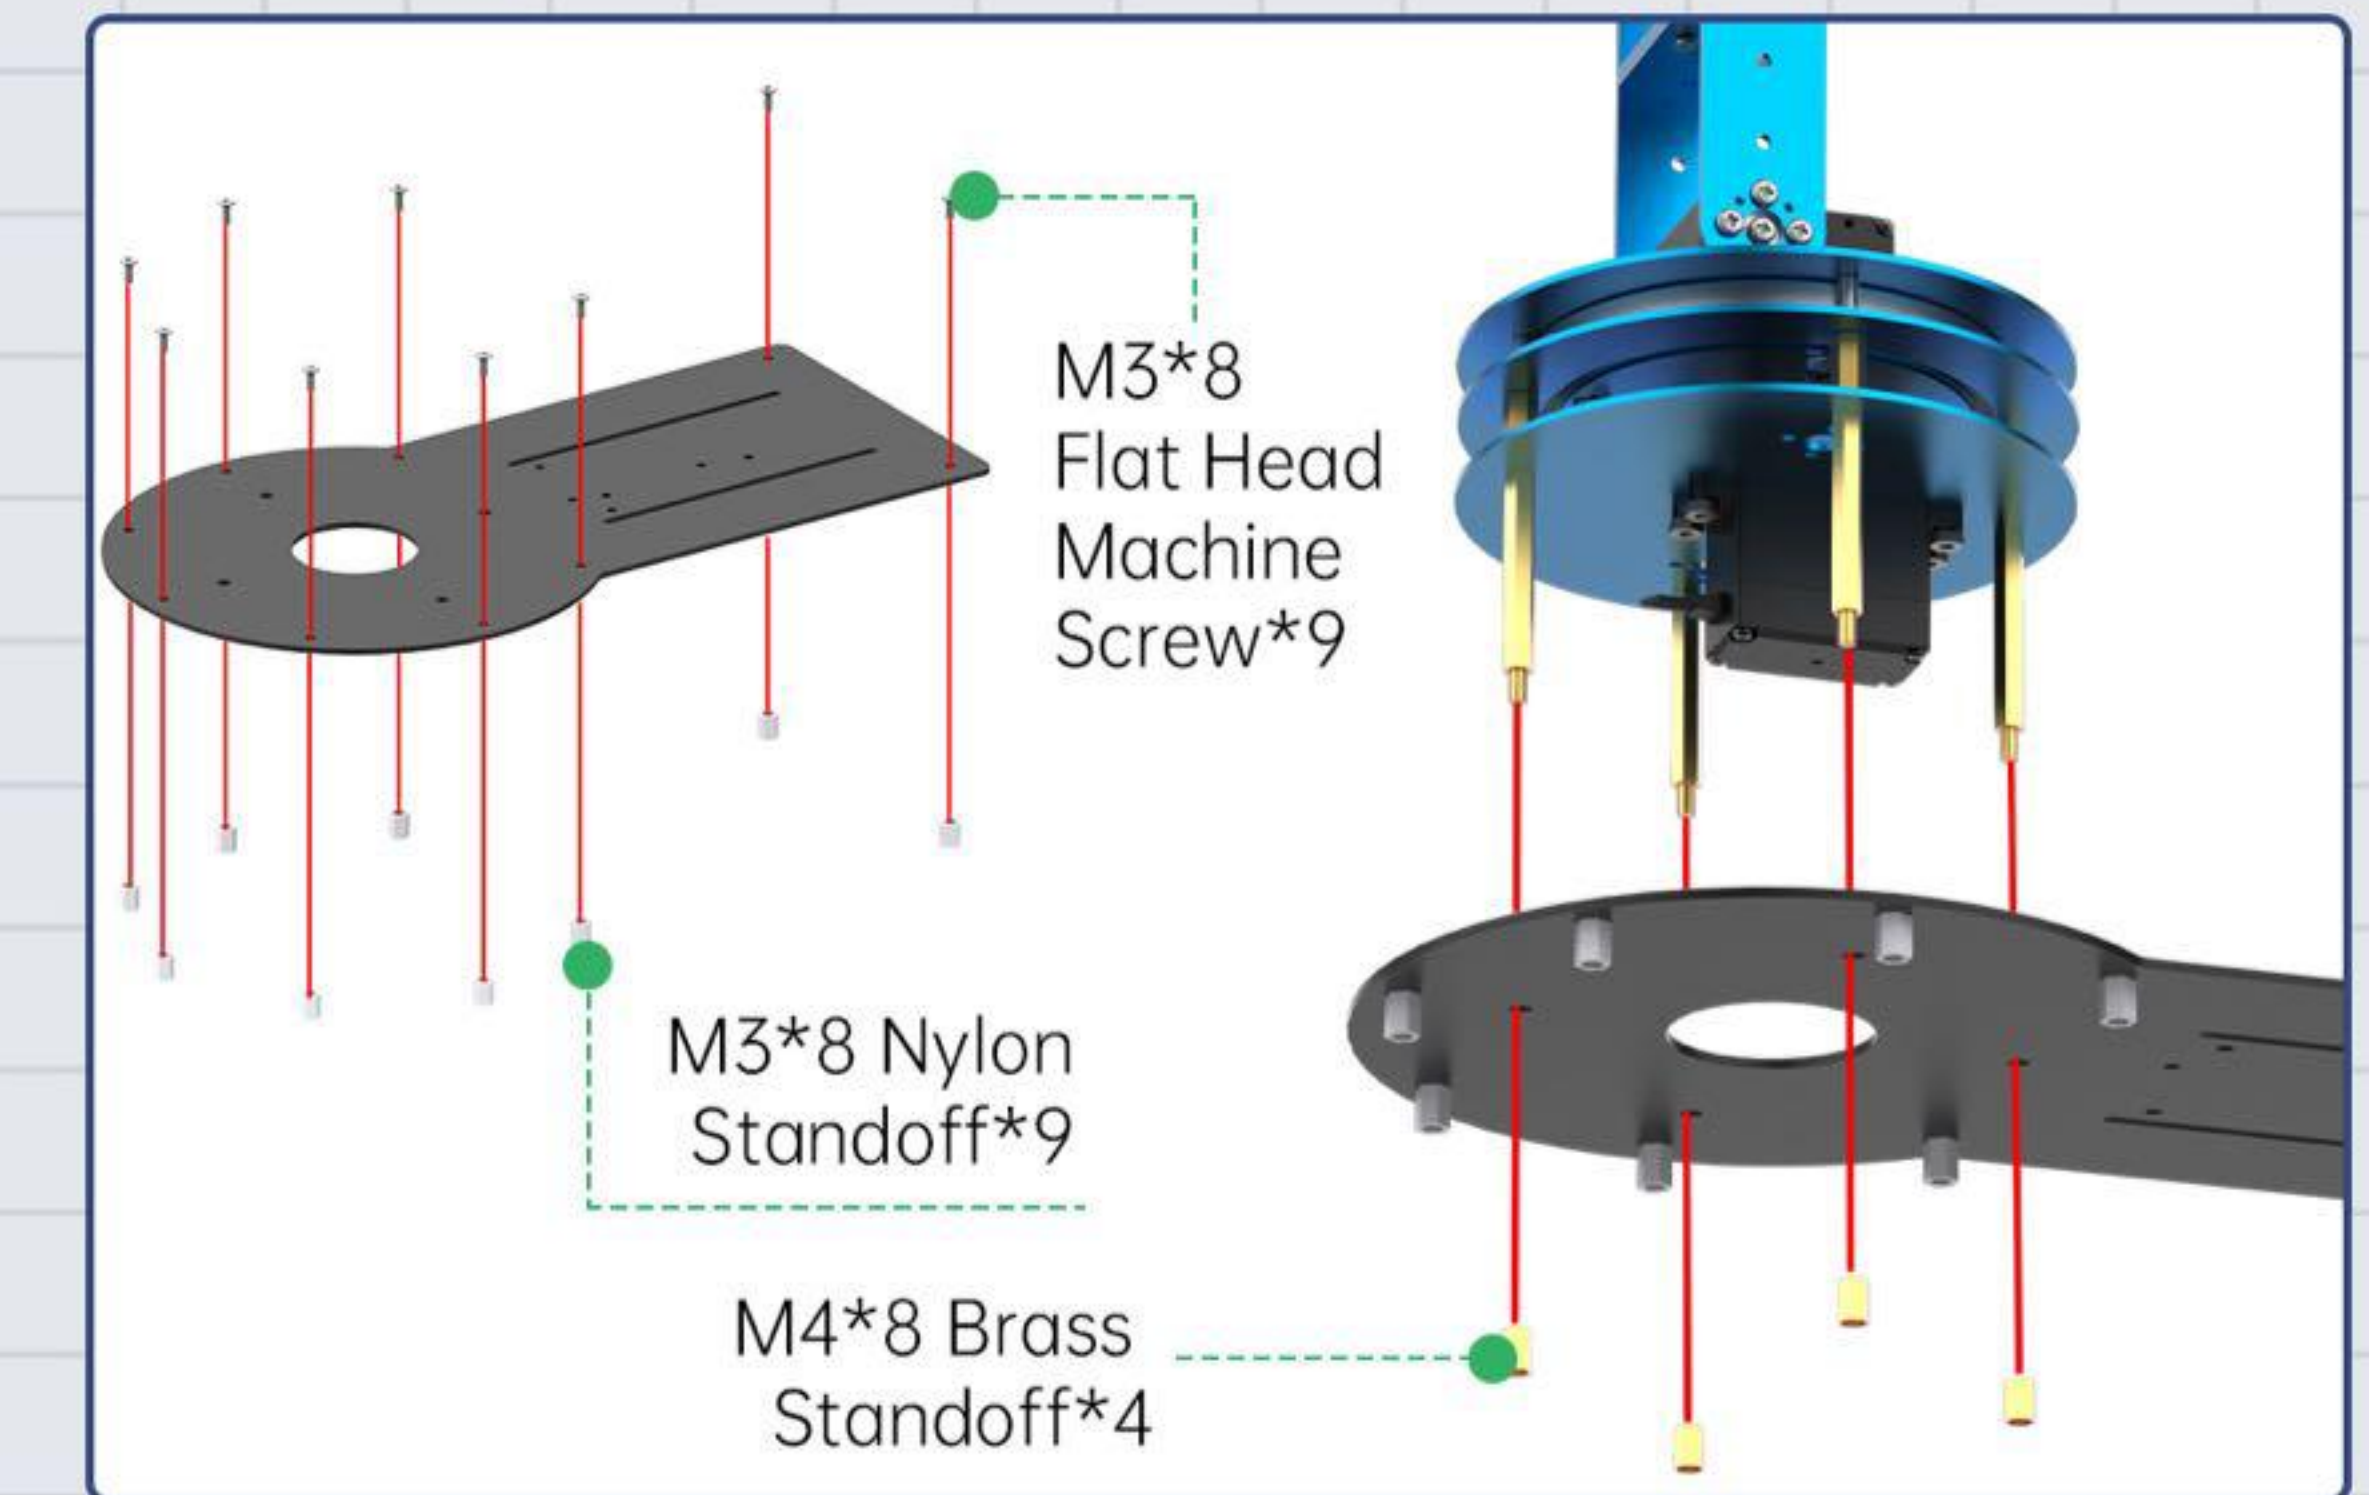


Step11

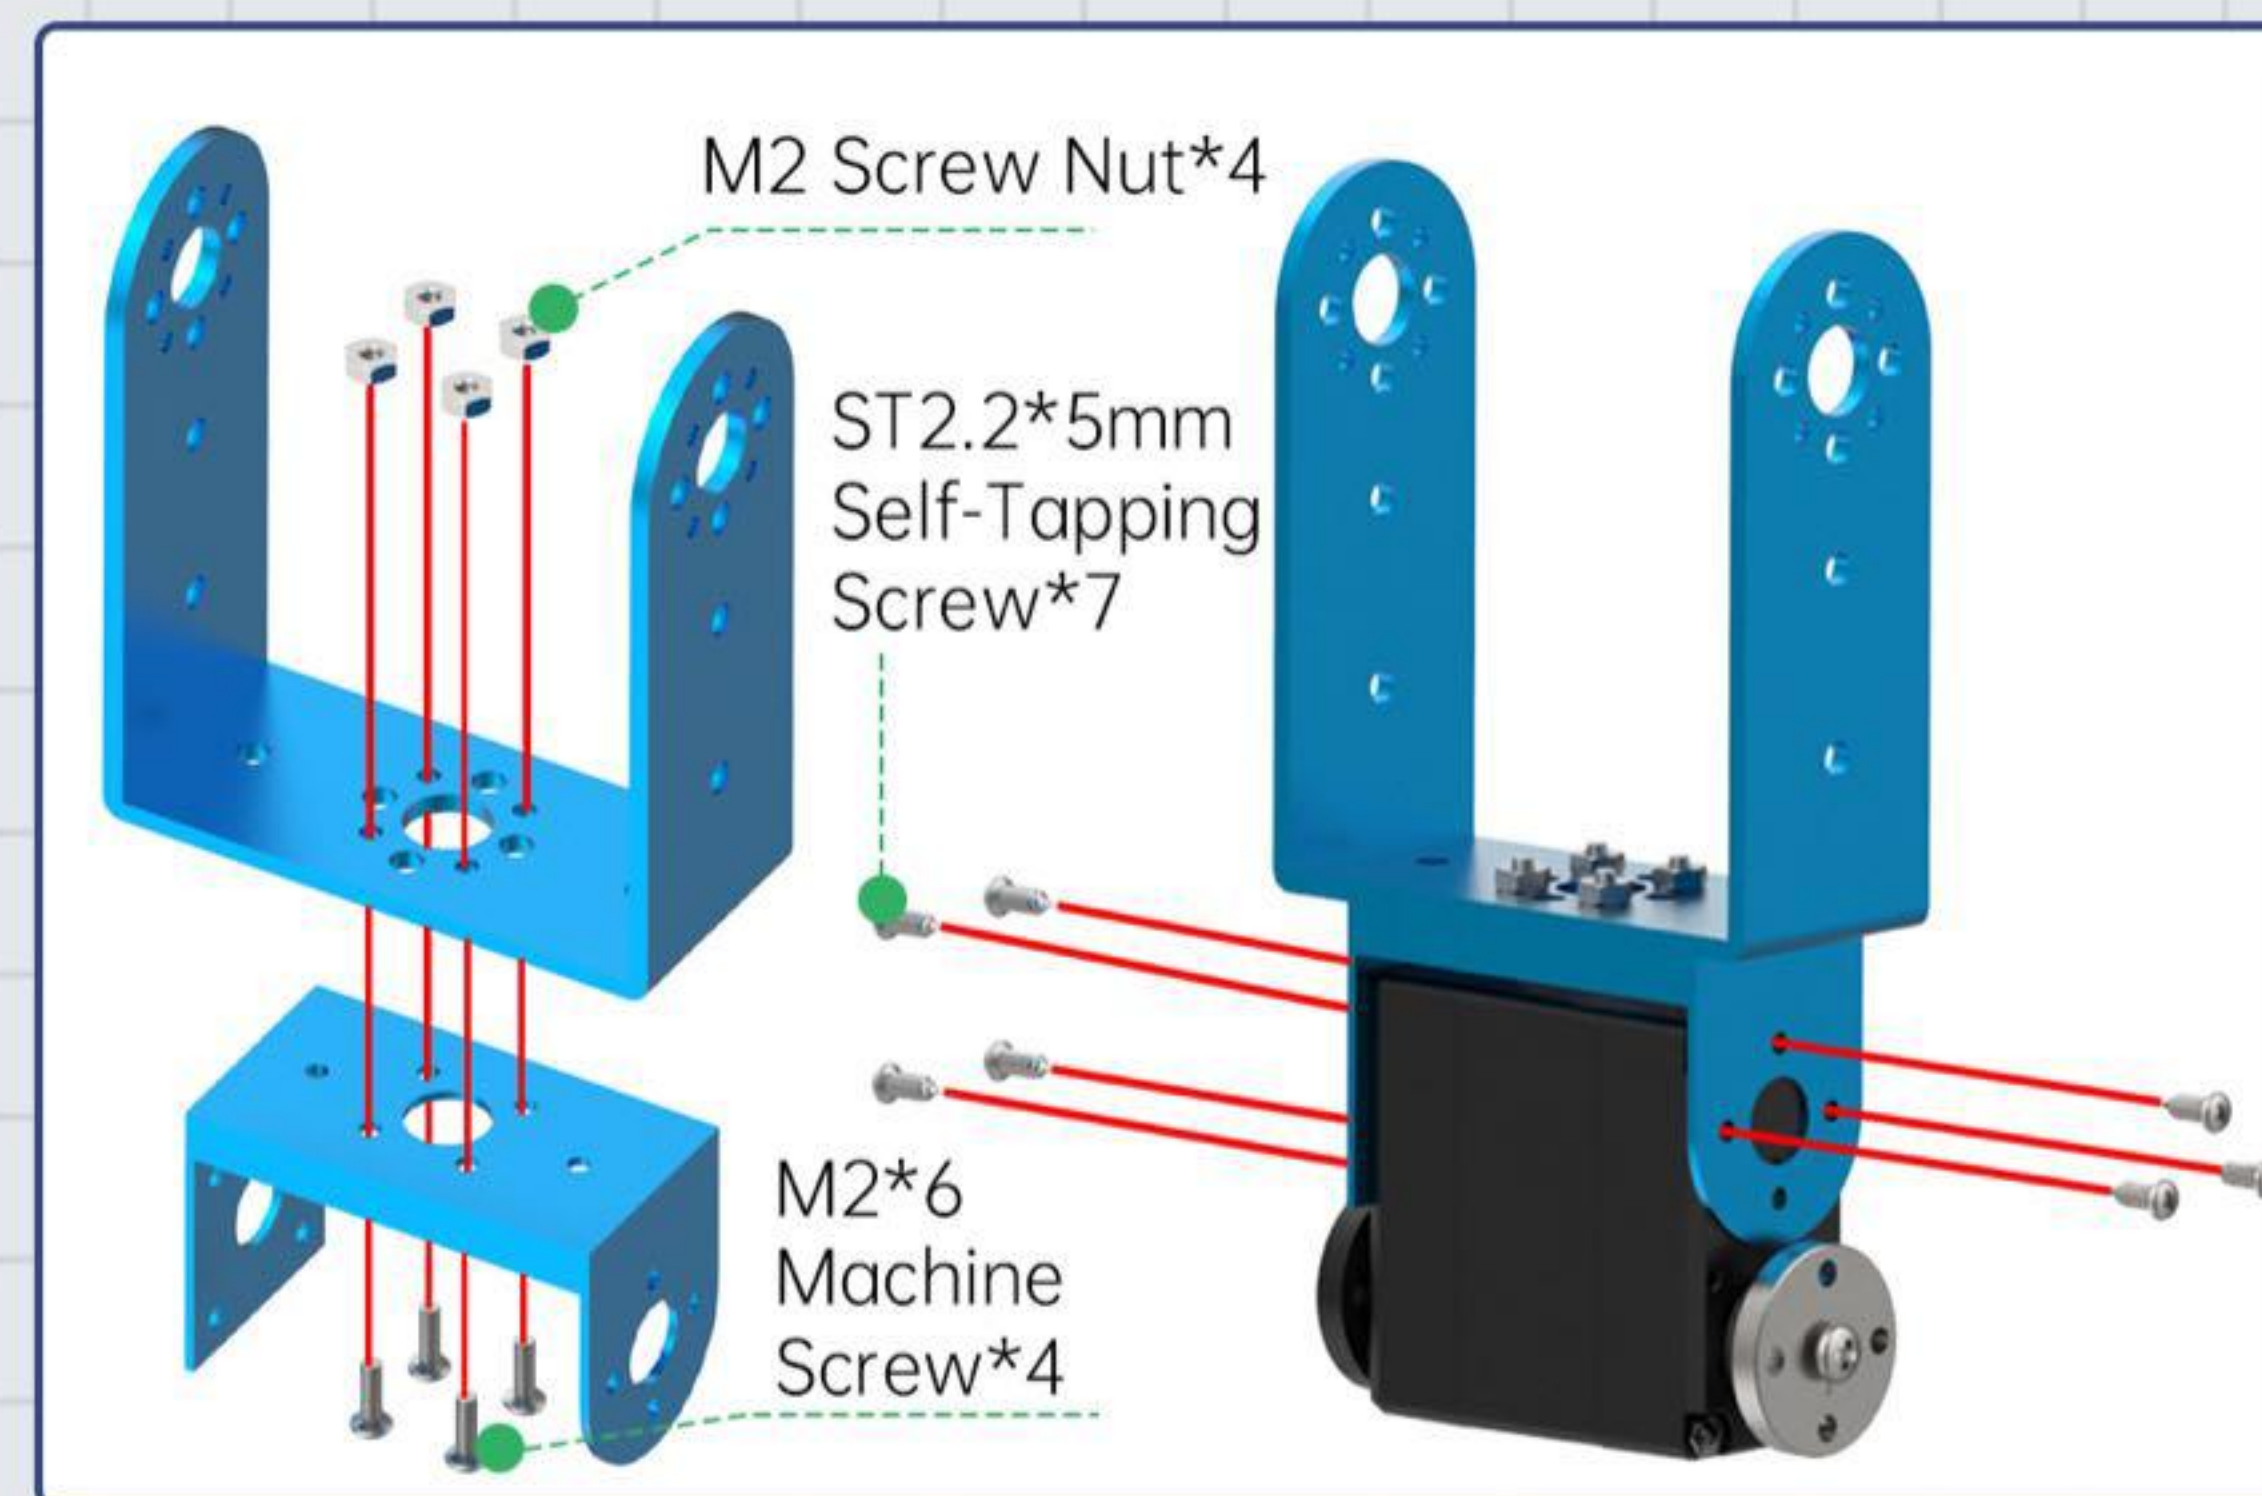


Step12

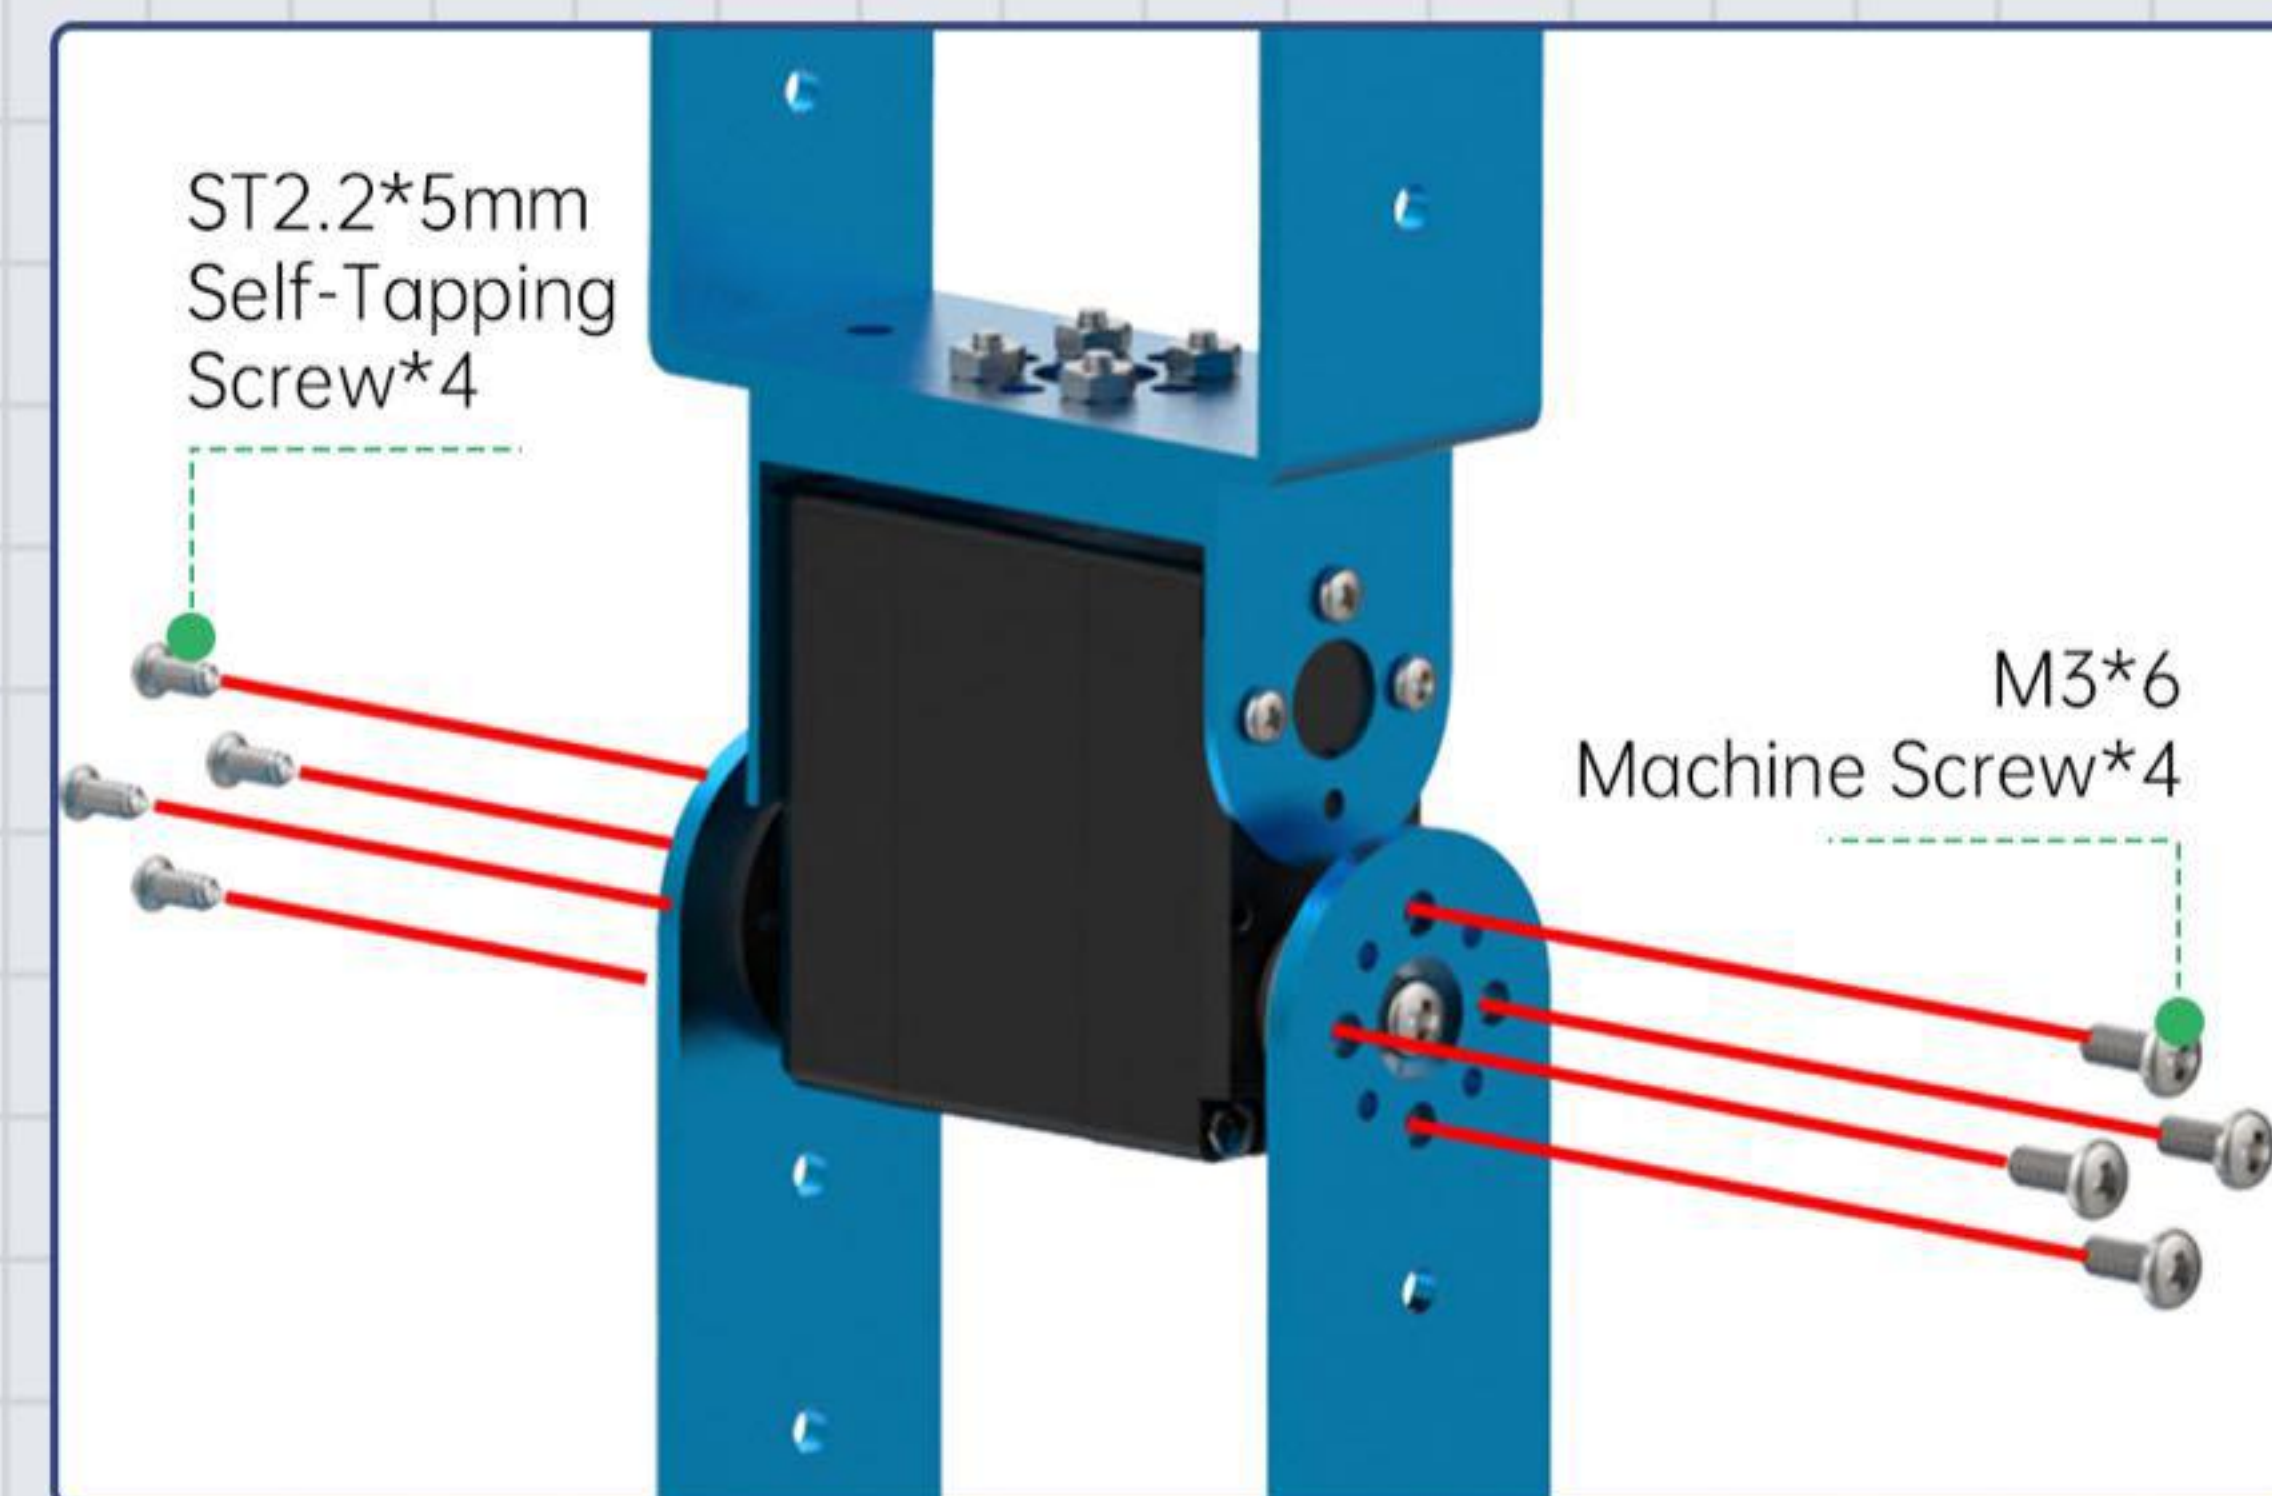


Step19

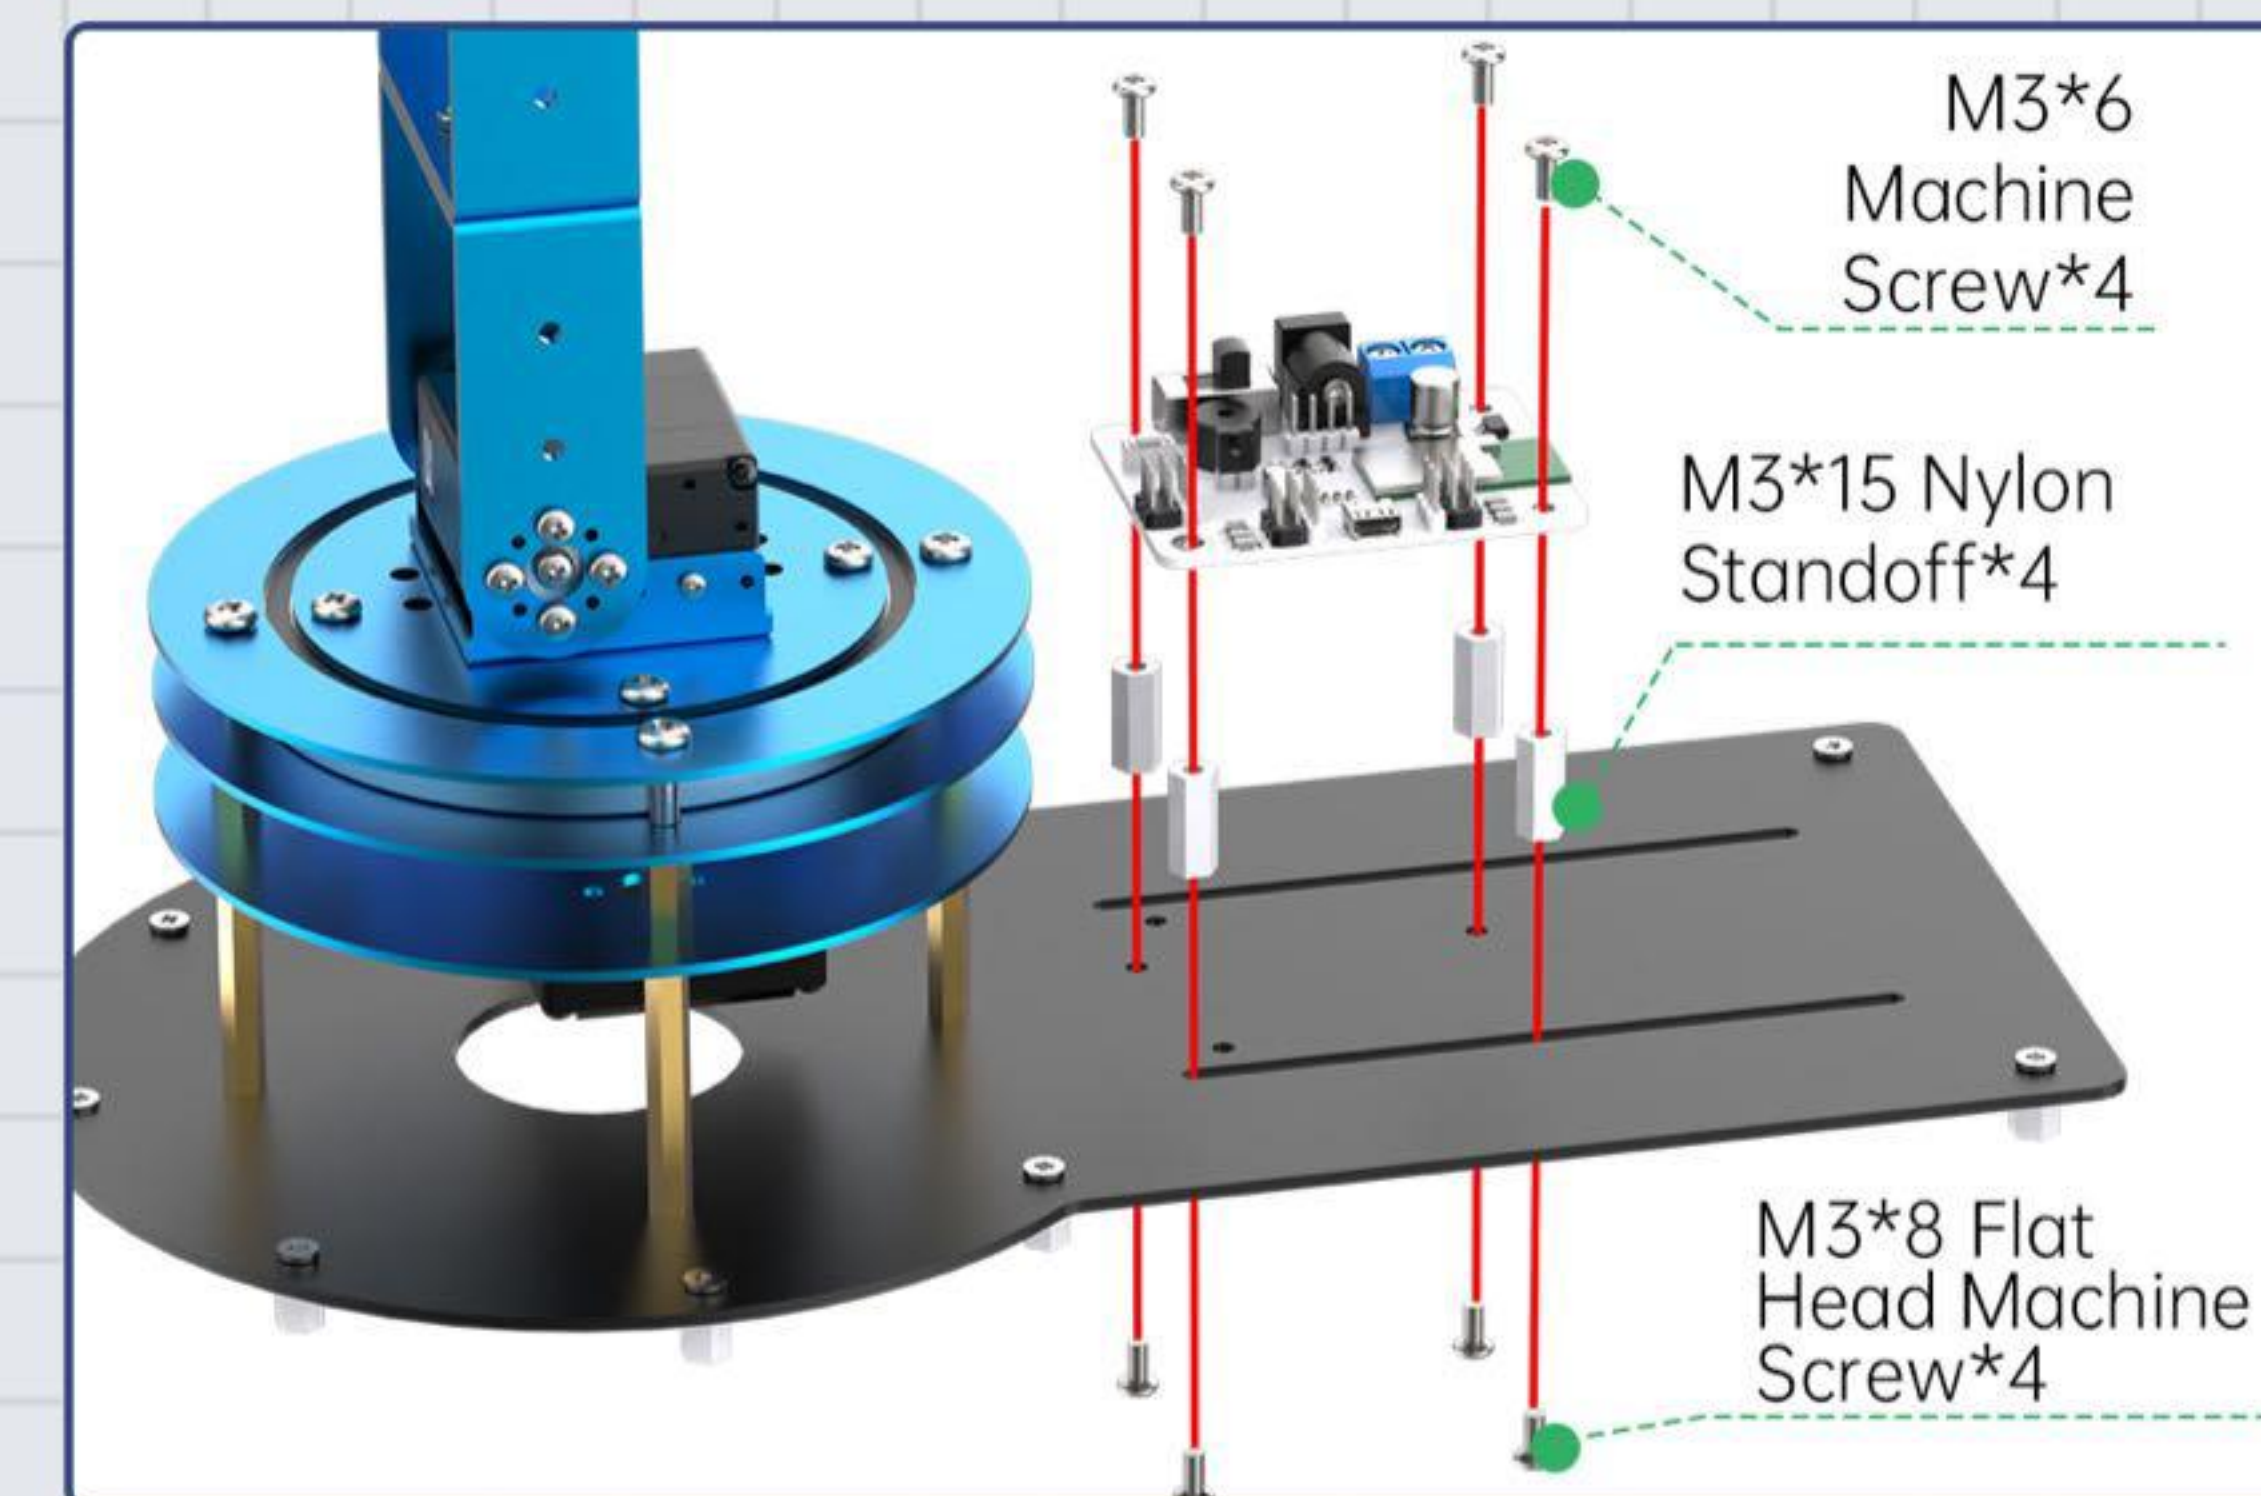


Step20

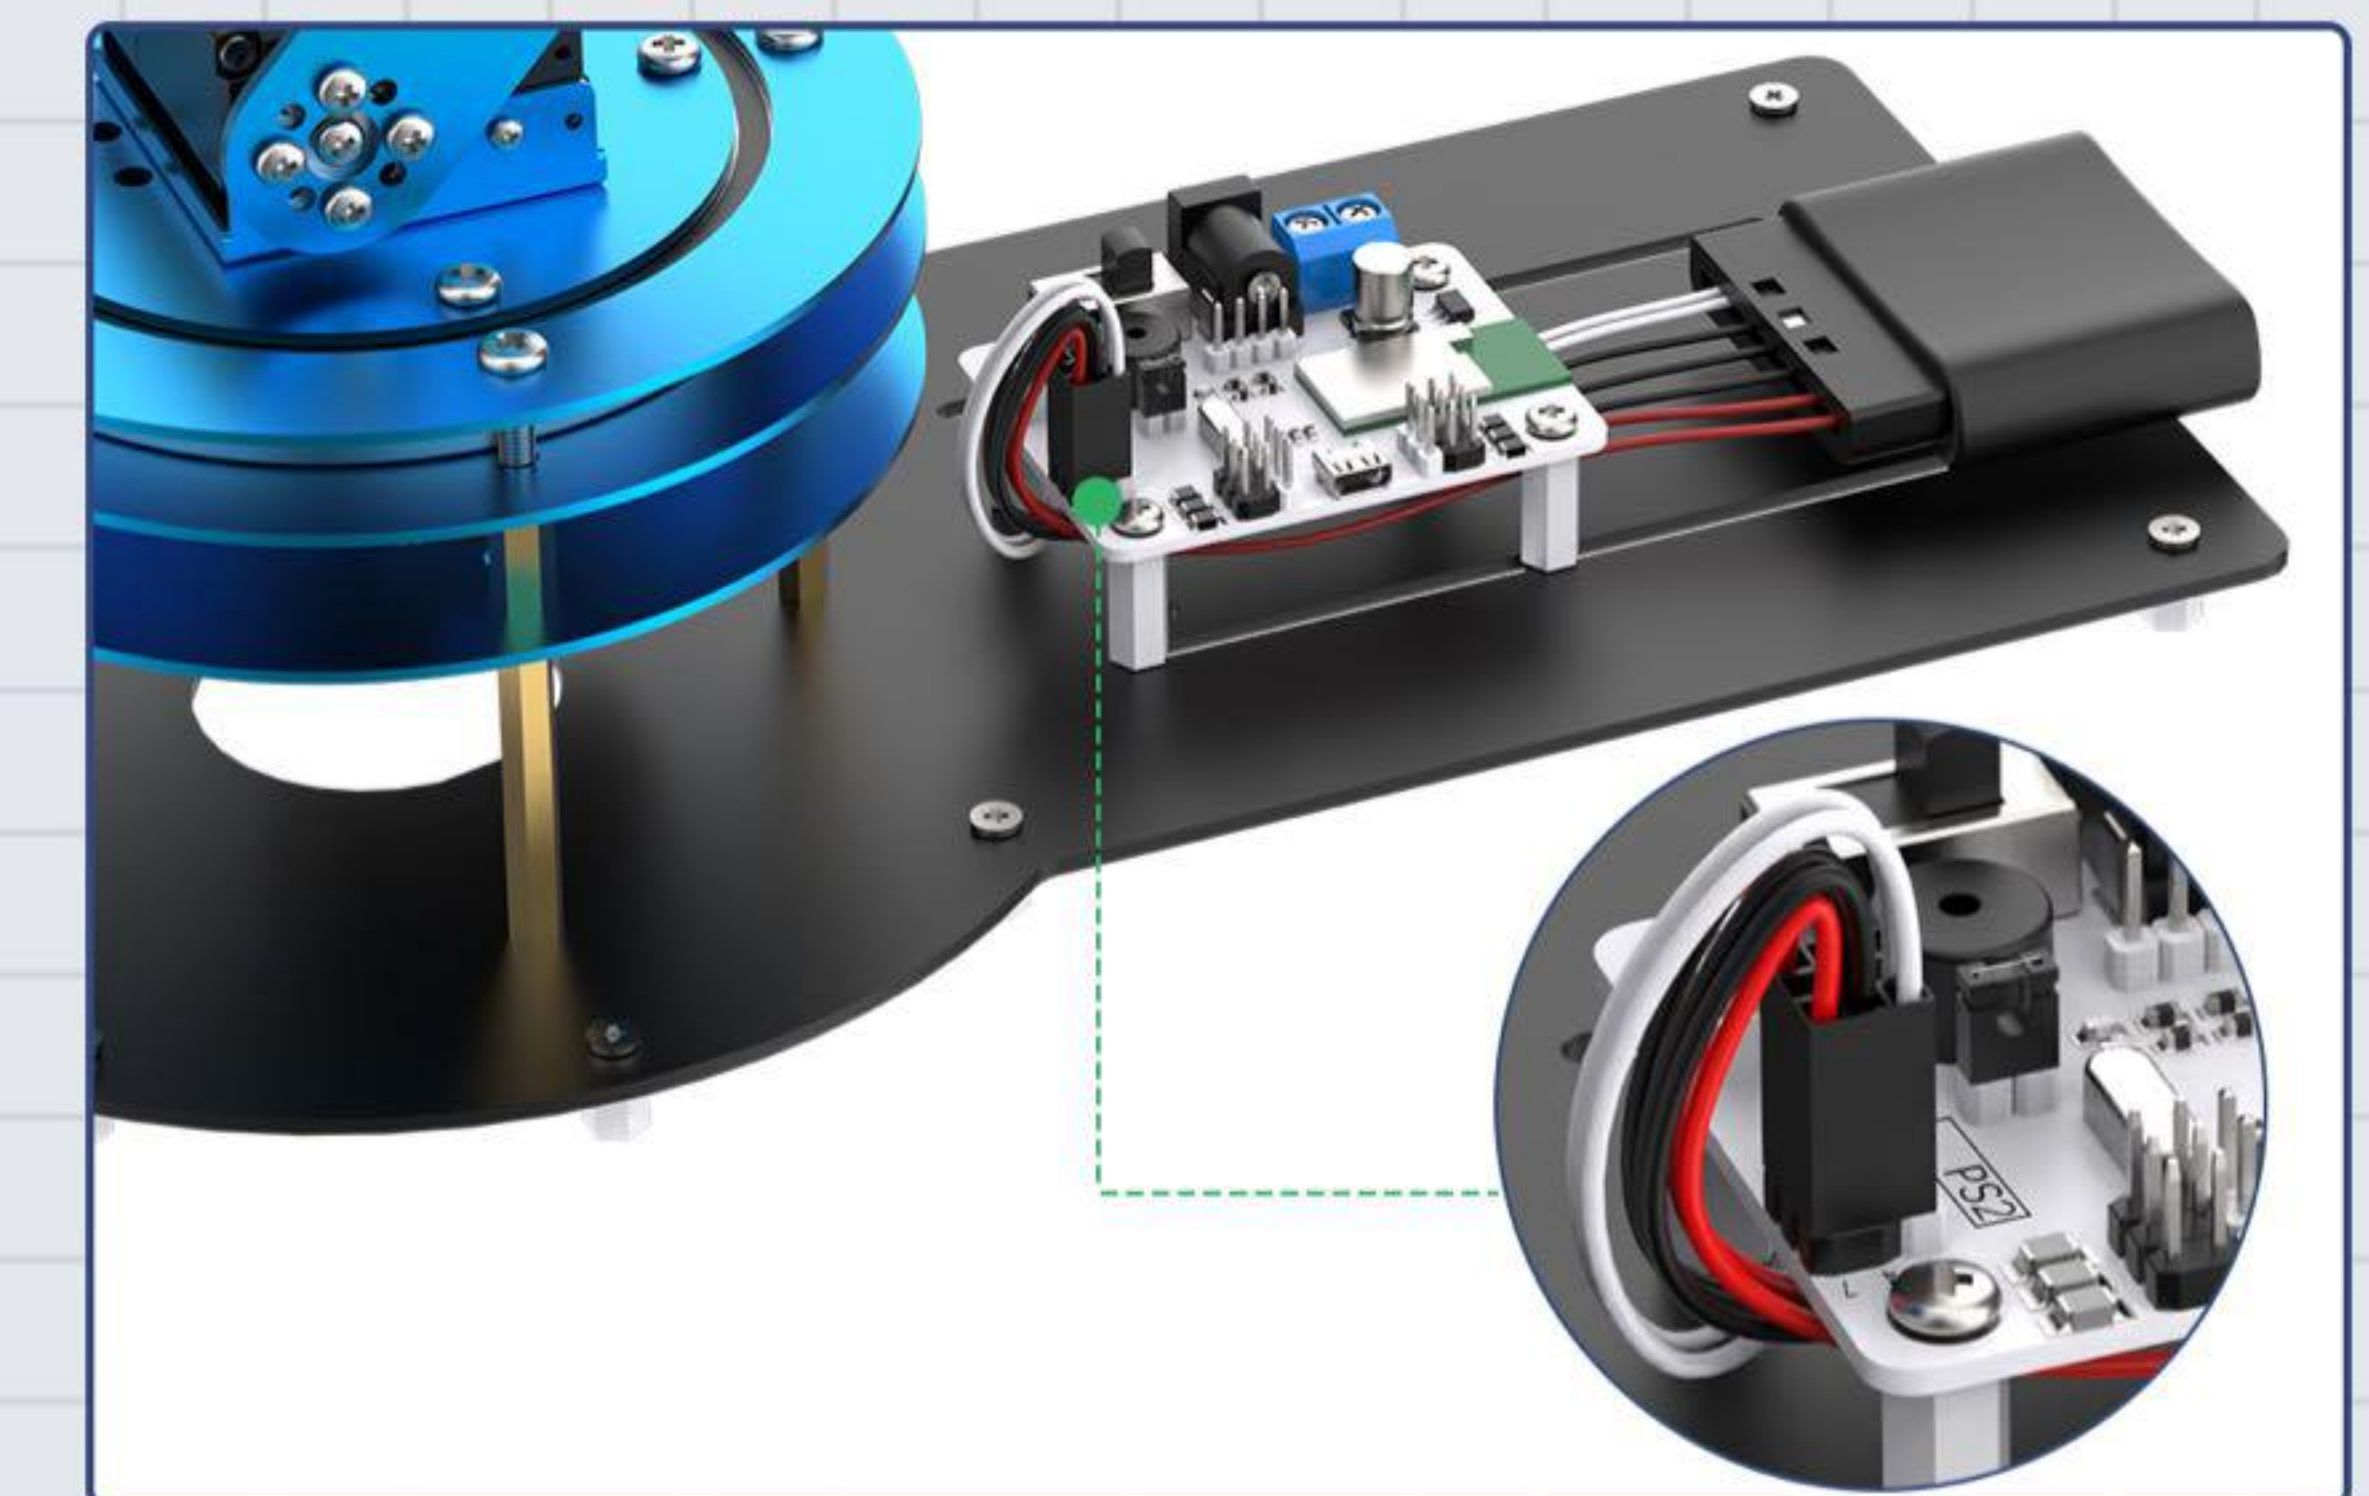


Step13

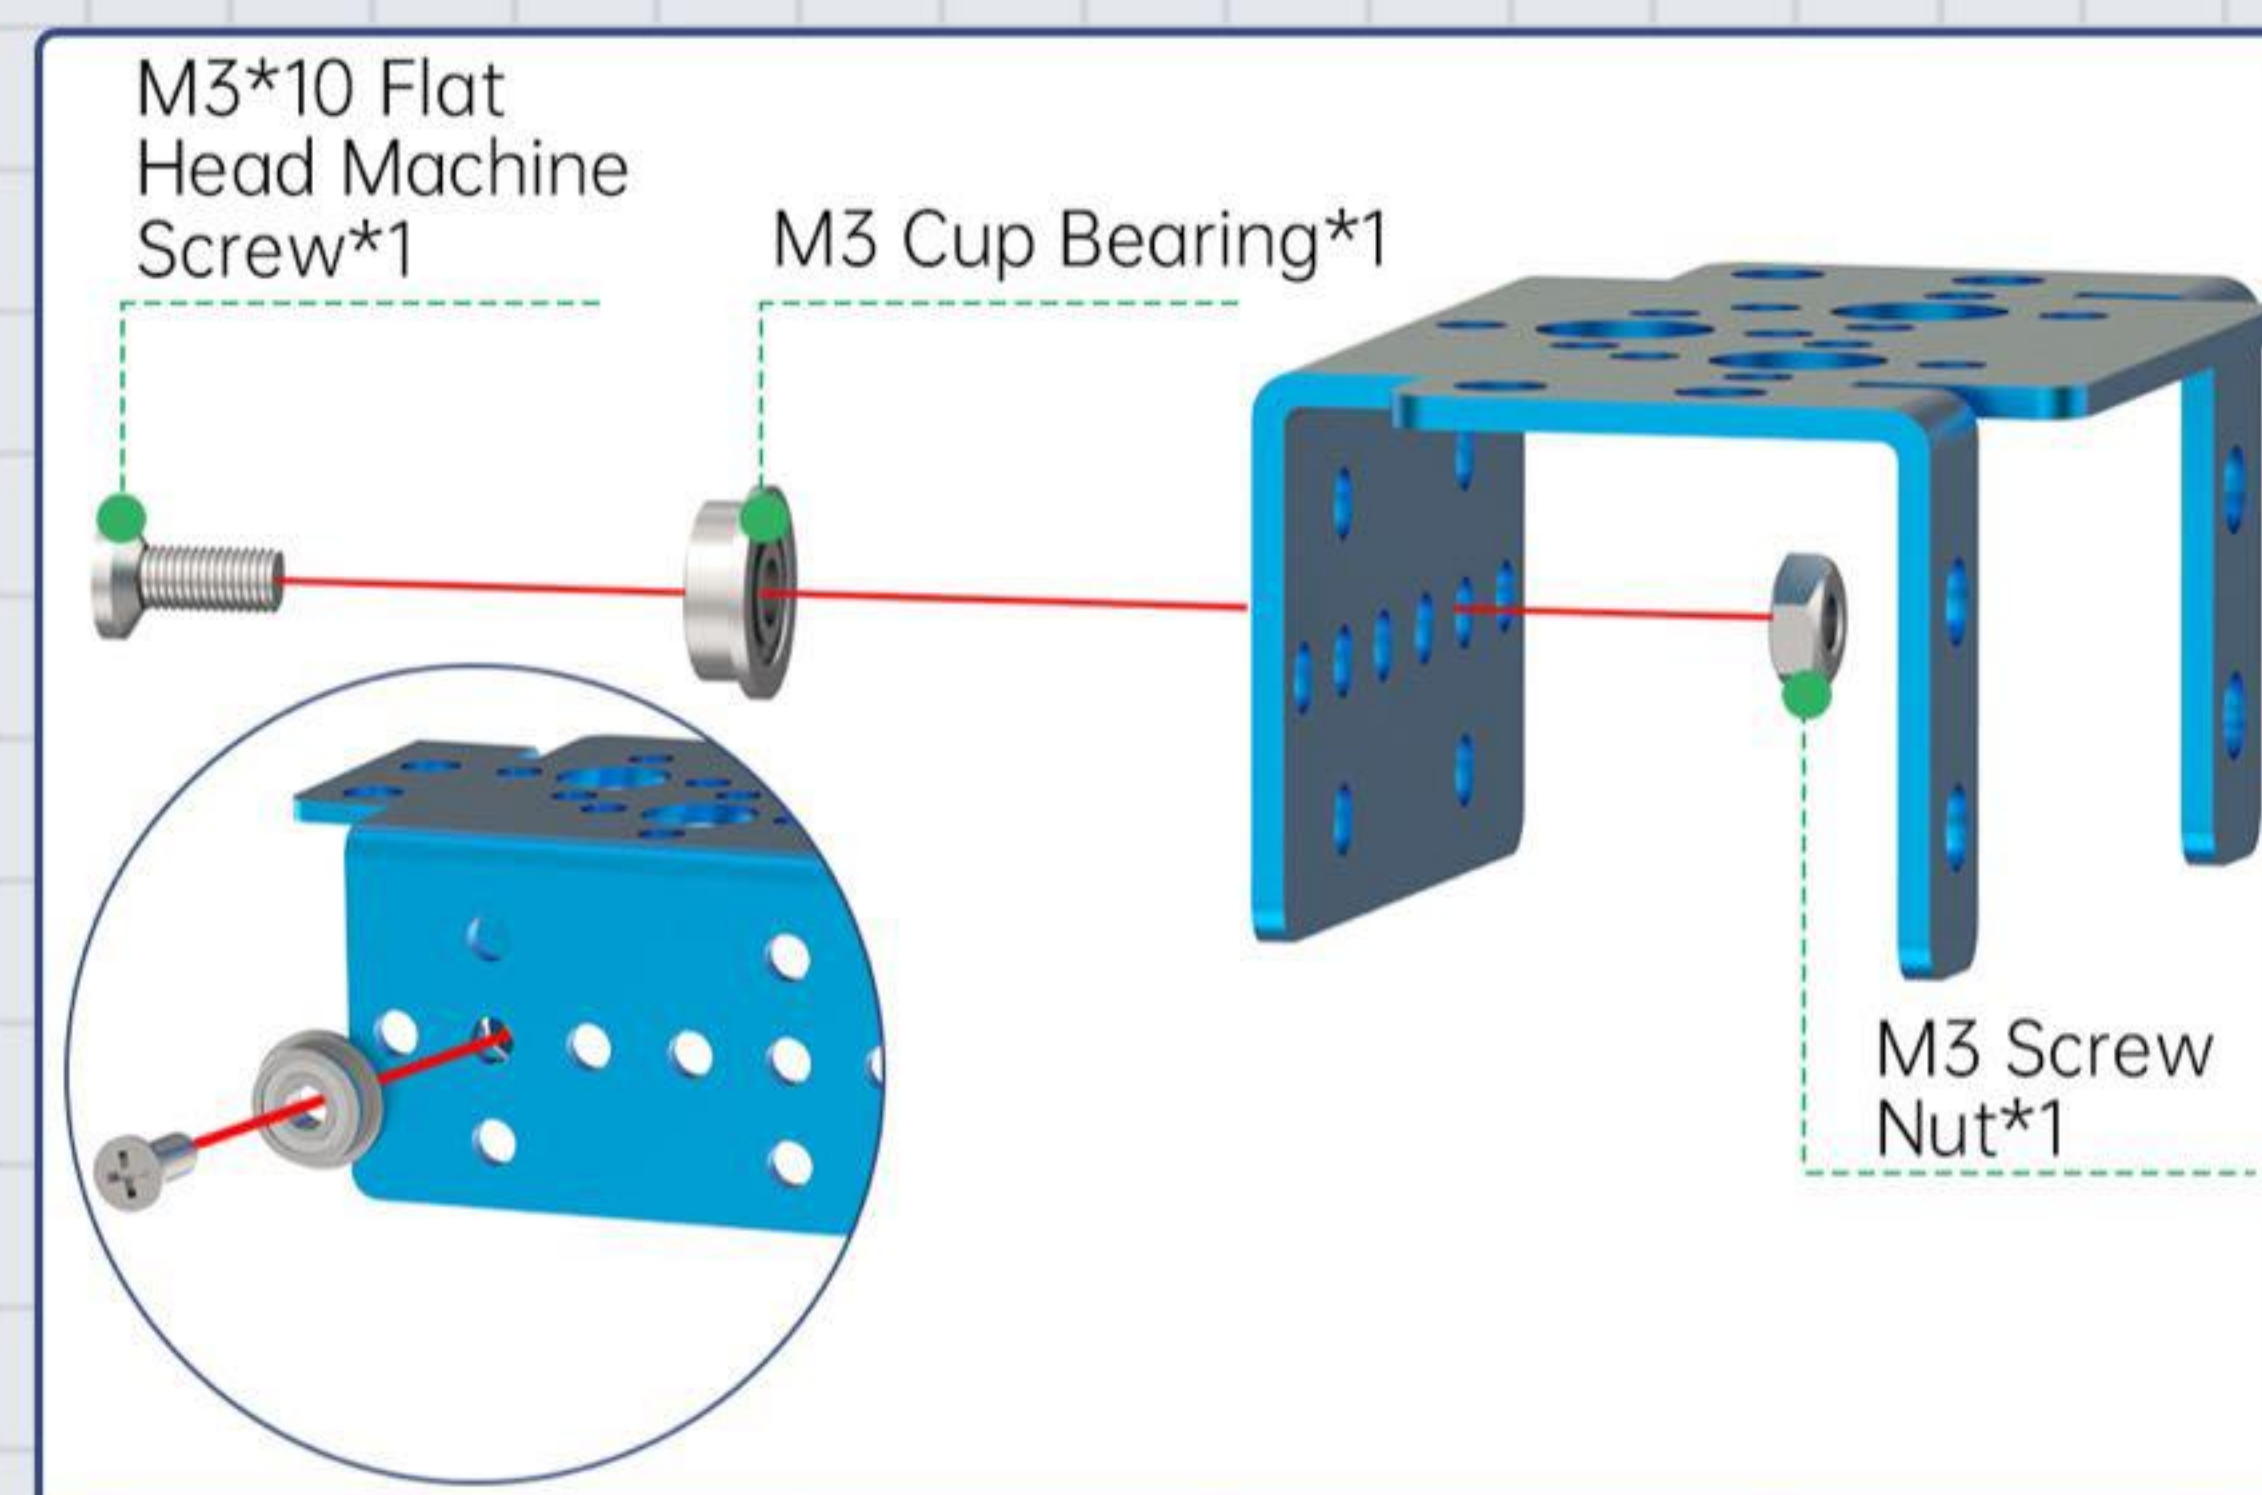

Step14

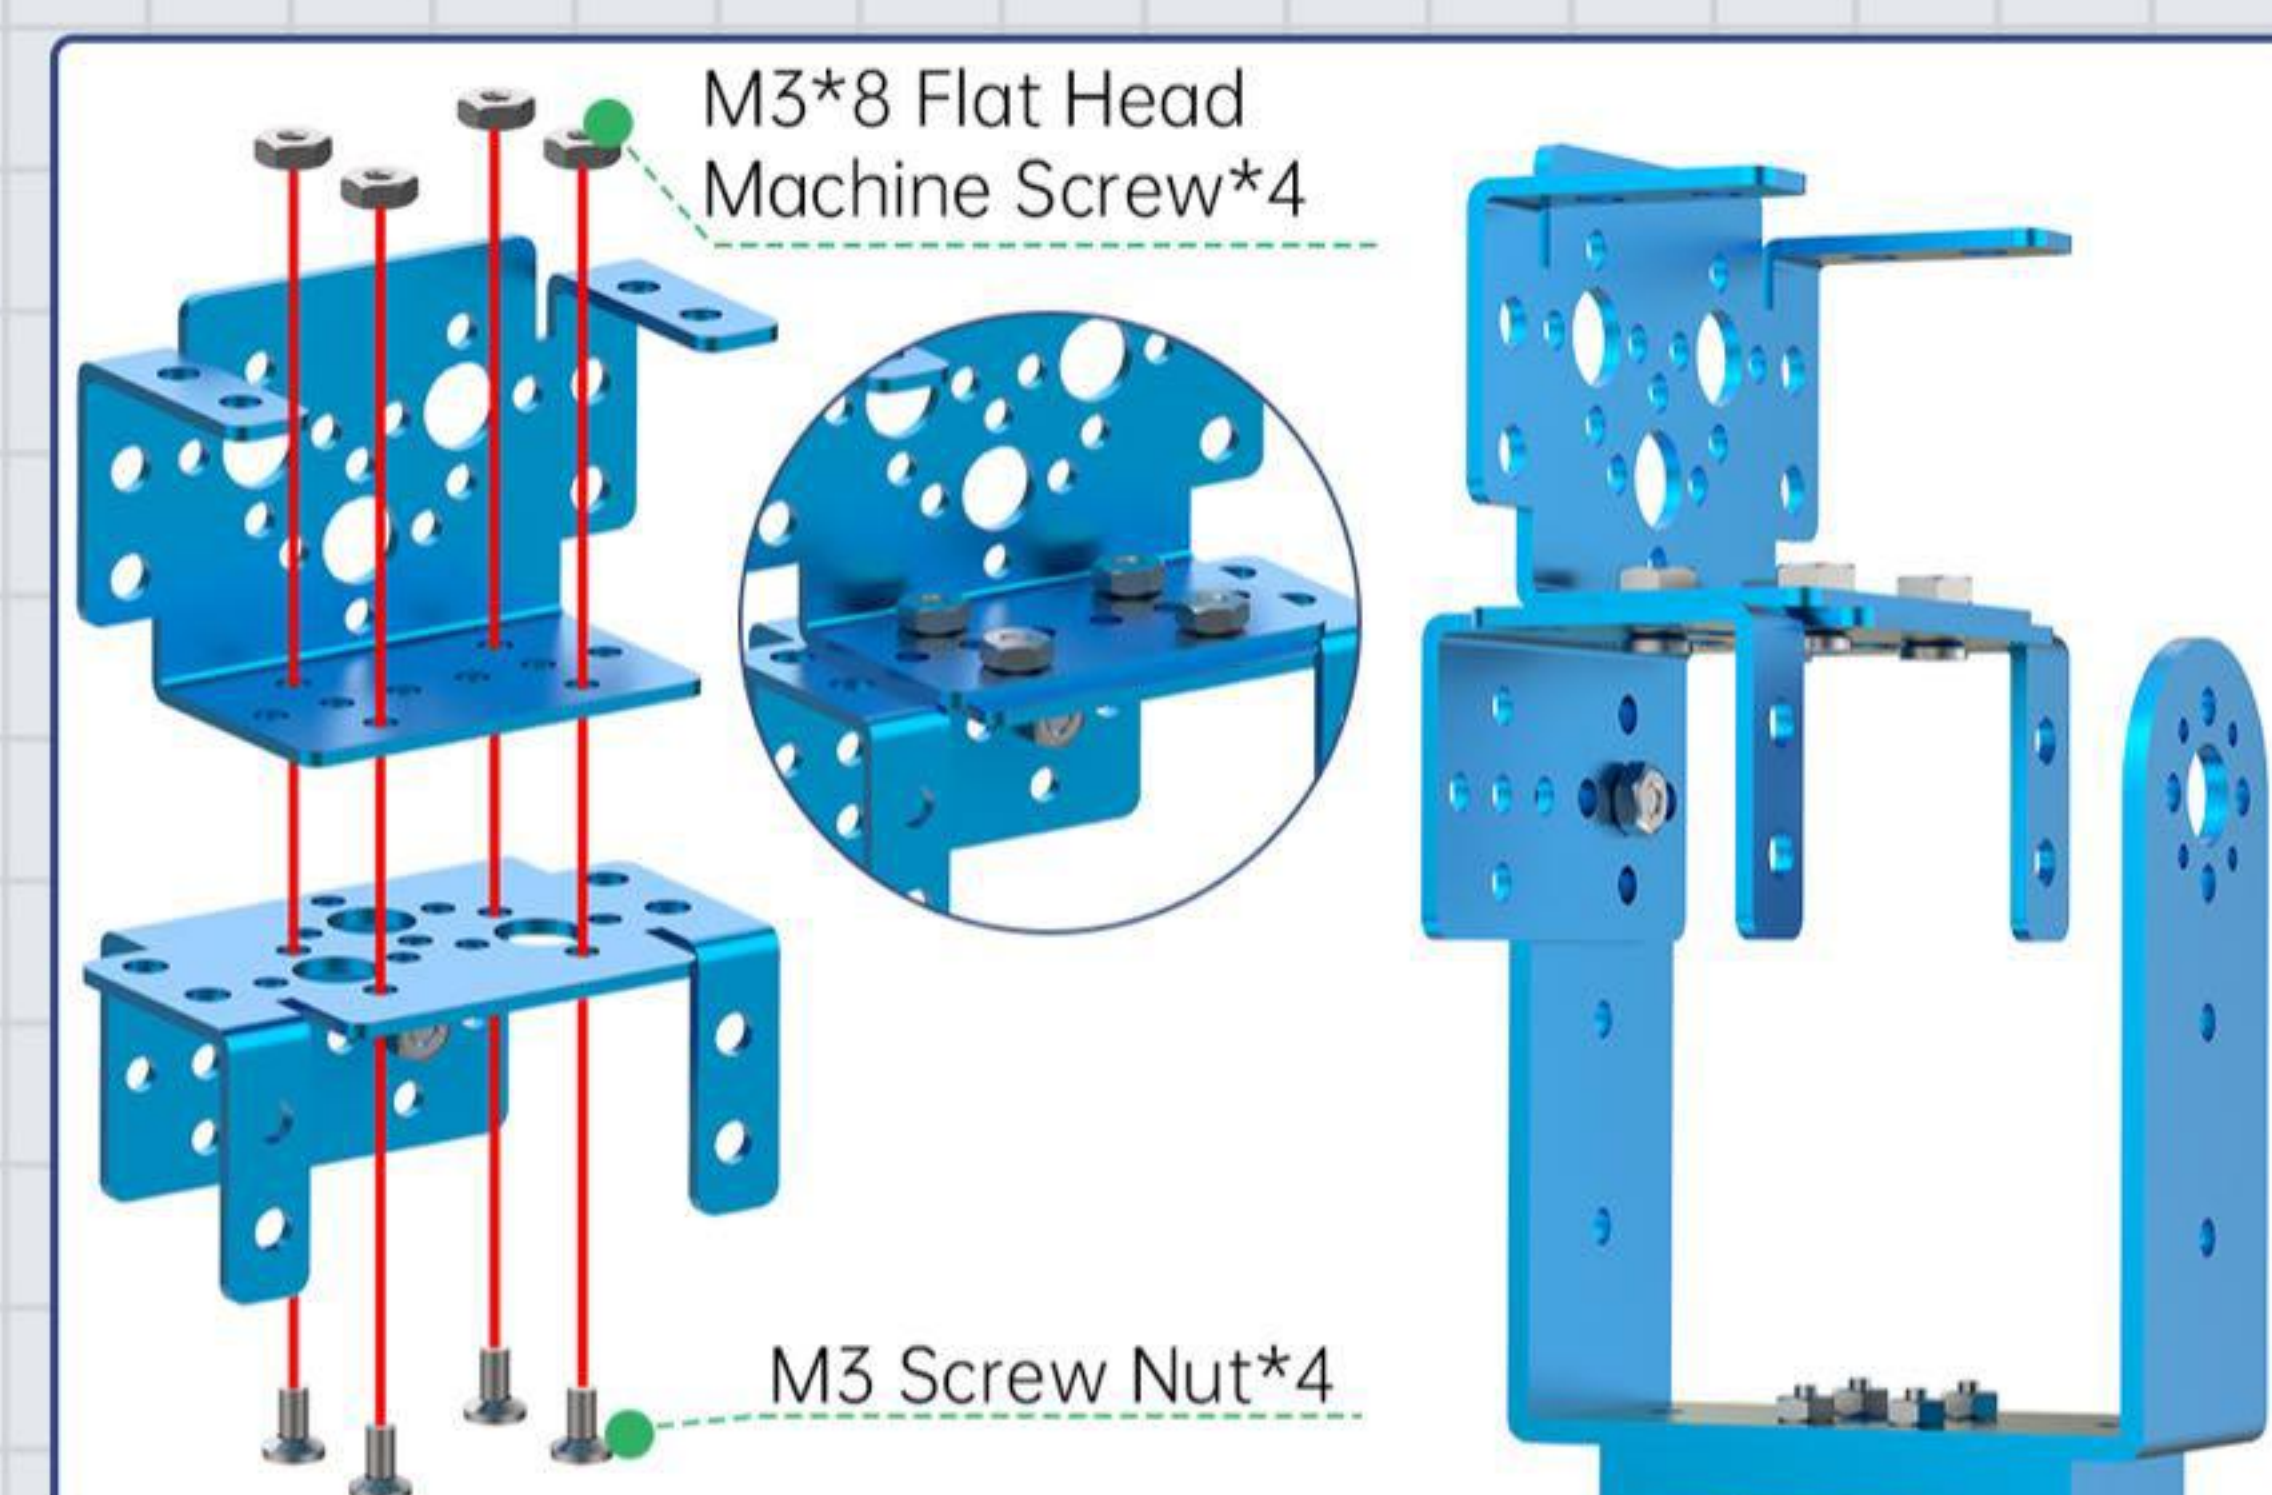

Step21

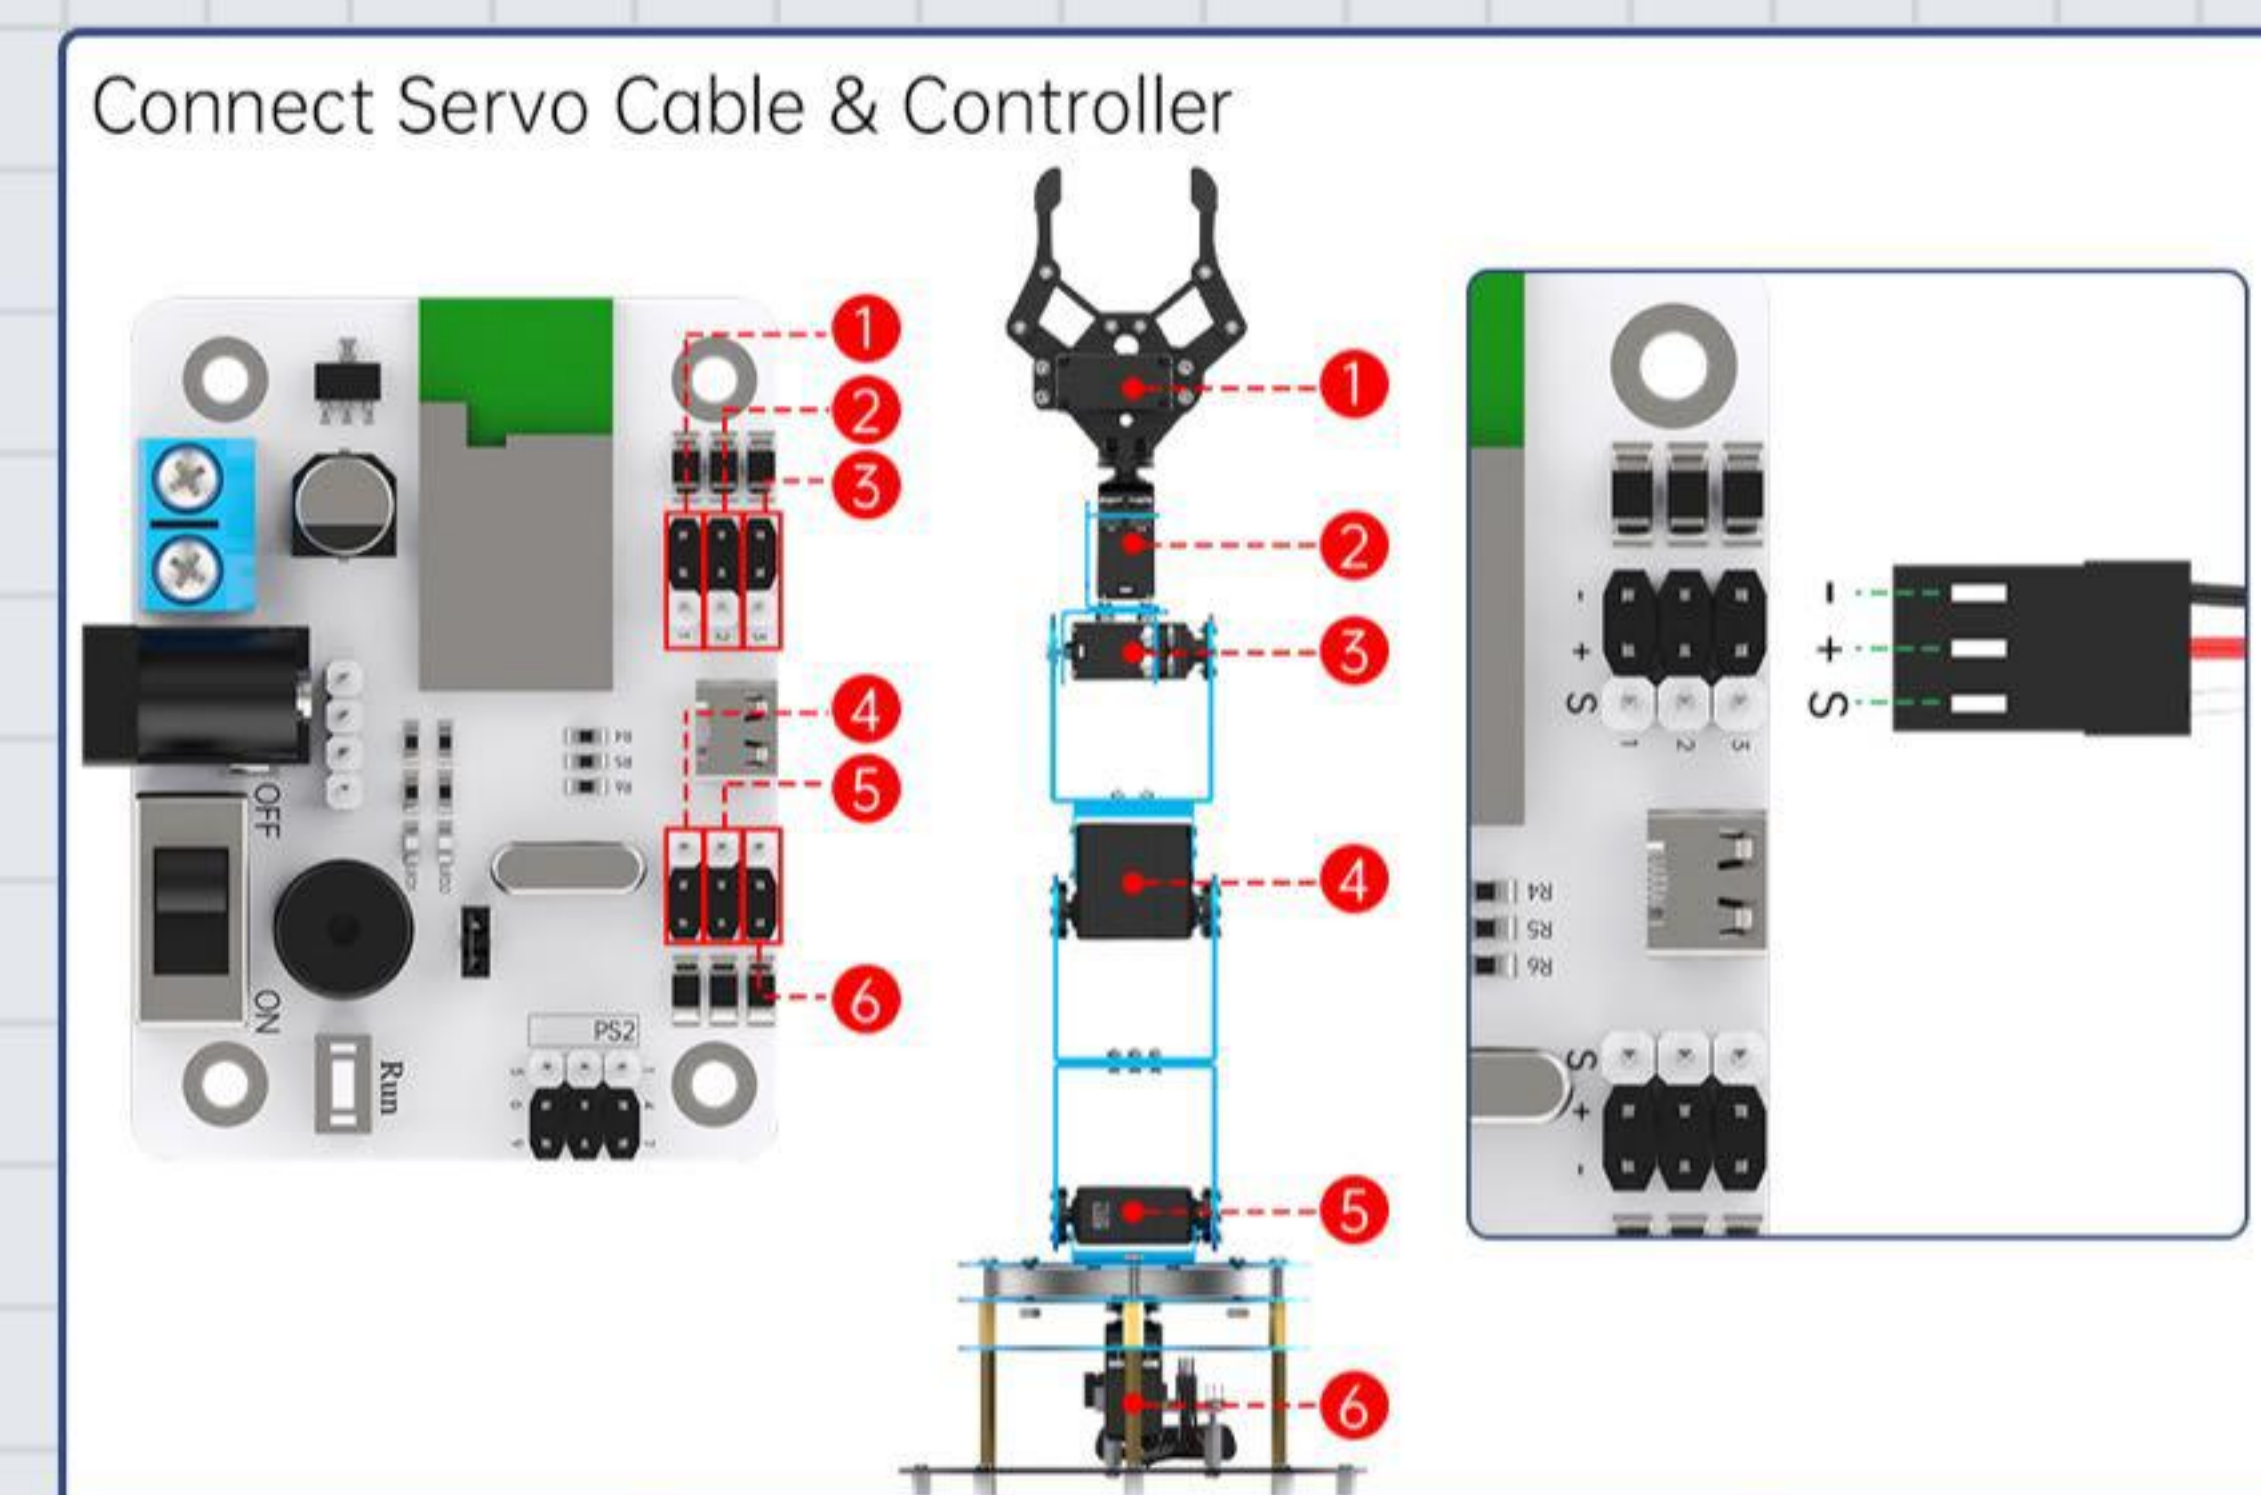

Step22

