

Bootloader update guide for T3-nano

1. Software tools and firmware

- (1) ESP32 download firmware tool and ESP32 firmware

https://temcocontrols.com/ftp/software/28%20flash_download_tool_v3.8.5_FOR_ESP32.zip

https://temcocontrols.com/ftp/software/31%20Sauter_ESP32_Firmware.zip

- (2) CH341SerSetup for USB-to-TTL debug board


<https://temcocontrols.com/ftp/software/25CH341SerSetup.zip>

- (3) UartAssist.exe print debug messages via USB-to-TTL board


<https://temcocontrols.com/ftp/software/30%20UartAssist.zip>

2. Print Debugging Information


- (1) Plug USB-to-TTL debug board to your PC , Download and install CH341 driver , you will find a new USB-SERIAL CH340(COMXX) under device manager->Ports .

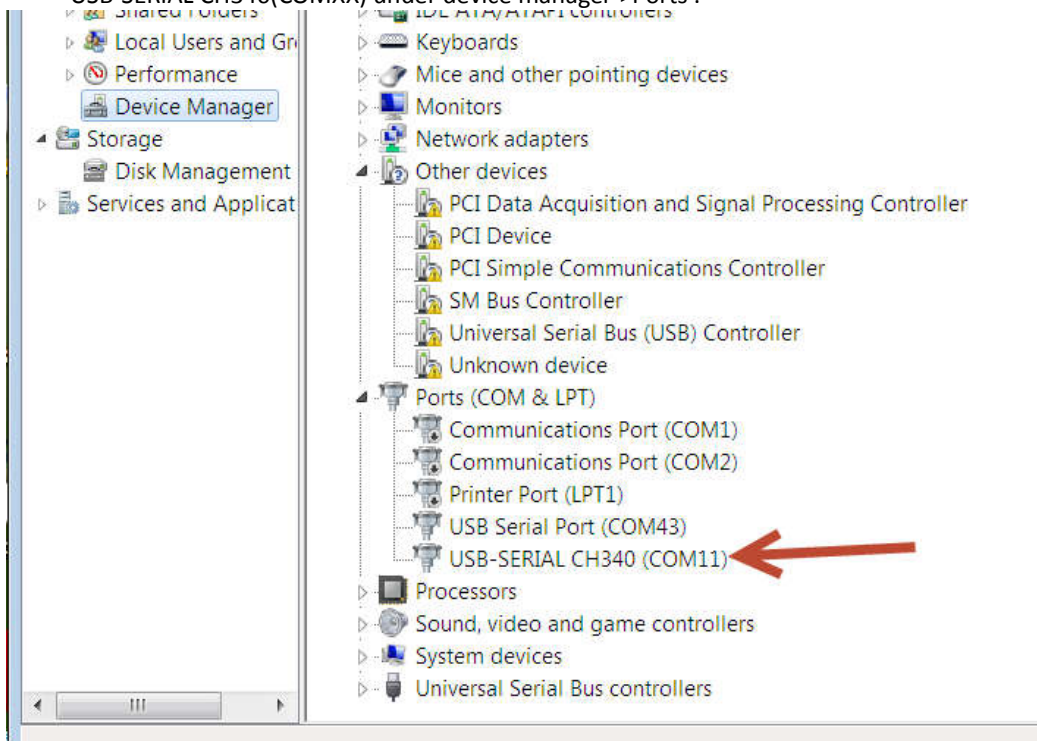

- (2) Connect the USB-to-TTL debugging board and motherboard J4 through the male and female connector , pay attention to keep MARK point in the same position .

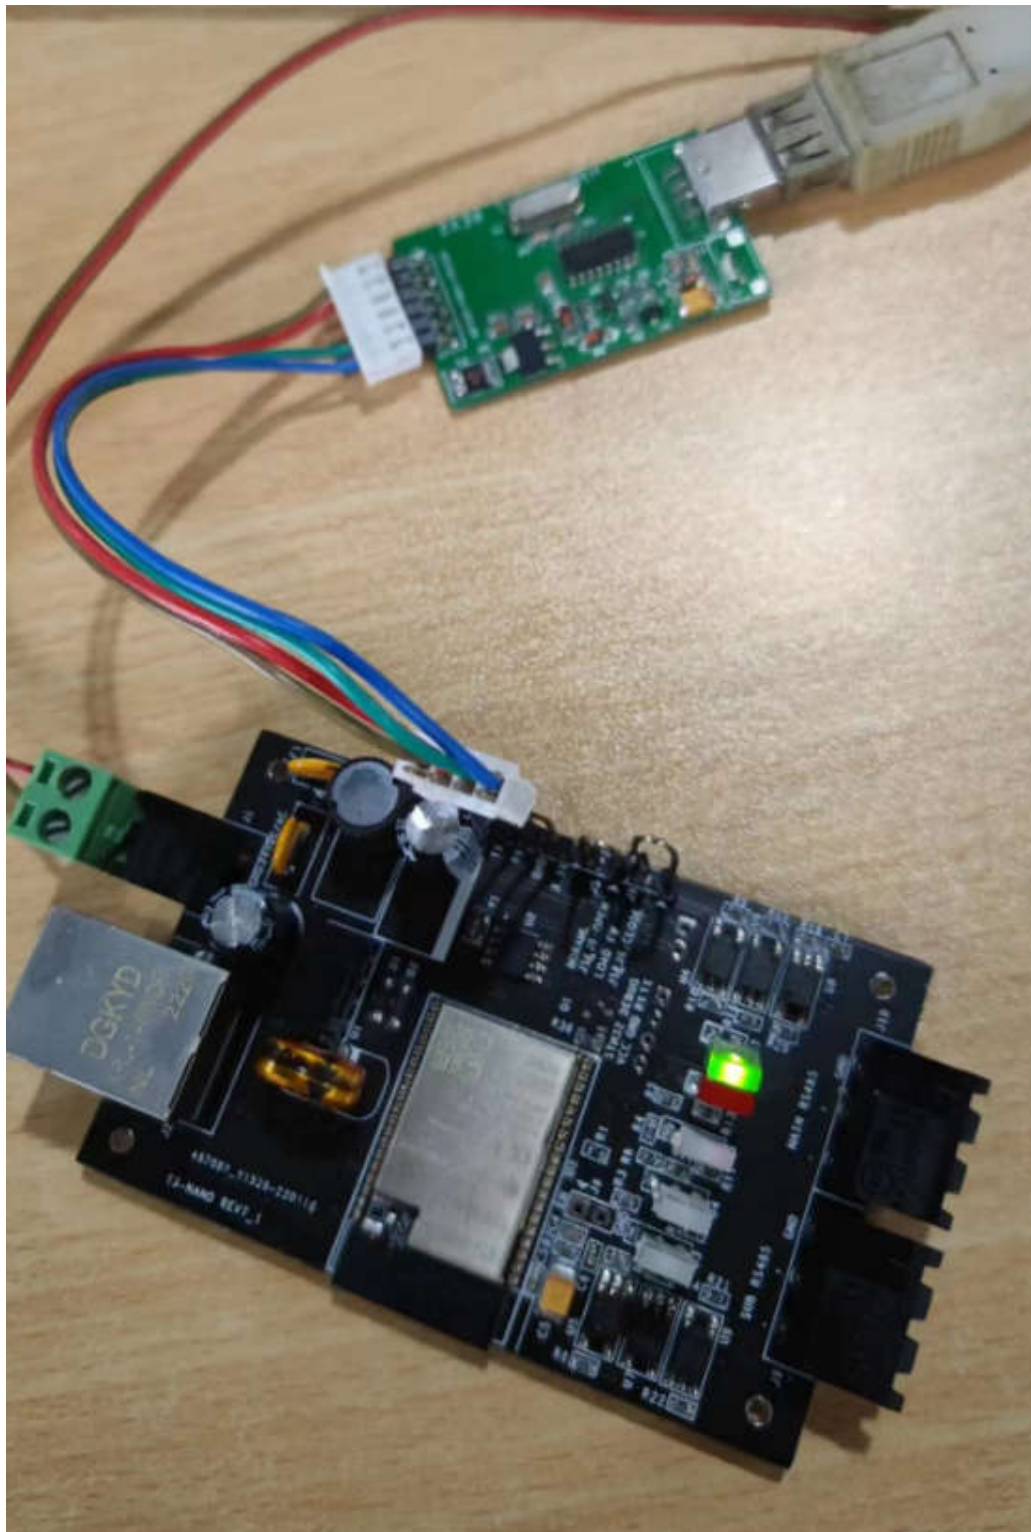


(3) Power on and open commUart Assistant which print some messages about sensors

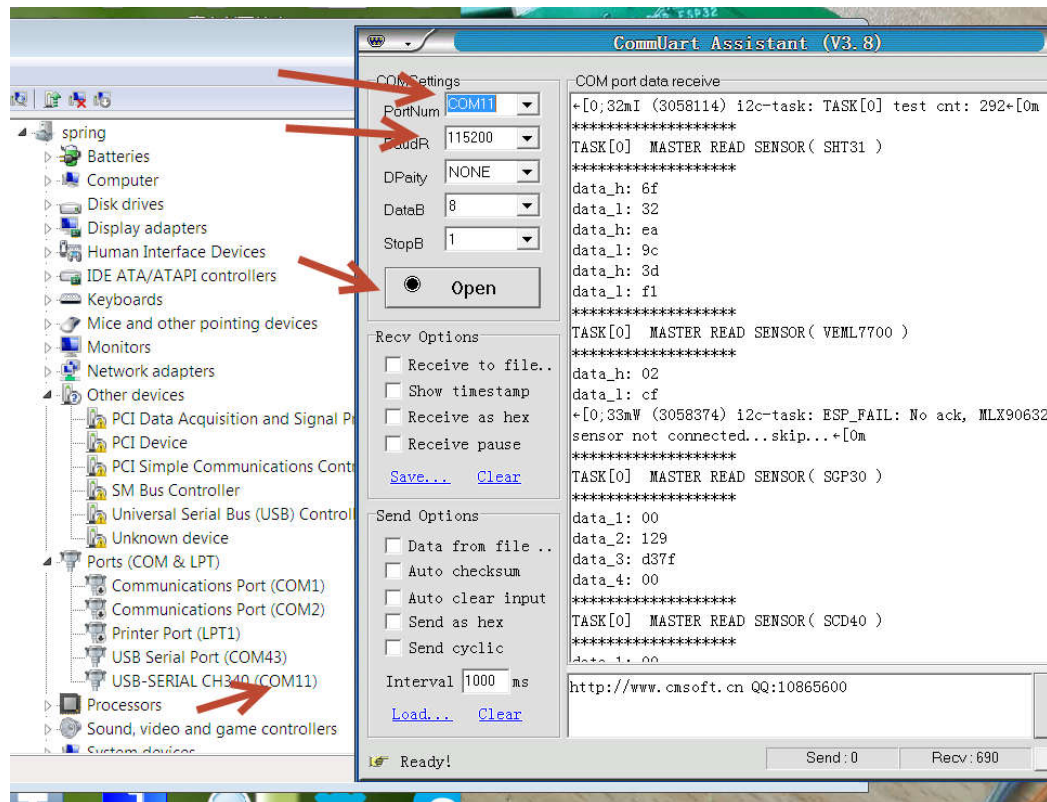

3. ESP32 update firmware .



(1) Hardware connection


USB-to-TTL connect to J3 , Short J5 and J6 by a jumper until the end of the download firmware , turn on 24V power .

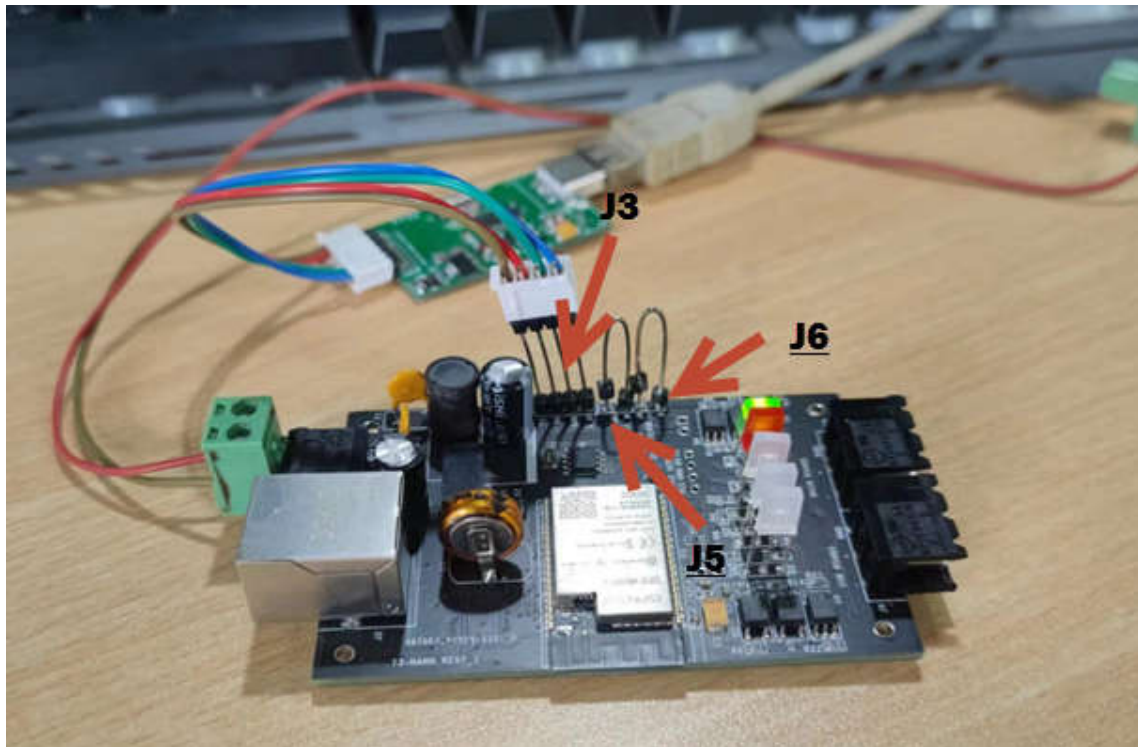



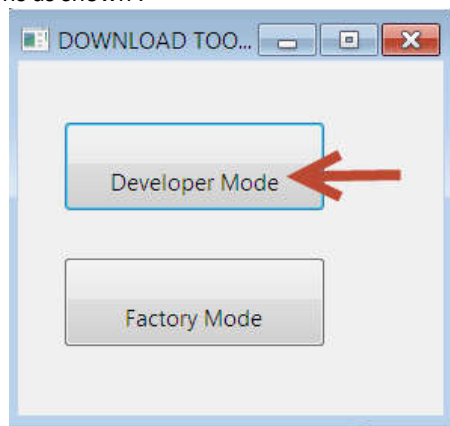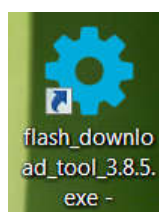

(2) Set ESP32 firmware download tool configurations

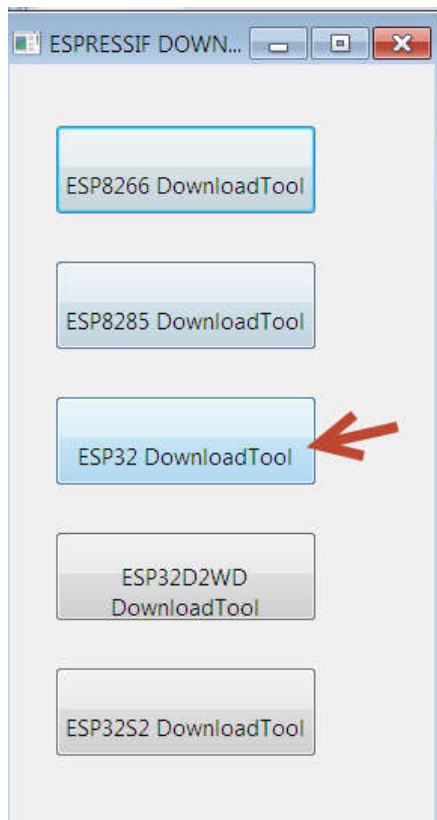
Run flash_download_tool_3.8.5.exe , Developer Mode ->ESP32 Download Tool ,
Set some options as shown .





ESP32 firmware contains four parts .

Name	Date modified	Type	Size
 bootloader.bin	6/1/2022 10:25 AM	BIN File	25 KB
 ota_data_initial.bin	6/1/2022 10:25 AM	BIN File	8 KB
 partition-table.bin	6/1/2022 10:25 AM	BIN File	3 KB
 T3_bootloader_rev27.bin	6/10/2022 02:18 PM	BIN File	725 KB

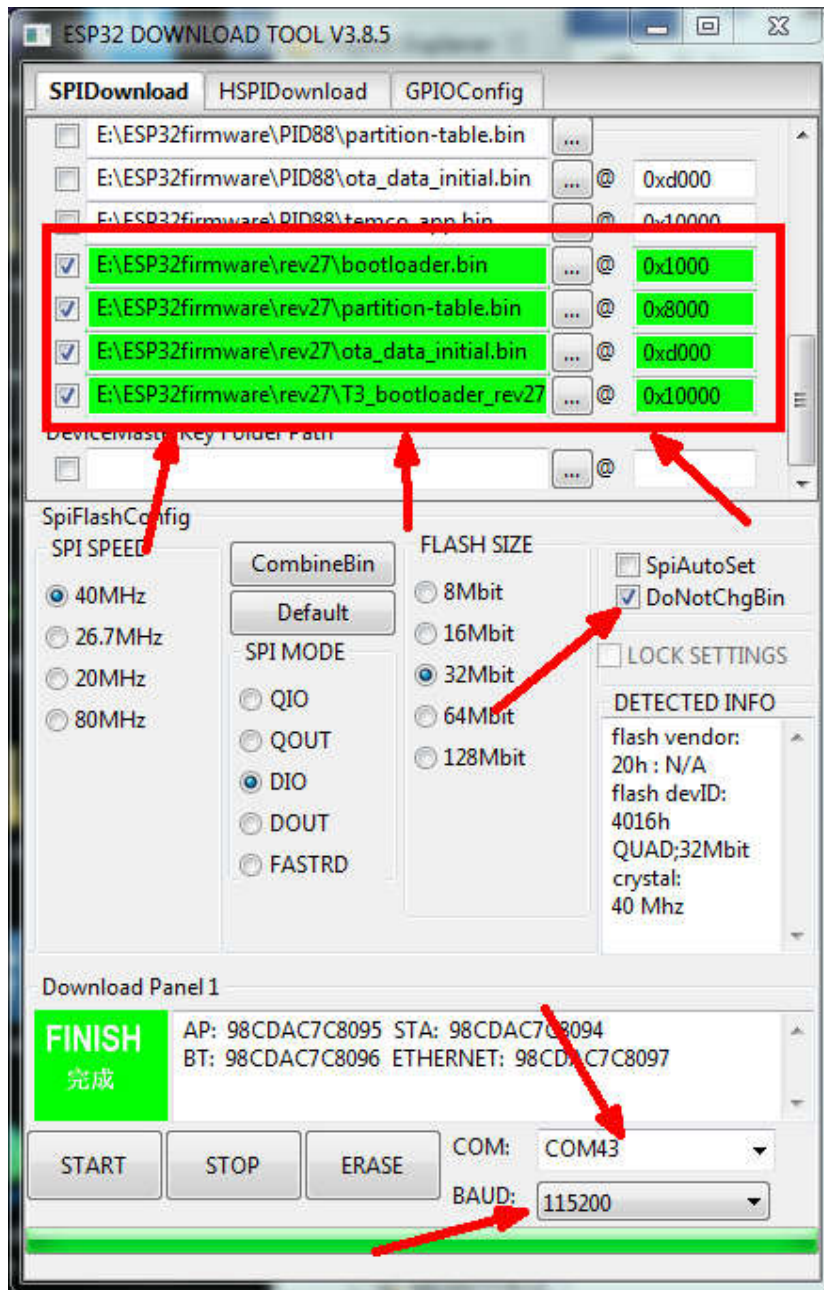

Click the Start button to download the latest firmware .
When it show Finish , please remove jumper on J5 & J6 and power on again,
If UartAssist.exe is running , you can see debugging messages .