


Bootloader update guide for T3-nano

1. Software tools and firmware


- (1) ESP32 download firmware tool and ESP32 firmware
https://temcocontrols.com/ftp/file/flash_download_tool_v3.8.5.zip
<https://temcocontrols.com/ftp/file/BootloaderT3NanoRev27.zip>
- (2) CH340SerSetup for USB-to-TTL debug board
<https://temcocontrols.com/ftp/file/CH340SerSetup.zip>
- (2) UartAssist.exe print debug messages via USB-to-TTL board
<https://temcocontrols.com/ftp/file/UartAssist.zip>

2. Print Debugging Information


- (1) Plug USB-to-TTL debug board to your PC , Download and install CH341 driver , you will find a new USB-SERIAL CH340(COMXX) under device manager->Ports .

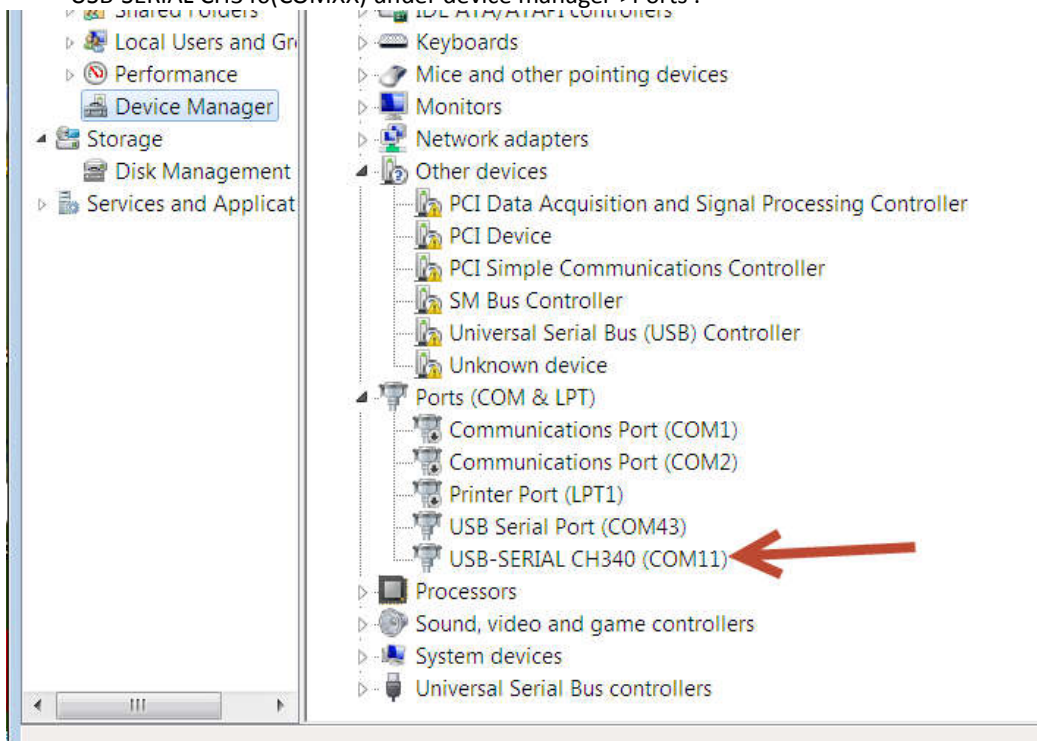

- (3) Connect the USB-to-TTL debugging board and motherboard J4 through the male and female connector , pay attention to keep MARK point in the same position .

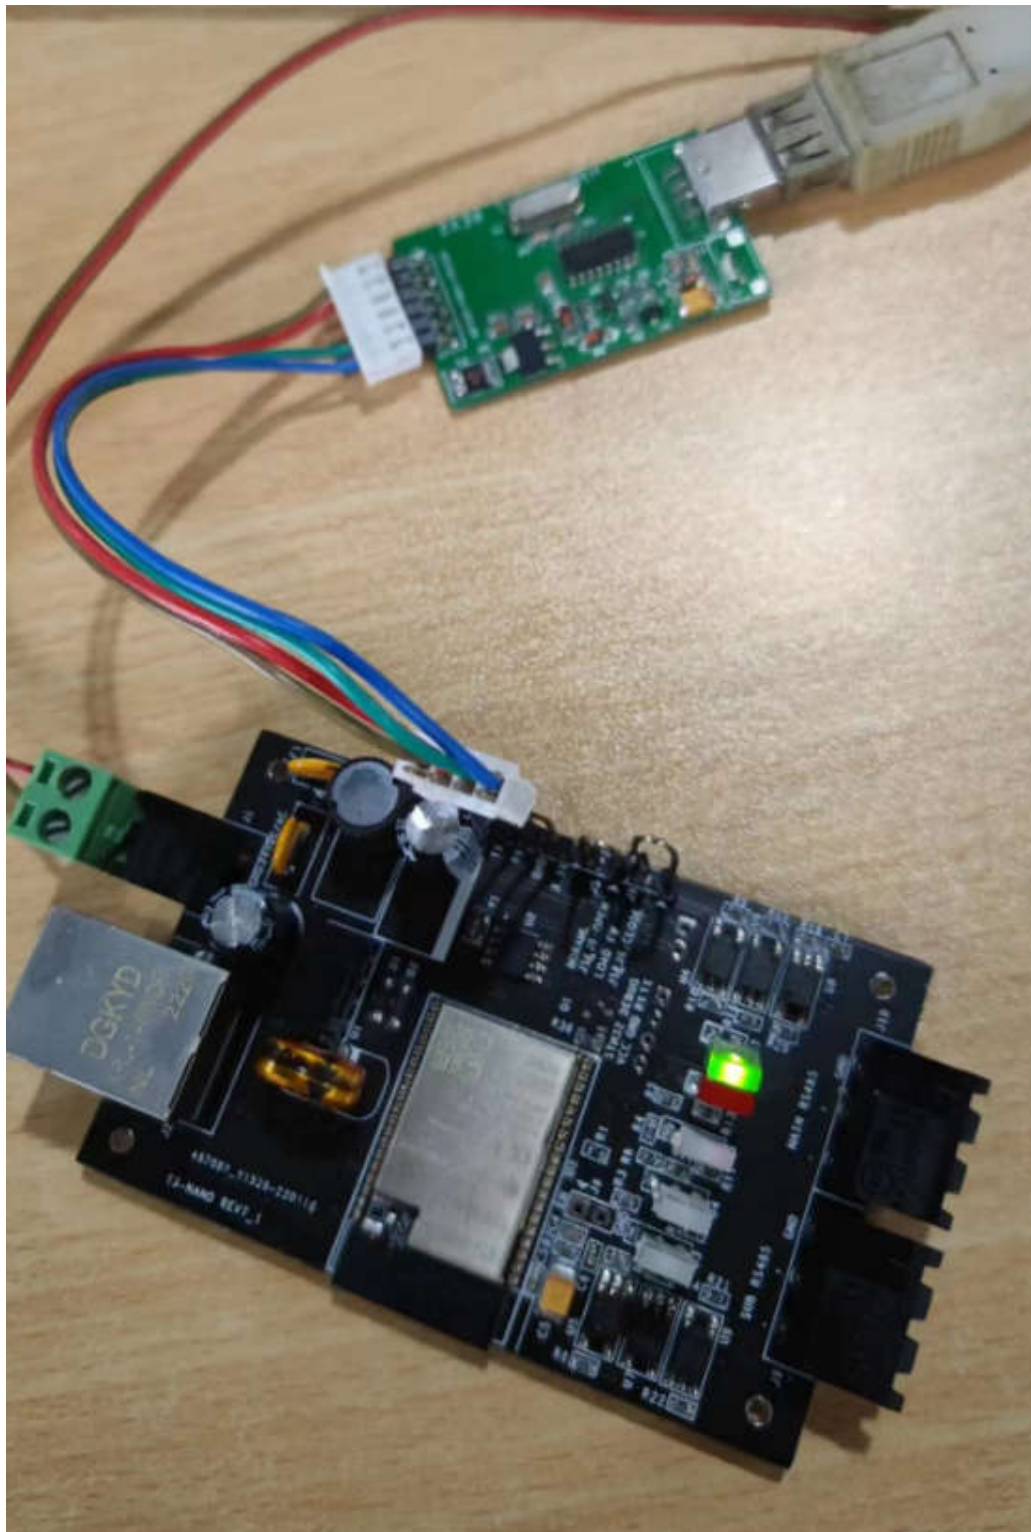


(4) Power on and open commUart Assistant which print some messages about sensors

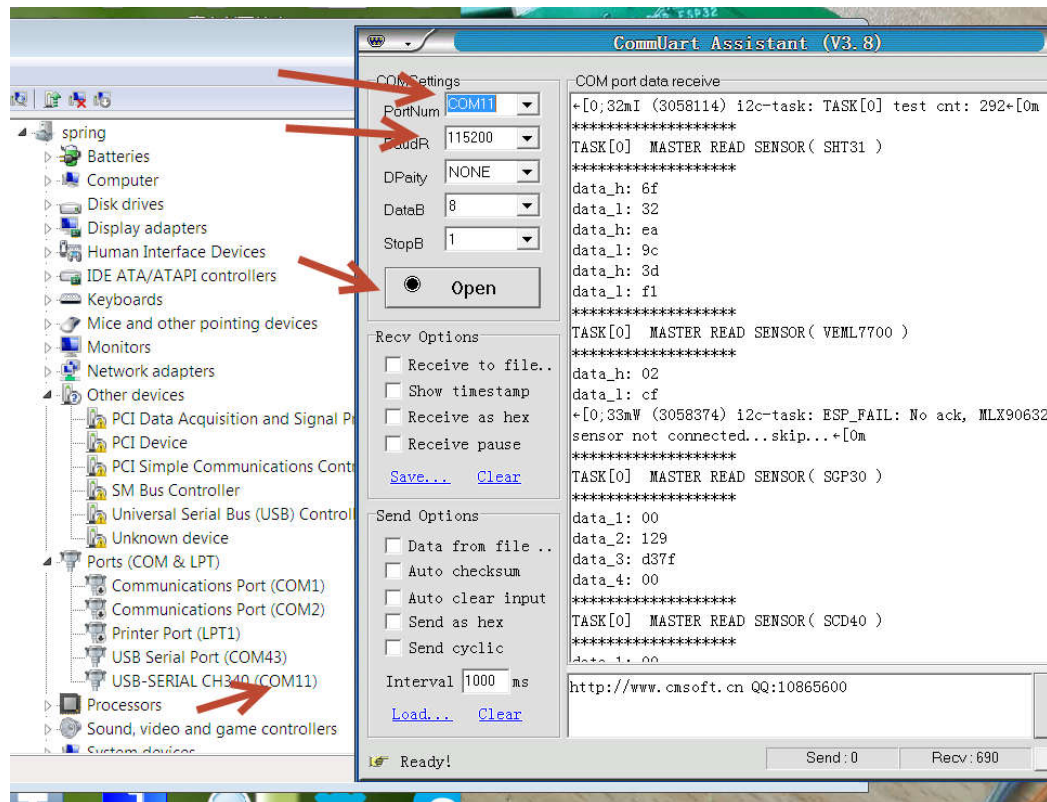

3. ESP32 update firmware .



(1) Hardware connection


USB-to-TTL connect to J3 , Short J5 and J6 by a jumper until the end of the download firmware , turn on 24V power .

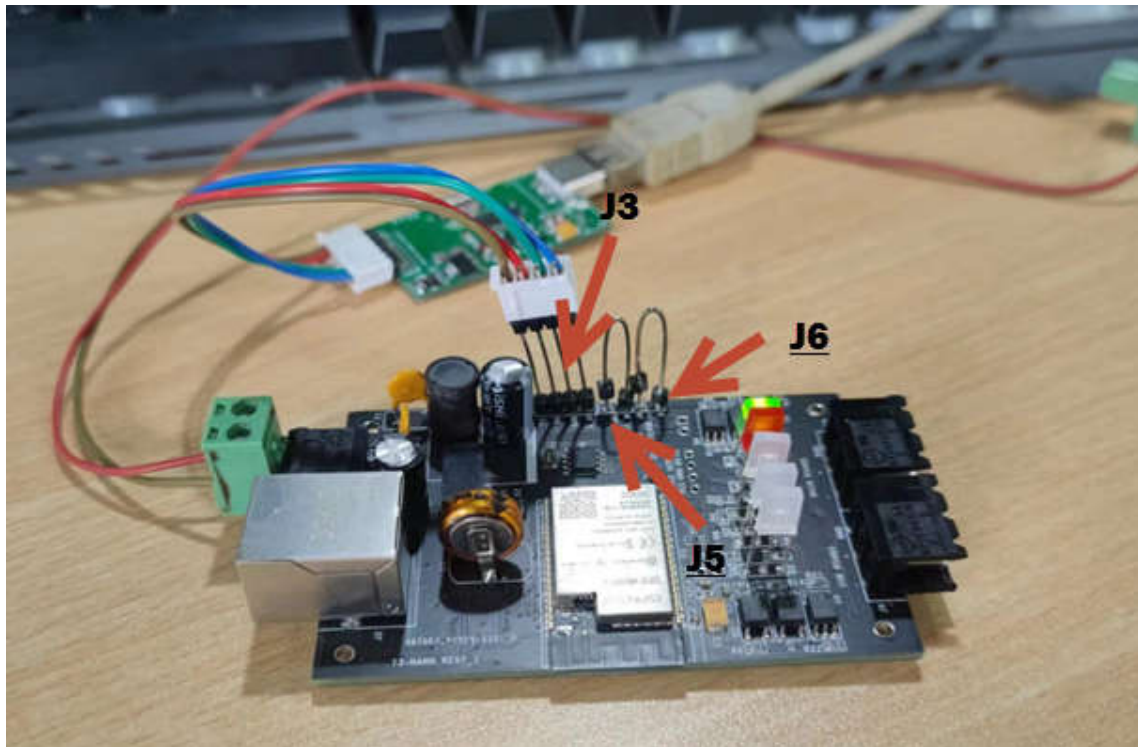



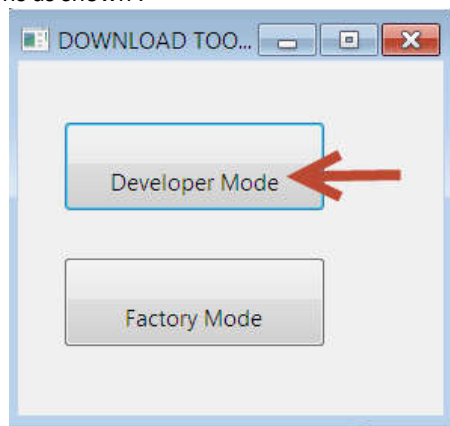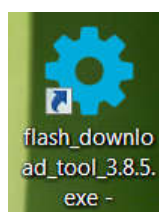

(2) Set ESP32 firmware download tool configurations

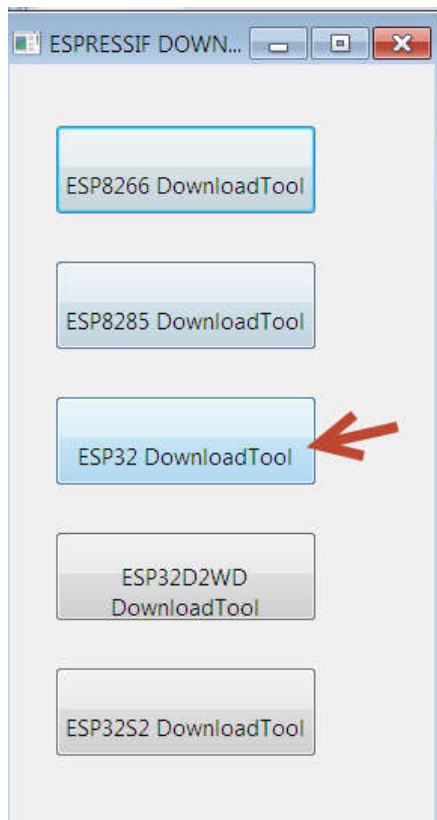
Run flash_download_tool_3.8.5.exe , Developer Mode ->ESP32 Download Tool ,
Set some options as shown .





ESP32 firmware contains four parts .

Name	Date modified	Type	Size
 bootloader.bin	6/1/2022 10:25 AM	BIN File	25 KB
 ota_data_initial.bin	6/1/2022 10:25 AM	BIN File	8 KB
 partition-table.bin	6/1/2022 10:25 AM	BIN File	3 KB
 T3_bootloader_rev27.bin	6/10/2022 02:18 PM	BIN File	725 KB

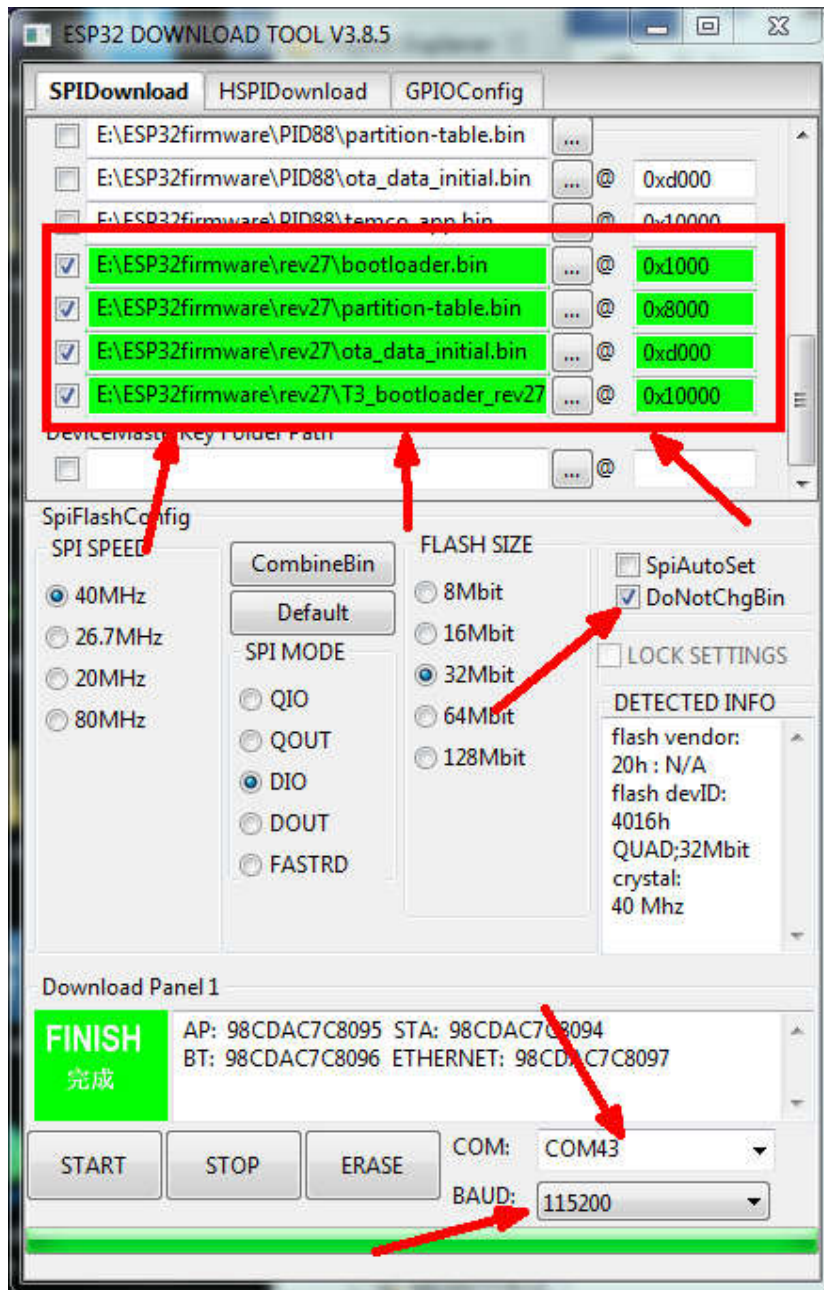

Click the Start button to download the latest firmware .
 When it show Finish , please remove jumper on J5 & J6 and power on again,
 If UartAssist.exe is running , you can see debugging messages .