


Arduino ESP32-Nano word clock

A clock that displays the time in words in Dutch, English, French and German in a large 4-language clock or as a single-language clock.

An Arduino ESP32 Nano computer integrated into the clock is used to control the clock's time and establish Wi-Fi and Bluetooth connections.

The time is synchronized with the internet's Network Time Protocol (NTP) via Wi-Fi. It's also possible to set the time without Wi-Fi or Bluetooth using a rotary knob/pushbutton.

Settings can be managed via a web page, a PC, or a Bluetooth Low Energy (BLE) serial terminal app installed on a phone, PC, or tablet.

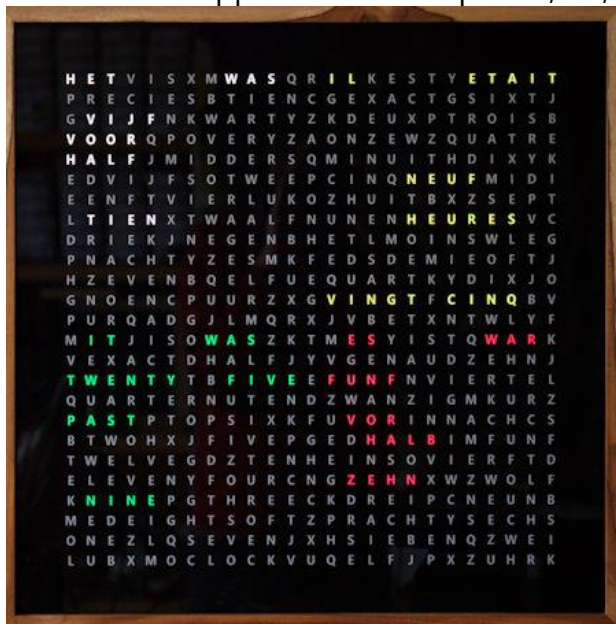

4-language clock



Dutch language clock



Corten steel clock

Quick start

Find one of the following apps in the App Store. This app is used to send commands to the clock.

If the app cannot be downloaded, please read on to find out how to connect to Wi-Fi.

iOS iPhone/iPad/Mac




[BLE Serial Pro](#)

iOS iPhone/iPad/Mac



[BLESerial nRF](#)

Android

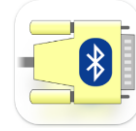

[Serial Bluetooth Terminal](#)

(Turn off timestamp in the menu)

The clock is set to receive the time via Wi-Fi. If the Wi-Fi router name and password are not entered, a web page will open asking you to enter the router credentials.

- StartWordclock " station in the WIFI settings .
- Enter the password: wordclock
- Then open the browser on your mobile and type in the URL: 162.168.4.1 and press enter.
- Enter the name and password of the Wi-Fi router used at home.

Tip : You can also use your mobile hotspot for Wi-Fi.

Bluetooth app

Setup is easier with the Bluetooth app on your phone or tablet.



- Open the Bluetooth app.

The iOS app displays a list of Bluetooth stations.

If it's taking too long, tap the wheel in the top left corner (nRF52 is selected) and tap Done .

On Android, tap Scan and Connect with the word clock.

- Send the command: **i** to see the menu
Type the letter **a** followed by the name of the router and press Send . (eg : aNAMErouter Do not send extra periods or spaces.)
- Type the letter **b** followed by the router password and press Send . (e.g .: bGeHeim1234)
- Send @ to restart the clock.

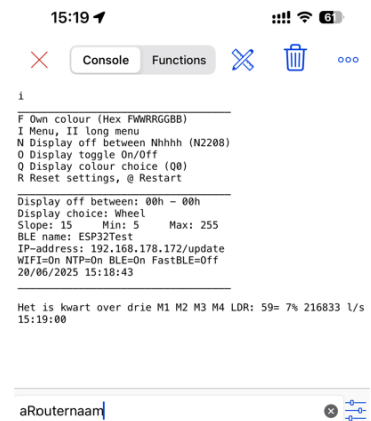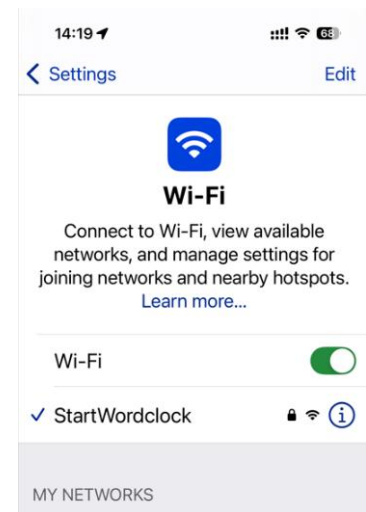

Or start WPS (A button on the router with WPS. Read this in the manual)

- Press the WPS button and then send the command: **z** in the Bluetooth serial app.

- **If WIFI is not possible,**


send the letter J in the menu with the Bluetooth app.

- Then it appears: Use DS3231 is ON. WIFI ON, NTP OFF.

- Send a W to turn off Wi-Fi. Send @ to restart the clock.

- Send the correct time and date via the menu.

(For example, send: T143000 for 'half past two' and, for example, send : D090625 for the date .)

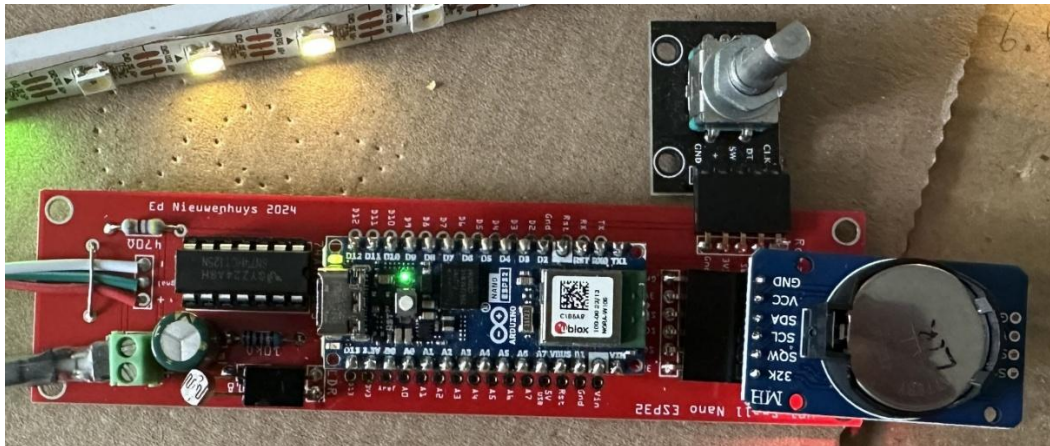

Small PCB design with Rotary and DS3231 RTC attached

Before starting

The clock receives the time from the internet if there is a WIFI connection.

When a DS3231 time module is mounted on the PCB, an Internet connection is not required.

If a rotary or push button knob is installed it can be used to set the time.


An infrared remote control can also be installed to set the time.

To connect to the internet, the Wi-Fi station name and password must be entered into the clock software to connect to a Wi-Fi router.

The Wi-Fi station name and password must be entered only once. The login information is stored in the microprocessor's memory.

A serial terminal app on a phone, tablet, or PC allows operation without connecting the clock to a PC with a USB cable to enter Wi-Fi credentials.

The clock can also be controlled via a browser when connected to WIFI.

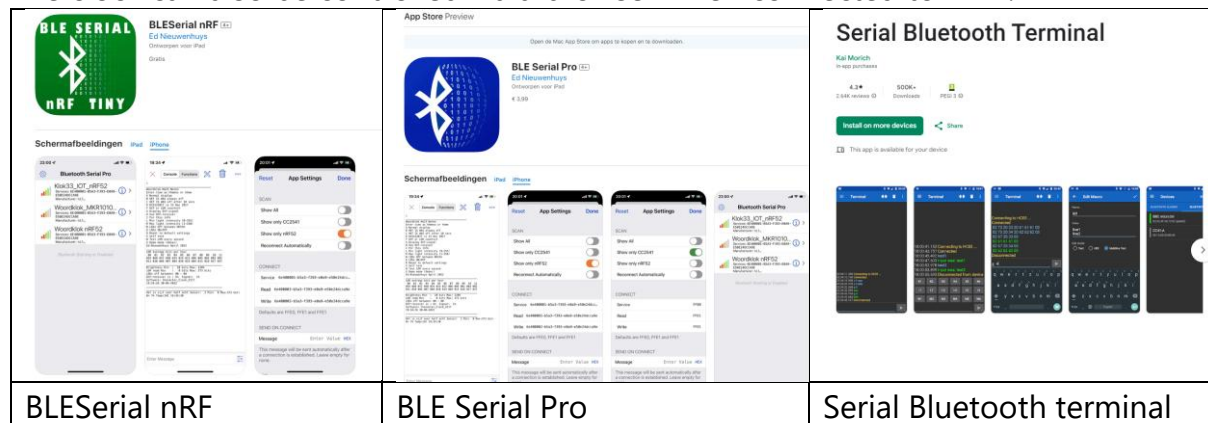


Download a Bluetooth UART serial terminal app on a phone, PC, or tablet.

For iOS: BLE Serial Pro or BLESerial nRF .

For Android: Serial Bluetooth terminal.

For a PC: Install the Arduino IDE on a PC and connect the clock to the PC using a USB-C cable.

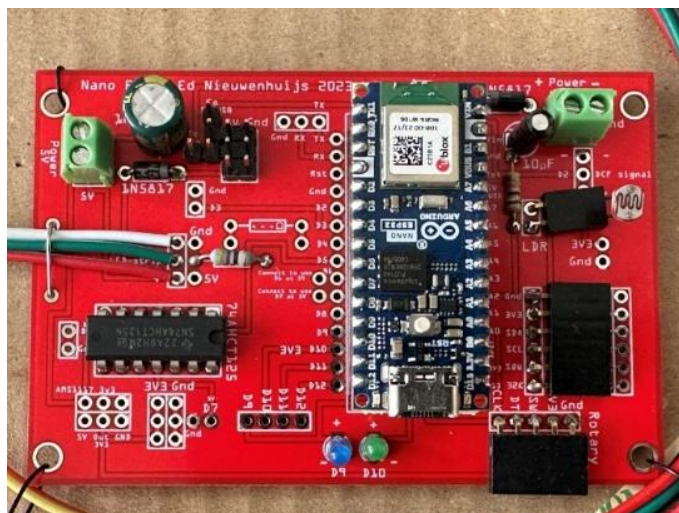

Arduino ESP32 Nano on the printed circuit board in the clock.

First service

- Connect the clock power.

If there's no internet or Bluetooth connection , the clock can be controlled with the rotary knob, three push buttons, or a remote control, provided it's installed and activated. Activation is done in the menu with option H01 (rotary knob), H02 push buttons, or H03 and H04 (IR remote control).

Sometimes the knob is mounted inside the cabinet.

- Press the dial or the center button of the three push buttons.
The "HOUR" indicator will flash three times, and the hours can be set by turning the dial or pressing the up or down buttons on the three-button membrane.
- A second press of the button or the middle button will make HETISWAS flash and the minutes can be changed. Seconds are set to 0. So to be precise, set the last minute to exactly 0 seconds.
- Pressing a third time will cause TWELVE to flash three times and the LED light intensity can be adjusted.
- Pressing the button a fourth time will cause the NTP and RTC signs to flash three times. You can switch between RTC and NTP time.
- Pressing nine times will reset the clock to factory settings.

The IR remote control can be used to operate the clock once it has been learned. The { option in the menu prompts the clock to press buttons corresponding to the numbers 0-9 and a few control buttons, such as POWER.

Via WIFI connection

When the clock is started for the first time, a WIFI connection will need to be established.

If there are still old connection data in the clock, enter the capital letter R 5 times in the menu (RRRRR) to delete it.

The clock settings are then set to:

SSID and password are empty

Timezone:CET-1CEST,M3.5.0,M10.5.0/3

WIFI=On NTP=On BLE=On

WPS


WPS is a method to obtain the password and the name of the WIFI station, the SSID, from the router.

Start WPS on the clock by entering Z in the menu, and then start WPS on the Wi-Fi router. If all goes well, the clock will restart and the time will be correct.

Access point in the phone

In the WIFI connections on the phone (tablet on PC) there will be a " StartWordclock " station next to the router you are connected to.

- Connect to the " StartWordclock " station. Use the password: **wordclock**
- Open a browser and type: 192.168.4.1 and press enter.

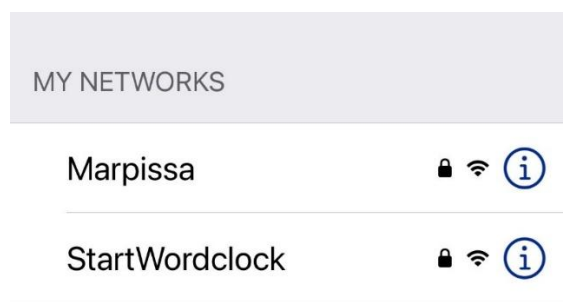

- In this screen, enter the SSID and password of the WIFI router and press Submit
This information is often found on the bottom of the router.

Clock WiFi Configuration

Enter SSID and password of your WIFI router.

SSID:

Password:

The clock will restart and display the correct time.

When the Bluetooth app is installed on the phone or tablet

With the 'Bluetooth serial terminal' app, the clock can be controlled via Bluetooth with your phone, tablet or macOS PC.

- Launch the Bluetooth terminal app on your phone or tablet
- Click on the connection named ' wordclock ' in the serial terminal app.
- Find your Wi-Fi router's login information.
Find the Wi-Fi router's SSID and password. These are typically located on the bottom of the Wi-Fi router.

Type in:

- aSSID and press Send.
SSID is the name of the SSID you can find on your phone, for example. It's the name to which Wi-Fi is connected.
- bPASSWORD and press send.
PASSWORD is the password you can find on the bottom of your Wi-Fi router.
- cBLENAME (optional, otherwise the clock will be named ' Wordclock ')
The BLENAME is the name of the clock in the BLE serial terminal app and in the connected WIFI router.

If the Router Name (SSID) or Password is incorrect, the clock will restart the Access Point page (192.168.4.1) in the phone after a few restarts .

The correct data can be entered via this access point page, Bluetooth or with the USB cable.

For a detailed explanation, see the chapter: Clock operation and settings.


Home Network Devices enabled: 16	
FRITZ!WLAN Repeater 1750E	LAN
Ed-IPad-Pro	Wi-Fi - 5-GHz
FiboStick50cm	Wi-Fi - 2.4-GHz
FlipoKlok	Wi-Fi - 2.4-GHz
SteelClock-01	Wi-Fi - 2.4-GHz

In the FRITZBox WIFI router, for example, the clock named "SteelClock-01" is connected to WIFI.

You can launch the clock's webpage in a browser by tapping:

<http://SteelClock-01> or SteelClock-01.local.

The default name is: wordclock and then the url to start the menu page becomes: wordclock.local .

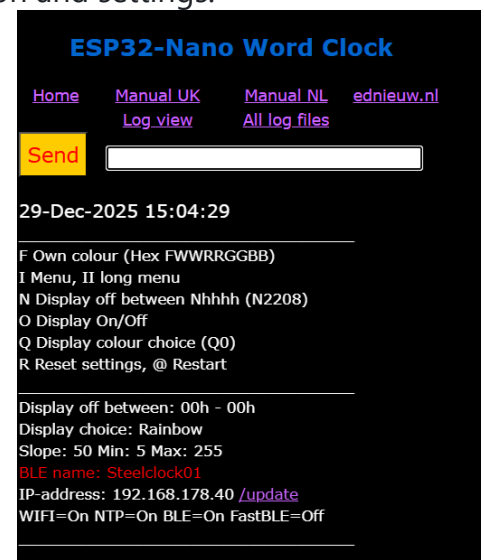

Option I in the menu selects a short menu for everyday use or a long menu with option ii (2x i) for an extensive menu with all options.

The screenshot shows a web browser with two tabs: 'Word and Fibonacci' and 'Linux Mint 22.2 "Zorin"'. The active tab is 'http://steelclock01/log'. The browser's address bar shows 'Not secure' and the URL 'http://steelclock01/log'. The page content is divided into two main sections.

Left Panel (ESP32-Nano Word Clock):

- Header:** ESP32-Nano Word Clock
- Navigation:** Home, Manual UK, Manual NL, ednieuw.nl, Log view, All log files
- Send Button:** A yellow button labeled 'Send' next to a text input field.
- Timestamp:** 29-Dec-2025 15:05:25
- Configuration:**
 - F Own colour (Hex FWWRRGGBB)
 - I Menu, II long menu
 - N Display off between Nhhhh (N2208)
 - O Display On/Off
 - Q Display colour choice (Q0)
 - R Reset settings, @ Restart
- Status:**
 - Display off between: 00h - 00h
 - Display choice: Rainbow
 - Slope: 50 Min: 5 Max: 255
 - BLE name: Steelclock01
 - IP-address: 192.168.178.40 /update
 - WIFI=On NTP=On BLE=On FastBLE=Off

Right Panel (Log Viewer):

- Auto:** A checkbox labeled 'Auto' is checked.
- Timestamp:** 15:05:25
- Code Snippets:**

```

} Learn IR remote, + Fast BLE
I Info menu, II long menu
J DS3231 RTC module On/Off
K LDR reads/s, K1 Time/min On/Off
N Display off between Nhhhh (N2208)
O Display On/Off, P StatusLED On/Off
Q Display choice (Q0-9), ~ Changing
R Reset settings, @ Restart
S Slope, L Min, M Max (S50 L5 M200)
Unnn Demo (U200 msec), Y LED test
) HETISWAS On/Off, ( EdSoft On/Off
#nnn Selftest, RTC: ! See, & Update
W WIFI, X NTP, Z WPS, CCC BLE
Ed Nieuwenhuijs Dec 2025

Display off between: 00h - 00h
Display choice: Yellow+
RandomDisplay:On/min, Timestamp/min
Slope: 50 Min: 5 Max: 255
SSID: FRITZ!BoxEd
BLE name: Steelclock01
IP-address: 192.168.178.40/update
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On FastBLE=Off
No Rotary, =DS3231=Off
SK6812 strip with 148 LEDs (switch %)
Software: ESP32_WordClockV151.ino
ESP32 Arduino core version: 3.3.5

Display choice: Hourly
Het is tien over half twee LDR: 11-> 9% 197812 1
Display choice: White
Het is tien over half twee LDR: 10-> 9% 201223 1
Display choice: All Own
Het was tien over half twee LDR: 10-> 9% 201207
Display choice: Own+
Het was tien over half twee LDR: 11-> 9% 201176
Display choice: Wheel
Het is kwart voor twee LDR: 11-> 9% 201169 1/s 1
Display choice: Hourly+
Het is kwart voor twee LDR: 11-> 9% 200537 1/s 1
Display choice: Rainbow
Het is kwart voor twee LDR: 11-> 9% 200562 1/s 1
Display choice: Yellow+
Het was kwart voor twee LDR: 11-> 9% 199284 1/s
Display choice: Hourly
Het was kwart voor twee LDR: 11-> 9% 200628 1/s

```

Clicking 'Log view' at the top of the web page launches the Log Viewer. This displays the last 500 lines printed to the serial port or the Bluetooth app.

In Chrome (December 2025), the tab can be split (right-click the tab and choose 'split tab' or something similar) to display both the web page and the log viewer. 'All log files' displays the last many thousands of lines.

When the rotary encoder or a three-button membrane button or an IR remote control is installed

A rotary control, push-button control, or remote control, along with the highly accurate DS3231 RTC clock, are optional and not required. The time is then synchronized with the internet.

These components are necessary if a clock cannot receive Wi-Fi.

In the clock menu, the rotary encoder (or three pushbuttons) can be switched on or off. If no rotary encoders, pushbuttons, or remote control are installed, disable the rotary encoder using the H00 option in the menu. (Open the longer settings menu by pressing ii). Also disable the use of the DS3231 RTC (menu option J) so that the internet time is used.

When rotary encoder is installed

The rotary knob is active for 60 seconds after pressing the button.

- Press the dial or the center button of the three push buttons.

The "HOUR" indicator will flash three times, and the hours can be set by turning the dial or pressing the up or down buttons on the three-button membrane.

- A second press of the button or the middle button will make HETISWAS flash and the minutes can be changed. Seconds are set to 0. So to be precise, set the last minute to exactly 0 seconds.
 - Pressing a third time will cause TWELVE to flash three times and the LED light intensity can be adjusted.
 - Pressing the button a fourth time will cause the NTP and RTC signs to flash three times.
- You can switch between RTC and NTP time.
- Pressing nine times will reset the clock to factory settings.

When push buttons are installed

The push buttons are activated for 60 seconds after pressing a *

Then enter the time with 6 digits as hhmmss .

For example, 134500 for a quarter to two.

After entering the 6th number ^{the} time is entered automatically.

When an IR remote control is installed

Turn on clock reception with POWER.

Use the large remote control (H03 enabled in the menu) to send the correct time using digits such as hhmmss . For example, a quarter to three would be 144500 in the afternoon or 024500 in the morning.

Or use the small remote control (H04 enabled in the menu) with the Up and Down buttons and CH+ and CH- to change the minutes and/or hours.

With ONOFF the clock illumination can be switched off or on.

Making the clock case

The construction of the clock case with lighting can be found here:

<https://ednieuw.home.xs4all.nl/Woordklok/Bouwpakket/WoordklokSK6812.htm>

or here: <https://github.com/ednieuw/Arduino-ESP32-Nano-Wordclock>

Instructions for a four-language word clock with SK6812 LEDs in UK, NL, DE, and FR with Nano . <https://github.com/ednieuw/FourLanguageClock>

Compilation and uploading

The software runs on an Arduino Nano ESP32.


This software is compiled using the Arduino IDE and uploaded to the Nano ESP32.

A compiler is available for each board that can be programmed with the Arduino IDE.

This can be selected in the board manager menu.

There are two versions available for the Arduino Nano ESP32.

One version, from Arduino itself, that uses core version 2. This version works without any problems.

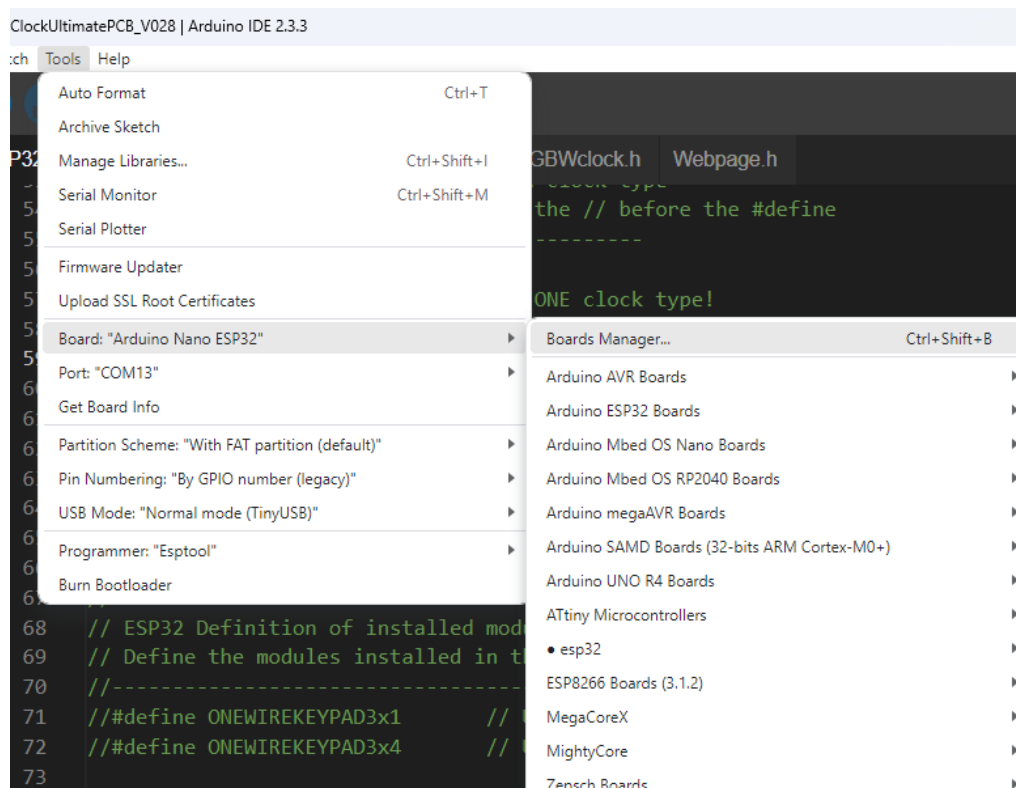

- Load the file ESP32Arduino_WordClockV0xx.INO into the IDE

In the sketch, somewhere around line 50, select one of the three word clocks by removing the two forward slashes //.

```
// #define FOURLANGUAGECLOCK
#define NL144CLOCK
```

ESP32Arduino_WoordKlokV151

```
//#define NLM1M2M3M4L114 // NL clock with four extra LEDs for the minutes to light up
```

#define NL144CLOCK -> a 144 LED single-language clock. The default language is Dutch. For French, German, and English, copy the four-language clock code between the NL144CLOCK definitions.

#define NLM1M2M3M4L114 -> a 110 LED single language clock with 4 extra LEDs for the minutes and a slightly different design

#define FOURLANGUAGECLOCK-> a 4-language clock with 625 LEDs in a 25 x 25 LED grid.

The libraries.zip file contains the libraries needed to compile the software.

Unzip them into the libraries folder. This folder is usually located between the folder containing the sketches.

Board: Arduino Nano ESP32

Partition scheme: with FAT

Pin numbering : By GPIO number (legacy)

Problems


If the LEDs do not light up, there is a good chance that the pin numbering setting (By GPIO number (legacy)) is set to By Arduino pin (default).

More than one clock has been selected in the defines around line 50

Bluetooth not working


After version ESP32Arduino_WordClockV060, NimBLE version 2.0 must be used.

For version ESP32Arduino_WordClockV060 only NimBLE version 1.4.3 works

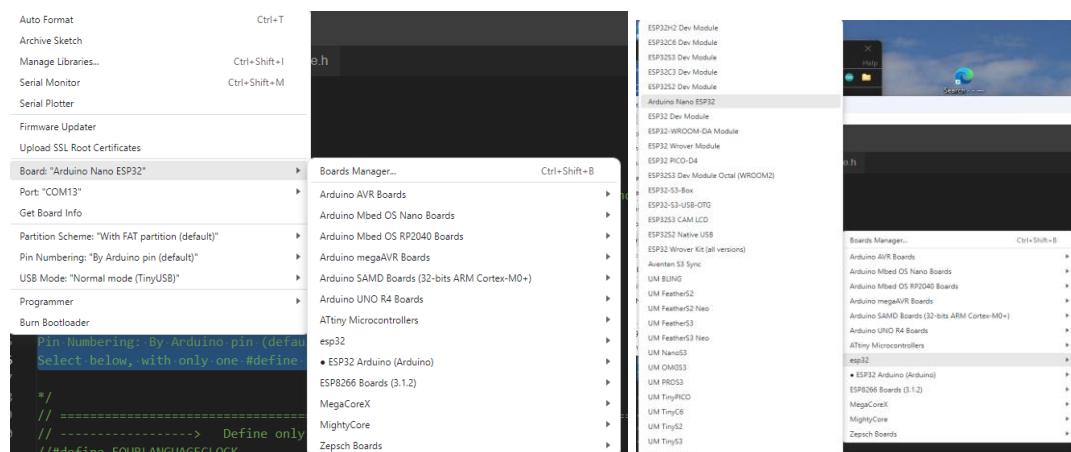

If this does not work, try the ' Alternative software installation' method .

Alternative software installation

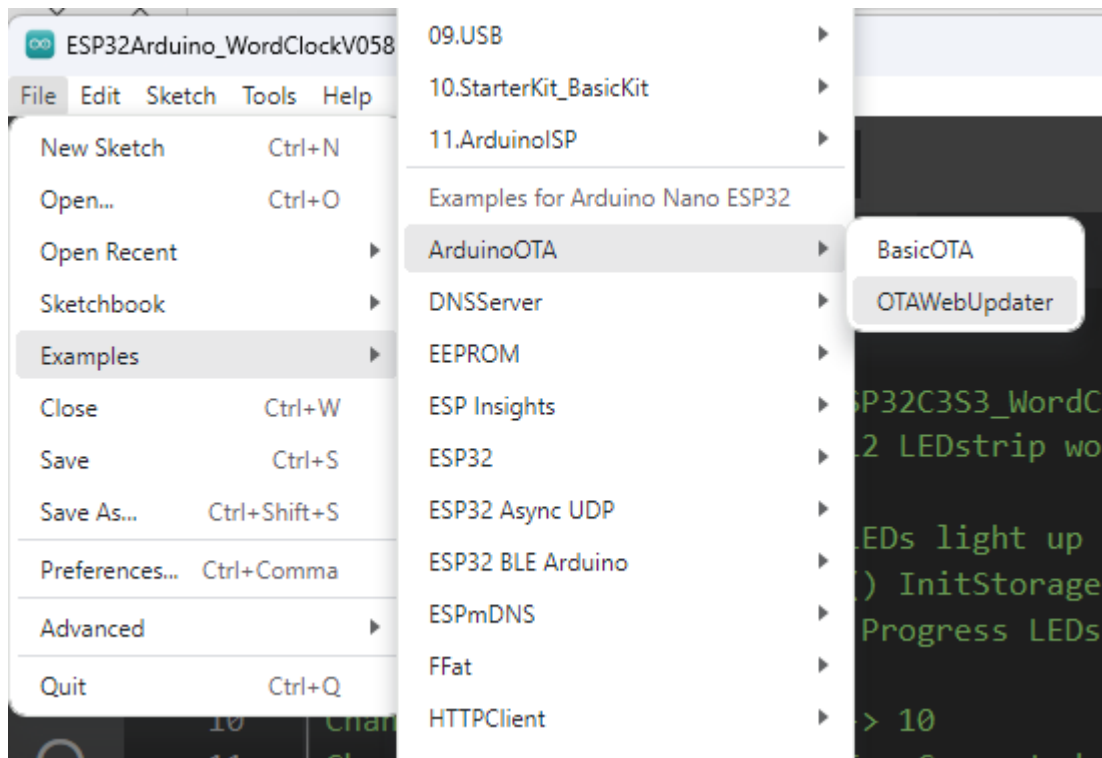

As described further on, software can also be installed 'Over the Air' on the Nano ESP32.

The advantage is that you don't have to install the libraries and in a few years you won't have problems with incompatible libraries .

Compiling is then complete, and the file uploaded to the Nano ESP32 is saved as a .bin file. Various .bin file versions can be found on GitHub.

<https://github.com/ednieuw/Arduino-ESP32-Nano-Wordclock>

- Select the Nano ESP32 as the board (Tools->Board- ArduinoESPboards ->Arduino Nano ESP32)
- Examples , search for ArduinoOTA -> and open the OTAWebUpdater program
- Choose Sketch->Upload or press the upload button at the top left
- Open the serial monitor and see which IP address is printed.
(If nothing prints, press the white reset button on the Nano ESP32.)
- Enter this IP address into the URL of a browser (eg : 192.168.0.123)
- Login with admin and with password admin
- Find the .bin file and press update
(For example 'ESP32Arduino_WordClockV057.inoNL114.bin' This is version V057 with settings for the NL114 clock)

Operating the clock

To connect to a Wi-Fi network, you must enter an SSID (Wi-Fi name) and password.

There are a few methods:

Connect the MCU in the clock to a PC with a micro-USB-serial cable and use a serial terminal.

Use a BLE serial terminal app on a phone or tablet to connect.

For a PC, the Serial monitor in the Arduino IDE is recommended.

For iOS use: **BLE Serial Pro** or **BLESerial nRF**.

For Android use: **Serial Bluetooth terminal**.

Bluetooth Low Energy (BLE) can use two protocols: CC25nn or nRF52nn, where nn is a specific number. This clock uses nRF52.

- Launch the app and initiate a connection with the clock. Some apps automatically launch with a connection window, but others require pressing a connection icon. There will likely be one station, the word clock, to select from.


- Select the clock from the list.

The app will display a window and a line where you can enter and send commands to the clock.

- Pressing the letter **I** or **i** for information displays the menu, followed by the actual settings for various preferences. A single "i" displays the short menu. Double "ii" displays a longer menu with many clock settings.

The clock has an LED with a red dot that lights up when the program is running.

A green dot lights up when a Wi-Fi connection is established. When a Bluetooth connection is established, a blue dot lights up in the LED.

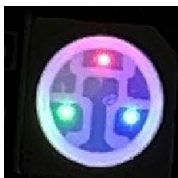


In both cases, **press the letter i for Information and the short menu will appear**.

The long menu will appear with ii

Enter the first letter of the setting you want to change, followed by a code.

Some items only toggle between On and Off. For example, enter W to turn Wi-Fi On or Off.

To change the SSID and password:

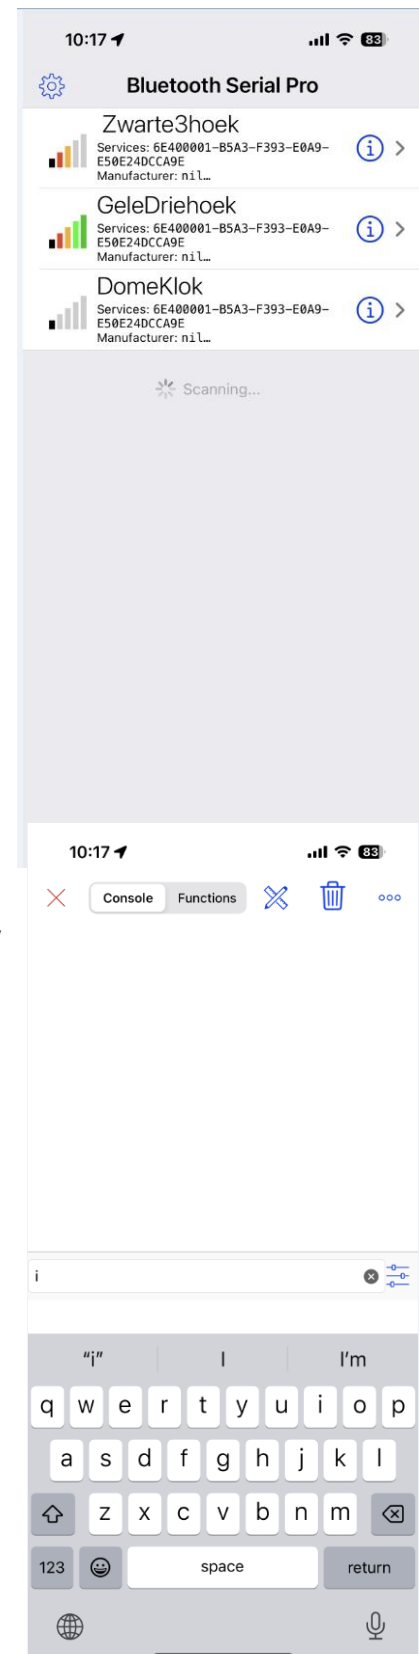

Enter **A** or **a** followed by the Wi-Fi station's name and **B** or **b** followed by the password.

Amy-SSID and send this command. For example, AFRITZ!Box01 or aFRITZ!Box01. It doesn't matter whether it's uppercase or lowercase.

Then follows the letter B with the password. **Bmypassword** and send the password.

Cbroadcastname changes to the name that appears in the Bluetooth connection list. For example, something like: cWordClock

If the length of the SSID and/or password is less than 5 characters, the WIFI will be automatically turned off.

Use a minimum of 8 characters for the SSID and password.

Check in the menu (third line from the bottom) that Wi-Fi and NTP are enabled.

Enter @ to restart the Nano ESP32.

It will restart and connect.

Sometimes the clock needs to be reset a second or third time before it can connect to Wi-Fi. If the connection still isn't established, check the password you entered.

When WIFI is connected, the LED on the Nano ESP32 will flash green.

F Own colour (Hex FWWRRGGBB)
 I Menu, II long menu
 N Display off between Nhhhh (N2208)
 O Display On/Off
 Q Display color choice (Q0)
 R Reset settings, @ Restart

Display off between: 10pm - 8am
 Display choice: Rainbow
 RandomDisplay is OFF
 Slope: 30 Min: 20 Max: 255
 BLE name: ESP32Test
 IP address: 192.168.178.172/update
 WIFI=On NTP=On BLE=On FastBLE =Off
 15/10/2025 09:08:18

A SSID B Password C BLE beacon name
 D Date (D15012021) T Time (T132145)
 E Timezone (E<-02>2 or E<+01>-1)
 F Own colour (Hex FWWRRGGBB)
 G Scan WIFI networks
 H H001 rotary, H002 membrane (H000)
 I Info menu, II long menu
 J DS3231 RTC module On/Off
 K LDR reads/sec On/Off
 N Display off between Nhhhh (N2208)
 O Display On/Off
 P Status LED On/Off
 Q Display choice (Q0) ~ Changing
 R Reset settings, @ Restart
 U Demo (msec) (U200) Y LED test
 S Slope, L Min, M Max (S50 L5 M200)
 W WIFI X NTP& Z WPS CCC BLE + Fast BLE
 #nnn Selftest, RTC: ! See, & Update
) HETISWAS On/Off, (EdSoft On/Off
 Ed Nieuwenhuys Oct 2025

Display off between: 10pm - 8am
 Display choice: Rainbow
 RandomDisplay is OFF
 Slope: 30 Min: 20 Max: 255
 SSID: FRITZ!BoxEd
 BLE name: ESP32Test
 IP address: 192.168.178.172/update
 Timezone:CET-1CEST,M3.5.0,M10.5.0/3
 WIFI=On NTP=On BLE=On FastBLE =Off
 Rotary=Off Membrane=Off DS3231=Off
 WS2812 strip with 148 LEDs (switch %)
 Software: ESP32_WordClockV116.ino

Short (i) and long (ii) menu display

By default, the time zone is set to Amsterdam time.

A reset using the R option in the menu will return the time zone to Amsterdam. To set a different time zone, send the timezone string, preceded by the character E or e. Many time zones are printed at the bottom of this manual.

For example, if you live in Australia/Sydney, send the string, eAEST-10AEDT,M10.1.0,M4.1.0/3.

The clock uses Daylight Savings Time (DST) when connected to an NTP server, but not when the DS3231 time module is used

ESP32-Nano Word Clock

[Home](#) [Manual UK](#) [Manual NL](#) [ednieuw.nl](#)
[Log view](#) [All log files](#)

Send

29-Dec-2025 15:02:45

A SSID B Password , C BLE beacon name
D Date (D15012021), T Time (T132145)
E Timezone (E<-02>2 or E<+01>-1)
F Own colour (FWWRRGGBB or Fwrgb)
G Scan WIFI networks
H H01 rotary H02 membrane H03 remote
} Learn IR remote
I Info menu, II long menu
J DS3231 RTC module On/Off
K LDR reads/sec On/Off
N Display off between Nhhhh (N2208)
O Display On/Off, P StatusLED On/Off
Q Display choice (Q0-9), ~ Changing
R Reset settings, @ Restart
S Slope, L Min, M Max (S50 L5 M200)
Unnn Demo (U200 msec), Y LED test
) HETISWAS On/Off, (EdSoft On/Off
#nnn Selftest, RTC: ! See, & Update
W WIFI X NTP Z WPS CCC BLE + Fast BLE
Ed Nieuwenhuys Nov 2025

Display off between: 00h - 00h
Display choice: White
RandomDisplay:On/min, Timestamp Off
Slope: 50 Min: 5 Max: 255
SSID: FRITZ!BoxEd
BLE name: Steelclock01
IP-address: 192.168.178.40 [/update](#)
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On FastBLE=Off
No Rotary, DS3231=Off
SK6812 strip with 148 LEDs (switch %)
Software: ESP32_WordClockV151.ino
ESP32 Arduino core version: 3.3.5

A SSID B Password , C BLE beacon name
D Date (D15012021), T Time (T132145)
E Timezone (E<-02>2 or E<+01>-1)
F Own colour (FWWRRGGBB or Fwrgb)
G Scan WIFI networks
H H01 rotary H02 membrane H03 remote
} Learn IR remote
I Info menu, II long menu
J DS3231 RTC module On/Off
K LDR reads/sec On/Off
N Display off between Nhhhh (N2208)
O Display On/Off, P StatusLED On/Off
Q Display choice (Q0-9), ~ Changing
R Reset settings, @ Restart
S Slope, L Min, M Max (S50 L5 M200)
Unnn Demo (U200 msec), Y LED test
) HETISWAS On/Off, (EdSoft On/Off
#nnn Selftest, RTC: ! See, & Update
W WIFI X NTP Z WPS CCC BLE + Fast BLE
Ed Nieuwenhuys Nov 2025

Display off between: 22h - 08h
Display choice: Yellow+
RandomDisplay is OFF
Slope: 80 Min: 5 Max: 10
SSID: FRITZ!BoxEd
BLE name: ESPredPCB
IP-address: 192.168.178.172/update
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On FastBLE=Off
No Rotary DS3231=Off
WS2812 strip with 148 LEDs (switch %)
Software: ESP32_WordClockV126.ino
ESP32 Arduino core version: 3.3.3
11/11/2025 16:41:18

HTML page

" Serial monitor" screen from a PC

Using the remote control

The clock can be equipped with an infrared (IR) receiver. Using a suitable remote control, you can set the time and select one of the many color schemes the clock can display.

- In the menu on the PC or BLE app, turn on the IR remote control using H03 or H04 for a smaller IR remote control. This has fewer codes:
MIN-1, MIN+1, HOUR-1, HOUR+1, POWER, ONOFF.
- Restart the clock with @.
- Send { to teach the clock the remote control key codes.

Not all remotes will work.

- The software will ask you to press the following keys.

"0", "1", "2", "3", "4", "5", "6", "7", "8", "9", "UP", "DOWN", "LEFT", "RIGHT", "POWER", "OK", "ONOFF"

If a specific key isn't on your keyboard, choose a similar one.

For example, choose the Source button when prompted to press ONOFF.

Do not use the same key for different codes.

```

=== Starting Learning Mode ===
Please press button: 0
Learning IR started
It is five past half past twelve LDR:110= 3% 173860 1/s 12:36:40
=== Starting Learning Mode ===
Please press button: 0
Learning IR started
It is five past half past twelve LDR:110= 3% 173860 1/s 12:36:40

Remote identified - Protocol: NEC, Address: 0xBD00
✓ Learned '0' - Protocol: NEC, Command: 0x0041, Address: 0xBD00
Please press button: 1
✓ Learned '1' - Protocol: NEC, Command: 0x0015, Address: 0xBD00
Please press button: 2
✓ Learned '2' - Protocol: NEC, Command: 0x0016, Address: 0xBD00
Please press button: 3
✓ Learned '3' - Protocol: NEC, Command: 0x0017, Address: 0xBD00
...

Please press button: ONOFF
✓ Learned 'ONOFF' - Protocol: NEC, Command: 0x0008, Address: 0xBD00

===Learning Complete & Saved! ===

Stored Button Mappings:

```

IR Remote Address	: 0xBD00
IR Remote Protocol	: NEC

0	-> Cmd : 0x0041
5	-> Cmd : 0x001A
6	-> Cmd : 0x001B
7	-> Cmd : 0x001D
8	-> Cmd : 0x001E
9	-> Cmd : 0x001F
UP	-> Cmd : 0x000B
DOWN	-> Cmd : 0x000F
LEFT	-> Cmd : 0x0049
RIGHT	-> Cmd : 0x004A
POWER	-> Cmd : 0x0001
OK	-> Cmd : 0x000D
ONOFF	-> Cmd : 0x0008

ESP32Arduino_WoordKlokV151

=== Now in Recognition Mode ===

Only responding to remote with Address: 0xBD00

Press any learned button to test....

Press POWER to process the key presses at a time. POWER ON

Press POWER again to stop time entry. POWER OFF

With POWER OFF the digits will change the Display choice

- Press POWERON to set the time.
- Enter six numbers as hhmmss .
For example, a quarter to four in the afternoon: 154500
- or use UP and DOWN to adjust the HOUR up or down and LEFT and RIGHT to adjust the minutes up or down.
- Press POWER again to stop time entry.
After 5 minutes, the POWER will automatically turn off.
- With the large remote control, the number keys can be used to change the clock's color display (option Q in the menu). With both the large and small remote controls, the ONOFF key turns the display on or off.

Clock settings

The clock's settings can be controlled via the Wi-Fi webpage or the Bluetooth BLE terminal app.

When the clock is connected to Wi-Fi, it receives an IP address from the router it's connected to.

The IP address is printed in the menu.

To start the menu as a web page, the IP address of the clock must be entered into a web browser (for example: 192.168.178.77)

local instead as a URL in the browser. (Default after a reset: wordclock.local)


Or use a Bluetooth connection:

- Open the BLE Terminal app. - In the app, find the clock to connect to and connect.

Each app has its own way of displaying the Bluetooth device to connect to.

The iPhone/iPad/iMac BLE serial apps are my own and work with their default settings. Other apps may need to change the settings for sending and receiving data. Play around with the font size and the CR and LF settings until you can speed up the transfer speed on an iPhone, iPad, or iMac with the BLE serial app by selecting the "+ Fast BLE" option in the menu

Unfortunately, some apps can't read strings longer than 20 characters, and you'll see them truncated or garbled.

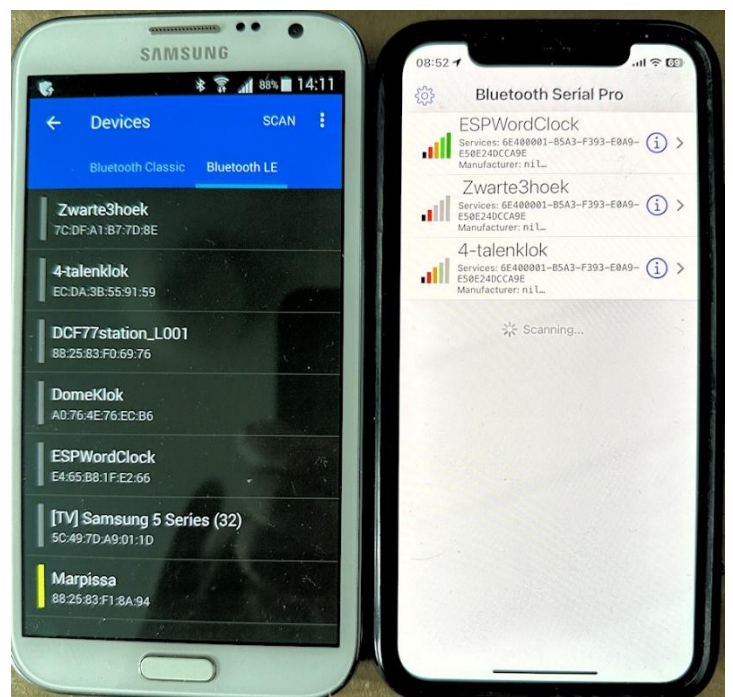

If lines are printed incompletely, enter a "+" to select a slower transmission mode.
If the transmission is too garbled and it's impossible to send the + sign, try the clock's webpage and send a + sign.

If all else fails, you should connect the Arduino Nano ESP32 in the clock to a PC with a USB-C cable and use the Arduino IDE to send a + or send the letter R to reset the clock to its default settings.

Adjust the display light intensity

In the menu the light intensity of the display can be adjusted with three parameters:

--Light intensity settings (1-250)--

S=Slope L=Min M=Max (S80 L5 M200)

Default values are shown in ().



LDR

S Controls how quickly the light output of the LEDs reaches maximum brightness.

L How bright the screen remains in complete darkness.

M the maximum brightness of the screen .

The lower half of the menu displays the saved values

Slope: 80 Min: 5 Max: 255

The clock responds to light with its LDR (light dependent resistor).

When it gets dark, the display doesn't turn off completely but remains dimmed at a minimum value. The


L parameter controls the minimum brightness. This brightness can be set between 0 and 255.

L5 is the default value.

The maximum display brightness is controlled by the **M parameter** . It also has a value between 0 and 255. By default, it is set to a maximum of 255.

Parameter **S** controls the slope of how quickly the display reaches maximum brightness.

These values also vary between 0 and 255. By default, it is set to 80.

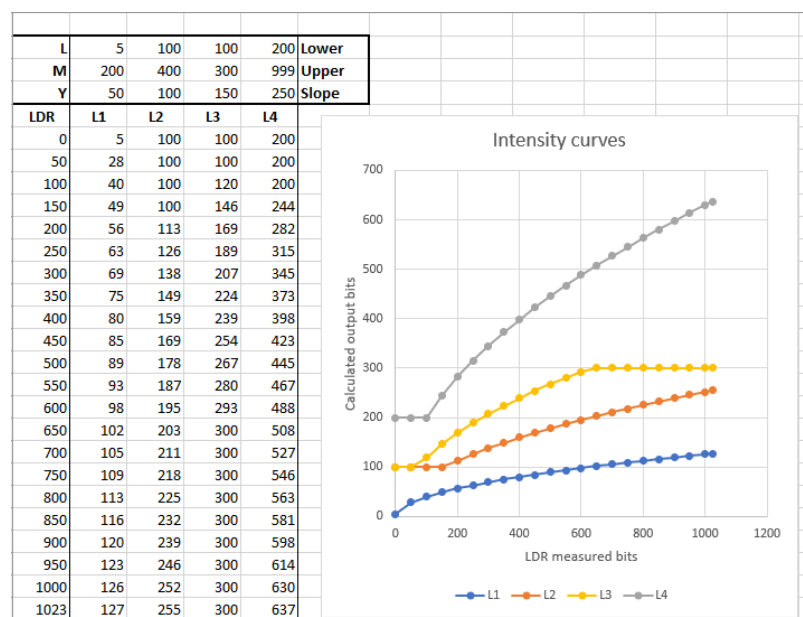

Settings are set by entering the first character of a command, followed by parameters if necessary.

For example:


To set the color of the words on the clock to white, enter: Q2

To turn the clock off between 10pm and 8am send: n2208

Turn off WIFI by sending a W.

Restart the clock by sending the letter @.

Reset to default setting by sending R.

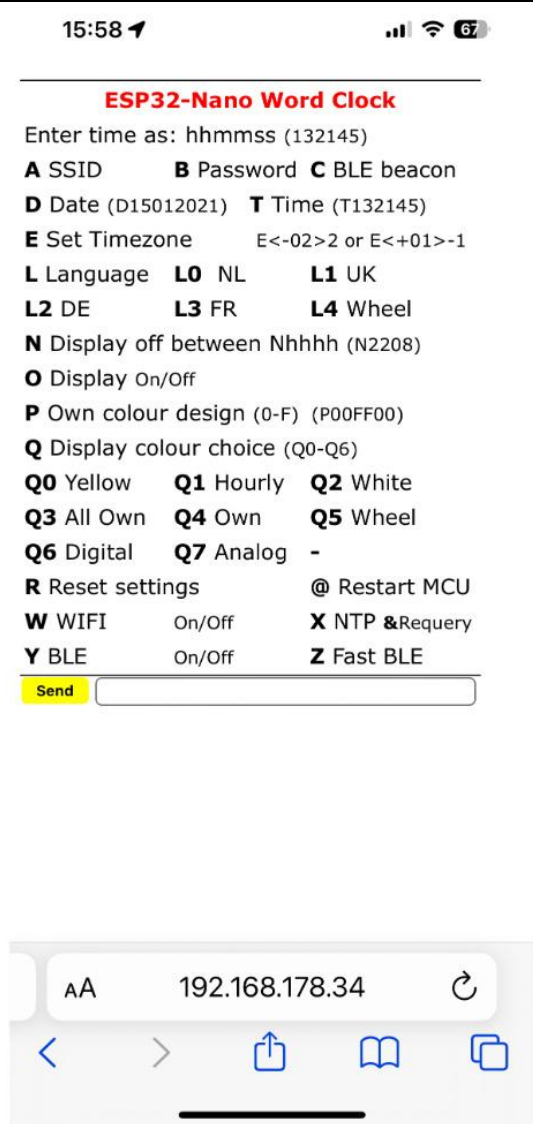

ESP32-Nano Word Clock

Enter time as: hhmmss (132145)

A SSID **B** Password **C** BLE beacon

D Date (D15012021) **T** Time (T132145)

E Set Timezone E<-02>2 or E<+01>-1

L Language **L0** NL **L1** UK

L2 DE **L3** FR **L4** Wheel

N Display off between Nhhhh (N2208)

O Display On/Off

P Own colour design (0-F) (P00FF00)

Q Display colour choice (Q0-Q6)

Q0 Yellow **Q1** Hourly **Q2** White

Q3 All Own **Q4** Own **Q5** Wheel


Q6 Digital **Q7** Analog -

R Reset settings @ Restart MCU

W WIFI On/Off **X** NTP &Requery

Y BLE On/Off **Z** Fast BLE

Send

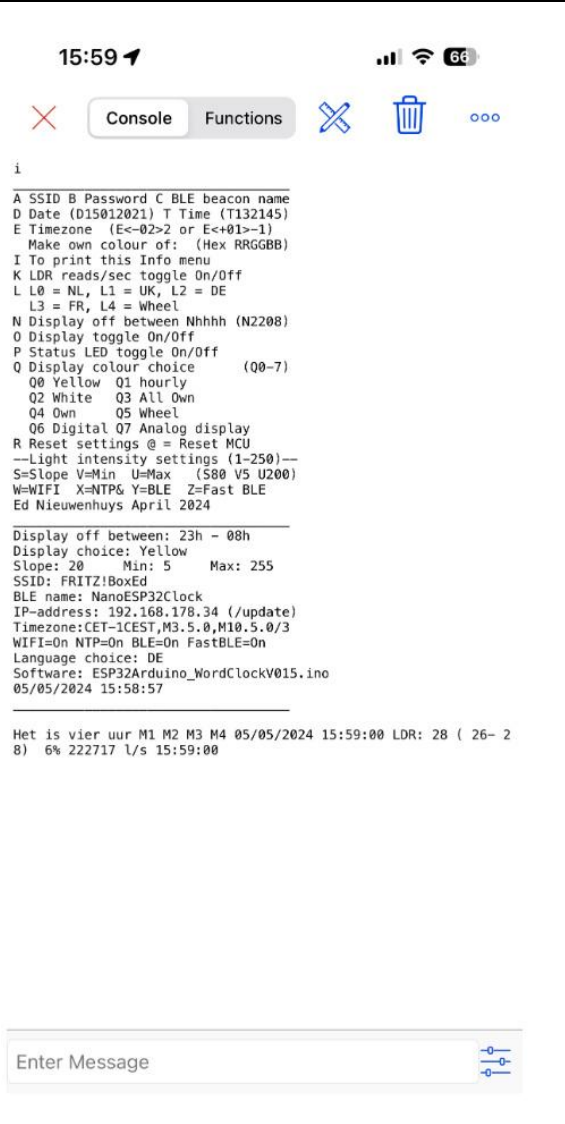

ESP32-Nano Word Clock

Enter time as: hhmmss (132145)

A SSID **B** Password **C** BLE beacon

D Date (D15012021) **T** Time (T132145)

E Set Timezone E<-02>2 or E<+01>-1

L Language **L0** NL **L1** UK

L2 DE **L3** FR **L4** Wheel

N Display off between Nhhhh (N2208)

O Display On/Off

P Own colour design (0-F) (P00FF00)

Q Display colour choice (Q0-Q6)

Q0 Yellow **Q1** Hourly **Q2** White

Q3 All Own **Q4** Own **Q5** Wheel

Q6 Digital **Q7** Analog -

R Reset settings @ Restart MCU

W WIFI On/Off **X** NTP &Requery

Y BLE On/Off **Z** Fast BLE

Send

HTML page

BLE menu

Update the software

The software can be updated over the air when the clock is connected to Wi-Fi. The IP address is listed in the menu.

Enter the IP address of the clock directly, without a space, followed by /update.

Something like this: 192.168.178.141/update.


Or use: <http://BLEbroadcastname.local/update> instead of the IP address.

In this case: redpcbv01.local/update.

(Sometimes <http://> can be omitted.)

```
# Self test, ! See RTC, & Update RTC
Ed Nieuwenhuys November 2024


Display off between: 23h - 08h
Display choice: Yellow
Slope: 10      Min: 5      Max: 255
SSID: FRITZ!BoxEd
BLE name: RedPCBV01
IP-address: 192.168.178.141 (/update)
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
```

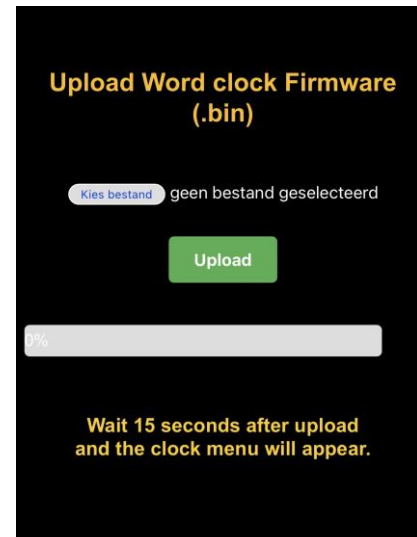

From the menu, select 'Choose File' and select the bin file you want to update.

Something like: ESP32Arduino_WordClockV100.ino.bin

where V100 is the software version number.

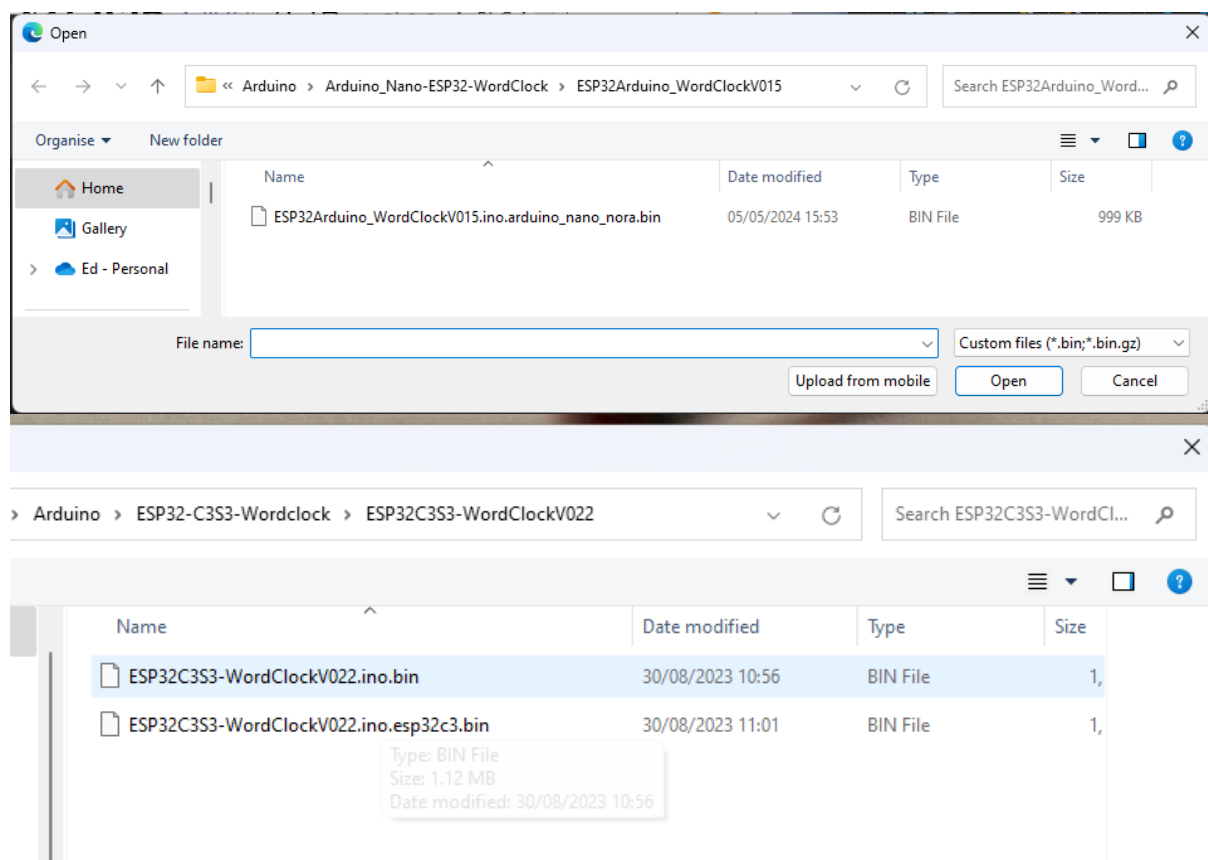

Detailed menu description:

The menu allows you to set many preferences. These preferences are stored in the ESP32 storage and are retained during power failures.

Enter the first character in the menu for the item to be modified, followed by the parameter.

For example, N2208 to turn off the clock light between 10:00 PM and 8:00 AM.

Uppercase and lowercase letters are not distinguished; both are acceptable.

When the clock is started and connected to a PC using a USC-C serial cable, the startup log data is printed in the Arduino IDE's serial terminal.

```
Serial started
Rotary NOT used
Rotary available
Found I2C address: 0X57
Found I2C address: 0X68
External RTC module IS found
DS3231 RTC software started
Mem.Checksum = 25065
Stored settings loaded
LED strip is SK6812
LED strip started
BLE started
10: networks found
1: FRITZ!BoxEd -47 * -- Will connect to
2: NETGEAR_EXT -69
3: FRITZ!BoxEd -71 * -- Will connect to
4: H369A209CE1 -75 *
5: H3baas -81 *
6: H369A209CE1 -81 *
7: FRITZ!Box -82 *
8: H369A209CE1 -83 *
9: FRITZ!Box 5490 IS -83 *
10: FRITZ!Box 5490 XL -84 *
[ WiFi -event] event: 0 : WiFi interface ready
[ WiFi -event] event: 2 : WiFi client started
[ WiFi -event] event: 4 : Connected to access point
[ WiFi -event] event: 7 : Obtained IP address: 192.168.178.199
IP Address: 192.168.178.199
Web page started
WIFI started
01/01/2000 00:06:42
```

```
A SSID B Password C BLE beacon name
D Date (D15012021) T Time (T132145)
E Timezone (E<-02>2 or E<+01>-1)
F Own colour (Hex FWWRRGGBB)
G Scan WIFI networks
H H001 rotary, H002 membrane (H000)
I Info menu , II long menu
J Toggle use DS3231 RTC module
K LDR reads/sec toggle On/Off
N Display off between Nhhhh (N2208)
O Display toggle On/Off
P Status LED toggle On/Off
Q Display color choice (Q0)
R Reset settings, @ = Reset MCU
U Demo (msec) (U200) Y LED test
--Light intensity settings (1-250)--
S Slope , L Min, M Max (S50 L5 M200)
W WIFI X NTP& Z WPS CCC BLE + Fast BLE
#nnn Selftest , RTC: ! See, & Update
Ed Nieuwenhuys April 2025
```

A SSID B Password C BLE beacon name

Enter the SSID and password of the router the clock should connect to.

The Bluetooth broadcast name displayed in the Bluetooth Serial Terminal app can be changed.

For example: **a** FRITZ!Box or **A** FRITZ!Box .

Then enter the password. For example: **B** password .

If necessary, enter **c** Bluetooth Name (default after a reset: wordclock)

Restart the clock by sending @ .

CCC Entering CCC or ccc enables or disables BLE.

Be careful when turning it off. If BLE is disabled, the clock can only be controlled via Wi-Fi or the USB-serial port.

D Set Date and T Set Time

If there's no Wi-Fi time connection and an RTC DS3231 is connected, the date must be set manually.

For example, enter: D06112022 to set the date to November 6, 2022.

For example, enter T132145 (or 132145, or t132145) to set the time to 45 seconds and 21 minutes past one.

Changing the date and time only works if Wi-Fi and NTP are disabled.

E Set time zone E<-02>2 or E<+01>-1

At the bottom of this page are the time zones in use in 2022.

It's a pretty complicated string, so it's wise to copy it.

Let's choose one if you live here: Antarctica/ Troll , "<+00>0<+02>-2,M3.5.0/1,M10.5.0/3"

Copy the string between the " "'s and send it starting with an 'E' or 'e' in front of it.

E<+00>0<+02>-2,M3.5.0/1,M10.5.0/3

F Own color (Hex WWRRGGBB or Fwrgb)

(Type 0xff00ff in a browser to make colors hexadecimal on a website of your choice)
Or, if you can't handle hexadecimal, enter a decimal number between 0 and 9 after the F for White, Red, Green, and Blue, respectively.
0 is off and 9 is 100% on. F0900 is red, F0009 is blue, and F0920 is orange-red.
With the hexadecimal colors there is a choice of 255 gradations instead of the current 10.

The color of the words displayed in the clock can be customized and can be selected using option Q3 or Q4 in the menu.

The format to be entered is hexadecimal. 0123456789ABCDEF are the characters that can be used.

The command consists of 2 numbers for white followed by 2 numbers for Red followed by 2 for Green and ending with 2 numbers for Blue.

color the letters intense green, enter **F 00 00 FF 00** , preceded by the letter F. To color the letters intense red, enter FF0000, preceded by the character F.

F 00 00 00 FF

To set intense blue, enter F00000FF.

For example: F8800FF00 is 50% white and 100% green.

In short: 00 is LED off, 44 is 25%, 88 is 50%, BB is 75%, and FF is 100%.

WS2812 LED strips do not have a white LED and the command to control the white has no effect.

The SK6812 LEDs have an extra white LED (yellow area) next to the three RGB LEDs.

Which LEDs are mounted in the clock is shown at the bottom of the long menu (ii)

WS2812 strip with 148 LEDs (switch %)



G Scan for nearby WIFI networks

Sending 'G' will print the available nearby networks in the Bluetooth BLE terminal.

H H01 rotary H02 buttons H03/04 remote

By sending ' Hnn ' you can select whether an optional rotary knob (**H01**), a (membrane) push button (**H02**), or a remote control will be used to set the time and date.

The internal, then mandatory, DS3231 RTC will then be automatically switched on and the NTP time will be switched off.

H03 is a large remote control with numbers and **H04** is for a small version without numbers.

H00 option if the input is not being used to prevent accidental input.

After a Factory Reset, the usage of this setting is left unchanged.

Learn IR remote

To use a remote control, the clock must first learn the infrared code a button sends.
Not all remote controls can be programmed.

With option **H03** , the large remote control, the following keys are programmed:

"0", "1", "2", "3", "4", "5", "6", "7", "8", "9", "UP", "DOWN", "LEFT", "RIGHT", "POWER", "OK", "ONOFF".

When the POWER button is not pressed, the keys "0", "1", "2", "3", "4", "5", "6", "7", "8", and "9" select the display modes. The Q codes in the menu. For example, Q2 is white.

The "ONOFF" key switches the clock light on or off.

When the POWER button is pressed, the time can be entered using the number keys for five minutes. After five minutes, the POWER button automatically turns off to prevent accidental changes to the time.

Enter six numbers + "OK".

Press 153612 + "OK" for 15 hours, 36 minutes and 12 seconds

Or simpler:

Press "UP", "DOWN" to decrease or increase the hours and

Press "LEFT", "RIGHT" to decrease or increase minutes.

With a small remote control (**H04**) it works as follows:

The "ONOFF" key switches the clock light on or off.

Press "POWER" and then the MIN-1, "MIN+1", "HOUR-1", and "HOUR+1" keys to adjust the time.

1 or 2 to display the information menu

. Print the menu.

Option I (i) in the menu selects a short menu for everyday use or option II (2x i) for a long menu with all options.

J Switch to use the time from the DS3231 module

Sending 'Y' toggles the use of the optional DS3231 time module ON or OFF.

When the time from the DS3231 RTC module is used, the yellow LED near the USB connector on the Nano ESP32 will stop flashing. If the clock is not connected to the internet, the time will expire quickly.

Using the DS3231 time module reduces the deviation to a few seconds per year.

The time can be entered into the DS3231 time module using option T (time) and D (date) in the menu.

If the time isn't visible, send the ! command to see the internal clock times.

Toggle K Reads/sec

By entering a K the LDR reading of the measured light intensity per second can be monitored.

It also shows how many times per second (l/s) the processor is running through the program and checking its tasks to keep the clock running.

```
TestLDR : On
LDR reading, %Out, loops per second and time
LDR: 1= 1% 205413 l/s 16:06:08
LDR: 1= 1% 215535 l/s 16:06:09
LDR: 1= 1% 215451 l/s 16:06:10
```

ESP32Arduino_WoordKlokV151
LDR: 1= 1% 215350 1/s 16:06:11
TestLDR : Off

By default, the time is printed in the logs every minute. The web page can display thousands of log lines. Logging per minute can be switched on or off with K1, and per hour with K2.

The long menu (ii) will then display Timestamp/min, Timestamp/ hour , or Timestamp off.

N Display off between Nhhhh (N2208)

N2208 turns off the display between 22:00 and 08:00.

O Switch display on/off

O Switches the display off and on.

Turn

status LEDs on and off P Turns the status LEDs on the Arduino Nano on and off.

Q Display color selection (Q0-9)

Q0 displays the time with yellow words

and IT (or THE) will change from green to yellow to red within an hour.

and will change IS or WAS from green to red to yellow within a minute.

Q1 will display a different color every hour.

Q2 displays all text in white.

Q3 uses custom-defined colors.

(The colors can be set with option F in the menu)

Q4 uses its own defined colors. (IT IS/WAS changes color from green to red.)

Q5 will cycle through the rainbow colors in an hour.

Q6 is a digital display

Q7 will display a different color every hour. (IT IS/WAS changes color from green to red.)

Q8 will go through the rainbow colors in 4 minutes.

Q9 will cycle through the rainbow colors in 15 seconds.

R Reset Settings

R resets all preferences to their default settings.

The SSID, password, BLE name, and time zone are not cleared.

RRR does clear the last four. Wi-Fi, NTP, and BLE are enabled.

RRRRR is a combination of the R and RRR options.

The LED strip type and the use of a rotary or membrane button remain unchanged.

Perform a reset with RRRRR, a total reset, when the sketch is first uploaded to the Arduino Nano ESP32.

S = Slope L = Min M = Max (S50 L5 M200)

S How quickly the brightness reaches maximum brightness.

L How bright the display is in complete darkness. M The maximum brightness of the display.

Values between 0 and 250

U Demo Mode (msec) (U200)

Enter U followed by the duration of a second in milliseconds.

U200 (200 milliseconds) speeds up the clock 5 times.

Sending only a U will disable demo mode.

W=WIFI, X=NTP & , CCC=BLE

Turn WIFI and NTP on and off.

Enter the character to enable or disable the option.

It is indicated at the bottom of the menu.

```
Display off: 00h - 00h
Display choice: Yellow
      SSID: FRITZ!BoxEd
      BLE name: ESPWordClock
      IP-address: 192.168.178.78
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On FastBLE=On
Language choice: Rotate language
0 1 2 3 4 5 6 7 8 9 A B C D E F
```

Sending an & will set the NTP time into the internal Nano ESP32 RTC and DS3231 time module.

Y LED test

All LEDs will go through a rainbow.

Z WPS

WPS is a method for obtaining the password and the Wi-Fi access point's name (SSID) from the router.

If the Wi-Fi router has a WPS button, the clock can be connected to the internet without having to enter the router's name and password.

Start WPS on the clock by entering Z in the menu, and then start WPS on the Wi-Fi router. If all goes well, the clock will restart and the time will be correct.

Sometimes you need to hold the WPS button on the router for a few seconds.

How to start WPS differs per router.

+ = Fast BLE

The BLE UART protocol sends Standard packets are 20 bytes long. There is a 50 msec delay between each packet .

The iOS BLEserial app, and perhaps others, can receive packets of 80 bytes or more before missing any characters. This allows the menu to print faster.

Option + toggles between long and short packets.

~ = Change display mode per minute or hour

~ Starts the display mode change option and changes every minute.

~1 changes the display mode every minute.

~2 changes the display mode every hour.

~0 or ~ disables the toggle option.

In the long menu (ii) you will then see RandomDisplay : On/min, On/ hour or Off

! = Show NTP, RTC, and DS3231 time

! will display the NTP, RTC, and DS3231 time as stored in the clock. The DS3231 time module must be installed for the module to display a realistic time.

The same as the & option, but this option will not be updated from the internet NTP server; it only displays the time.

#nnn = Selftest

Sending a # will start the clock self-test. This is useful for checking that all words in the clock are functioning.

Starting in V062, #nnnn is also possible. Nnnn is the millisecond delay between each word.

The self-test will stop automatically after one cycle.

% = Switch between SK6812 and WS2812 LED strips

. This option allows you to switch the LED strip in use. The clock is equipped with one of these two types of LED strips.

Resetting all settings by sending an R in the menu does not change the LED strip selection.

\$ = Fireplace

Displays a fireplace on a 144 LED clock . The result will be less attractive on other types of clocks.

(= Turns additional optional LEDs On/Off

The clock can optionally be equipped with an additional logo text.

) = Turns IT/IS/WAS On/Off

IT WAS always remains out

= = Shows the permanent setting.

The = option prints all settings.

@ = Restart the clock

@ restarts the clock. This is useful if the SSID, etc., changes and the program needs to be restarted.

Settings are preserved.

& = Update with NTP

Synchronizes the RTC module with the NTP time

The RTC time module in the clock can control the time. The T and D menu options allow you to manually enter the time and date.

This option copies the NTP time to the RTC module.

The computer inside the clock has its own internal clock. This clock moves forward seconds per day and is regularly updated with the NTP time or the DS3231 RTC time module. If NTP and the DS3231 RTC time module are disabled, the clock will still display the time, but after a few days, it will become out of sync with the correct time.

123456 Setting the time in the DS3231 RTC time module

Enter the time as 152300 hhmmss . Same as T152300.

Changing the date and time only works if NTP is disabled.

Time zones

For the Netherlands and Belgium send: eCET-1CEST, M3.5.0, M10.5.0/3