


ESP32-C3 Pocuter word watch

A small watch that displays the time in words in Dutch, English, French and German or digital on a tiny display.

The watch is able to receive time via NTP from the internet.

Settings can be controlled via a webpage, PC and Bluetooth LE.


If the watch is used stand-alone, without connections, it can be controlled with buttons.

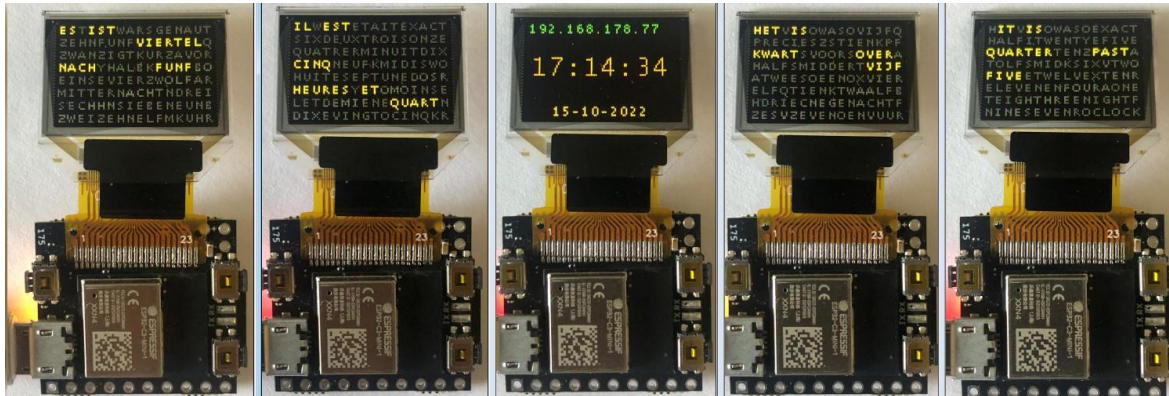

The watch is built in a Pocuter One equipped with a ESP32-C3 chip and SSD1131 OLED display built by www.pocuter.com

Het was tien over tien 10:13:00
Il est dix heures et quart 10:14:00
Il est dix heures et quart 10:15:00
Het is kwart over tien 10:16:00
Es war viertel nach zehn 10:17:00
It was quarter past ten 10:18:00
Il est dix heures vingt 10:19:00
Es ist zehn vor halb elf 10:20:00
Het is tien voor half elf 10:21:00
It was twenty past ten 10:22:00
It was twenty past ten 10:23:00
Het is vijf voor half elf 10:24:00
Es ist funf vor halb elf 10:25:00
It is twenty five past ten 10:26:00
Es war funf vor halb elf 10:27:00

Display of the time in the serial output

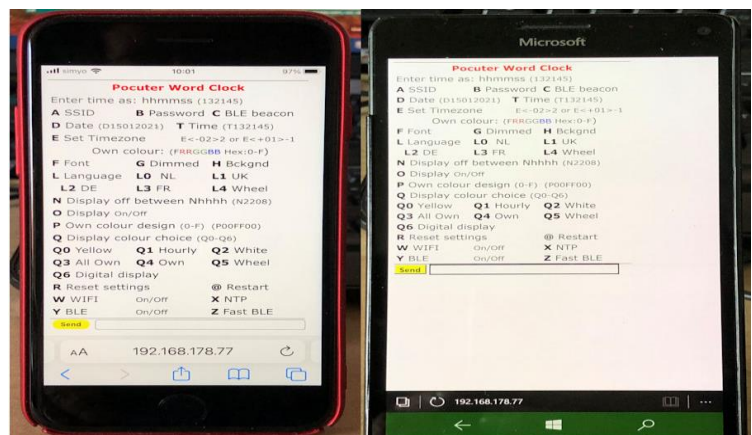

HTML page in iPhone 8 and Microsoft Phone

First Use

When the Pocuter is started and running properly the LED on the Pocuter will pulse red every second.

When connected to WIFI the same led will also pulse green.

Press the top right button to see the IP-address, time and date of the clock .

Date and IP-address will disappear as a new minute starts.

Enter the IP-address in a browser or connect via Bluetooth and send the character 'I' to see for the menu.

In the menu the name of the router to connect to, the SSID, and its password can be entered.



Installations

If the clock is connected to the internet it will seek contact with a time server.

The time zone is set to UTC+1 Amsterdam but can be changed in the menu.

To connect to a WIFI network a SSID and password must be entered.



There are a few methods:

- Connect the Pocuter with a serial cable to a PC and use a serial terminal. I use the Arduino IDE or [Termite](#) as serial terminal.
- USE the BLE nRF connection with an UART serial terminal app to control it with your mobile phone or tablet.


Use the IOS app: **BLE Serial Pro**. Turn on Fast BLE with option Z

For Android use: **Serial Bluetooth terminal**. Turn off (default) Fast BLE in the menu.

Sending the I for information will display the menu followed with the actual settings of several preferences

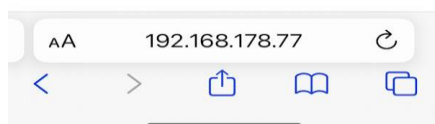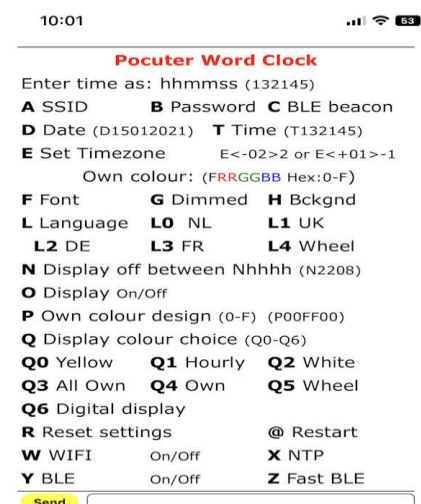

HTML page on iPhone

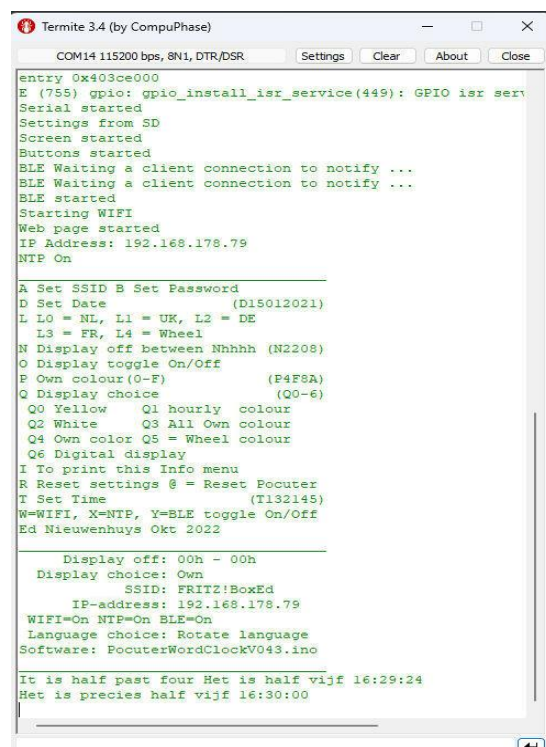

Termite Terminal from a PC

In both cases **send the letter I of Information and the menu shows up.**

Enter the first letter of the setting you want to changes followed with a code.

Some entries just toggle On and Off. Like the W to set WIFI Off or On.

To change the SSID and password:

Amy-ssid and send this command. Eg AFRTZ!Box01 or aFRITZ!Box01. Starting with an upper or lower case character is an identical instruction in the command string Then **Bmy password** and send that password.

Cbroadcastname will change to name displayed in the Bluetooth connection list.

If the length of the SSID and/or password is less then 5 characters the WIFI will be turned off automatically. This will speed up startup time if no internet connection is available

Use a length of minimal 8 characters for SSID and password.

Check in the menu (third row from the bottom) if WIFI and NTP are on.

If WIFI is connected the LED on the Pocuter will pulse green.

Enter @ to reset the Pocuter. It will restart and connections will be made.

To set a time zone. Send the time zone string between the quotes prefixed with the character E or e.

See the time zones at the bottom of this page.

For example; if you live in Australia/Sydney send the string, eAEST-10AEDT,M10.1.0,M4.1.0/3

A SSID B Password C BLE beacon name
D Set Date (D15012021)
E Set Timezone E<-02>2 or E<+01>-1
Make own colour of: (Hex RRGGBB)
F Font G Dimmed font H Bkgnd
I To print this Info menu
L L0 = NL, L1 = UK, L2 = DE
L3 = FR, L4 = Wheel
N Display off between Nhhhh (N2208)
O Display toggle On/Off
Q Display colour choice (Q0-6)
Q0 Yellow Q1 hourly
Q2 White Q3 All Own
Q4 Own Q5 Wheel
Q6 Digital display
R Reset settings @ = Reset Pocuter
T Set Time (T132145)
W=WIFI, X=NTP, Y=BLE, Z=Fast BLE
Ed Nieuwenhuys Okt 2022

Display off: 00h - 00h
Display choice: Wheel
SSID: FRITZ!BoxEd
BLE name: PocClockBlack
IP-address: 192.168.178.77
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On Fast BLE=Off
Language choice: Rotate language
Software: PocuterWordClockV050.ino

Menu shown in serial output.

Upgrading software

Software can be upgraded over the air. (OTA) by opening a web browser and entering the IP-address of the clock followed with /update.

For example: 192.168.178.78/update.

Choose firmware and click on Choose File.

Choose the appropriate bin file.

For example for software version V060FS:

PocuterWordClockV060FS.ino.esp32c3.bin

FS means a SD-card is installed in the Pocuter and Fast Screen is possible.



☒ Firmware ☐ Filesystem

Choose File No file chosen

764E76A0 - ESP32

Control and settings of the clock

If there is no WIFI connection time and digital or word clock mode can be set with the three buttons.

Check at the bottom of the menu if WIFI is OFF.

The clock will start much quicker because it will not try to connect.

```
IP-address: 192.168.178.78
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On FastBLE=On
Language choice: Rotate language
```

Top Left: + 1 hour

Right bottom: + 1 minute

Top Right: Toggle between word or digital display



As mentioned before the clock can be controlled with the WIFI webpage or BLE UART terminal app.

When the clock is connected to WIFI the IP -address is displayed in the Digital display (Press Top right button to select it).

Enter this IP -address numbers and dots (for example: 192.168.178.77) in the browser of your mobile or PC where you type your internet addresses (URL) or search items.

Or

Open the BLE terminal app. Look for the WordClock to connect to and connect.

BLE connection can be made with my app [BLE Serial pro](#) on the [app store](#) for Apple IOS devices.

For Android [nRF UART terminal program](#) and [Serial Bluetooth terminal from Kai Morich](#)

Unfortunately this Android apps can not read strings longer than 20 characters.

If you see a garbled menu enter and send the character 'Z' to select the slower transmission mode

Settings are set by entering the first character of a command following by parameters if necessary.

For example: To set the colours of the fonts in the display to white enter: Q2
To shown random all four languages every minute send L4.

Set the time by entering T130245. (130245 will also work)

Turn off WIFI by sending a W.

Reset the Pocuter with the letter @.

Reset to default setting by send R.

In the BLE connection the SSID and password will be shown.

16:30




4G 54%

Pocuter Word Clock

Enter Time as: hhmmss (132145)
A Set SSID **B** Set Password
D Set Date D15012021)
L L0 = NL, L1 = UK, L2 = DE,
L3 = FR, L4 = Wheel
N (N2208) Display off between Nhhhh
O Display toggle On/Off
P (P00FF00) own colour design (0-F)
Q Display choice (Q0-6)
Q0 = Yellow colour **Q1** = Colour hourly
Q2 = All white colour **Q3** = All Own colour
Q4 = Own colour **Q5** = Wheel colour
Q6 = Digital display
I For this info menu
R Reset settings @ = Reset Pocuter
T Set Time (T132145)
W=WIFI, **X**=NTP, **Y**=BLE toggle On/Off

Input:

192.168.178.79

< >   

HTML page

16:27

4G 56%

×

Console

✕

🗑

⋮

Functions

i

A Set SSID B Set Password

D Set Date (D15012021)

L L0 = NL, L1 = UK, L2 = DE

L3 = FR, L4 = Wheel

N Display off between Nhhhh (N2208)

O Display toggle On/Off

P Own colour(0-F) (P4F8A)

Q Display choice (Q0-6)

Q0 Yellow Q1 hourly colour

Q2 White Q3 All Own colour

Q4 Own color Q5 = Wheel colour

Q6 Digital display

I To print this Info menu

R Reset settings @ = Reset Pocuter

T Set Time (T132145)

W=WIFI, X=NTP, Y=BLE toggle On/Off

Ed Nieuwenhuys Okt 2022

Display off: 00h - 00h

Display choice: Own

SSID: iPhone Ed

Password: [REDACTED]

IP-address: 172.20.10.2

 
WIFI=On NTP=On BLE=On

Language choice: Rotate language

Software: PocuterWordClockV043.ino

16:27:03

Enter Message



BLE menu

Detailed description of the menu entries

With the menu many preferences can be set. These preferences are stored on a SD-card or in the ESP32-C3 storage space.

Enter the first character in the menu of the item to be changed followed with the parameter.

There is no difference between upper or lower case. Both are OK.

Between the ()

A SSID B Password C BLE beacon name

Change the name of the SSID of the router to be connected to.

aFRITZ!BoxEd or AFRITZ!BoxEd

Then enter the password. For example: BSecret_pass

Restart the Pocuter by sending @

Entering a single 'b' will show the used password. This Easter egg can be used to check if a valid password was entered

D Set Date and T Set Time

If you are not connected to WIFI you have to set the time and date by hand

For example enter: D06112022 to set the date to 6 November 2022.

Enter for example T132145 (or 132145 , or t132145) to set the time to 45 seconds and 21 minute past one o'clock.

E Set Timezone E<-02>2 or E<+01>-1

At the bottom of this page you can find the time zones used in 2022.

It is a rather complicated string and it is therefore wise to copy it.

Let's pick one if you happen to live here: Antarctica/Troll,"<+00>0<+02>-

2,M3.5.0/1,M10.5.0/3"

Copy the string between the " "'s and send it with starting with an 'E' or 'e' in front.

E<+00>0<+02>-2,M3.5.0/1,M10.5.0/3

Time zones and daylight savings should be ended and replaced by one universal date and time for the whole planet and universe.

But that is my opinion.

Make own colour of: (Hex RRGGBB)

F Font G Dimmed font H Bkgnd

You can set the colours of the highlighted and dimmed characters and the background

The time is shown with the colour defined with Font when Display choice Q3 or Q4 is chosen and the rest of the not highlighted characters are coloured with the setting in Dimmed font.

The format to be entered is hexadecimal. 0123456789ABCDEF are the characters that can be used.

The command is 2 digits for Red followed with two for Green and ending with two digits for Blue.

To colour the characters intense red enter FF0000 prefixed with the letter F, G or H.
To set the background to intense blue enter: H0000FF
To set the dimmed character to dark gray enter for example: G191919. You get gray if red, green and blue has the same intensity.

I To print this Info menu

Print the menu to Bluetooth and the serial monitor connected with an USB-cable

L L0 = NL, L1 = UK, L2 = DE, L3 = FR, L4 = Wheel

You can choose between four languages to display or show them randomly every minute.

N Display off between Nhhhh (N2208)

With N2208 the display will be turned off between 22:00 and 8:00.

O Display toggle On/Off

O toggle the display off and on.

P Status LEDs toggle On/Off

P toggle the status LEDs on the Pocuter off and on.

Q Display colour choice (Q0-6)

Q0 Yellow Q1 hourly Q2 White Q3 All Own Q4 Own Q5 Wheel Q6 Digital display

Q0 will show the time with yellow words.

Q1 will show every hour another colour.

Q2 shows all the texts white.

Q3 and Q4 uses you own defined colours.

Q5 will follow rainbow colours every minute.

Q6 is the digital display with the IP-address and date until seconds are 00.

You can also press the top right button.

The selected choice is displayed at the bottom of the menu.

Send an 'I' to display the latest's settings

R Reset settings

R will set all preferences to default settings, it also clears the SSID and password.

@ = Restart Pocuter

@ will restart the Pocuter. This is handy when the SSID, et cetera are changed and the program must be restarted.

W=WIFI, X=NTP, Y=BLE, Z=Use SD

Toggle WIFI, NTP on and off.

Enter the character will toggle it on or off. At the bottom of the menu the stated is

printed.

```
Display off: 00h - 00h
Display choice: Yellow
      SSID: FRITZ!BoxEd
      BLE name: ESPWordClock
      IP-address: 192.168.178.78
Timezone:CET-1CEST,M3.5.0,M10.5.0/3
WIFI=On NTP=On BLE=On FastBLE=On
Language choice: Rotate language
0.0.0.0  78.168.178.78  10:10:10
```

Z Fast BLE

The BLE UART protocol sends default packets of 20 bytes. Between every packet there is a delay of 50 msec

The IOS BLEserial app, and maybe others too, is able to receive packets of 80 bytes or more before characters are missed and

Option Z toggles between the long and short packages.

Because not all Pocuter functionalities in the Pocuter library were described or could be found by me at the moment of writing this program several standard ESP32-C3 DEV functionality was used.

In this software version only the Pocuter Button and OLED screen functionality were used.

Known issues

Sometimes the clock loses the WIFI connection. You will not notice it directly because the internal clock will keep the clock on time for a few days.

When connection is lost the clock will try to reconnect every hour.

If you still see 0.0.0.0 in the digital display mode restart the clock or turn it off and on.

When restarting the clock the clock will not always make a WIFI connection and gets an IP-address.

Just Reset with @ in the menu until an IP-address other than 0.0.0.0 is displayed when starting or in the digital display.