


The buttons are laid out on the board like this:

SW115	SW105	SW104	SW114	SW100
SW116	SW106	SW113	SW103	SW110
SW117	SW107	SW112	SW102	SW111
SW120				SW101




NOTE: reversed pin numbers.

The K connector seems to be using reversed numbering on this board as compared to on the I/O board. The signals appear to be connected straight through on the pictures, but the pin numbers on the silkscreen are backwards.

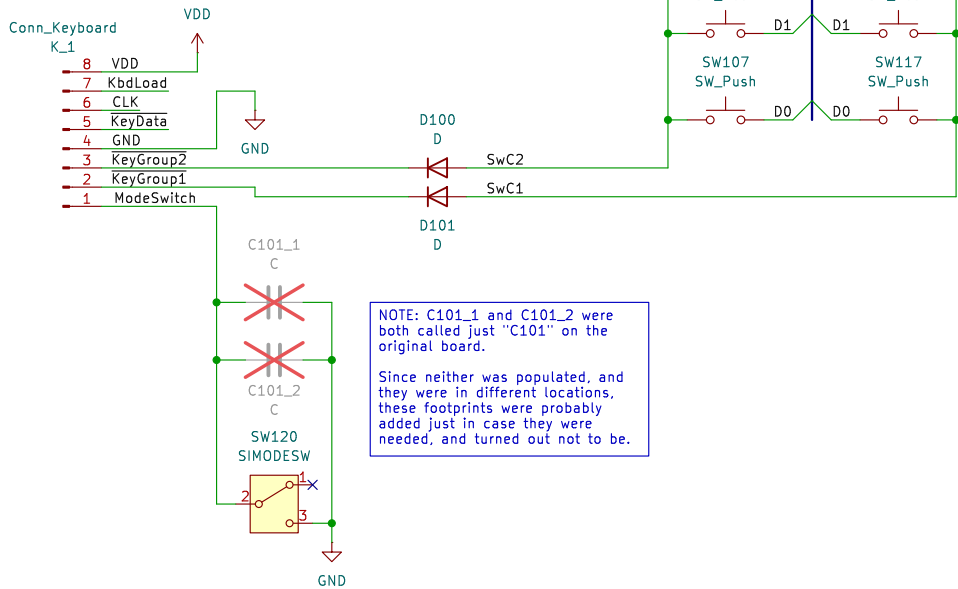

NOTE: C101_1 and C101_2 were both called just "C101" on the original board.

Since neither was populated, and they were in different locations, these footprints were probably added just in case they were needed, and turned out not to be.

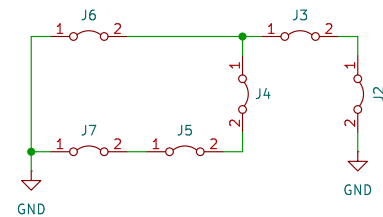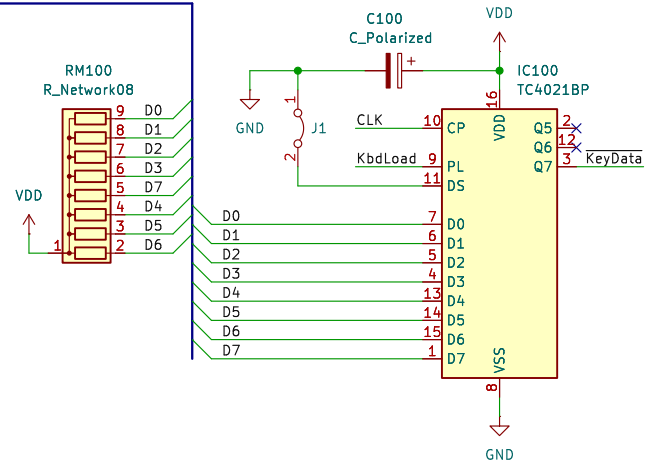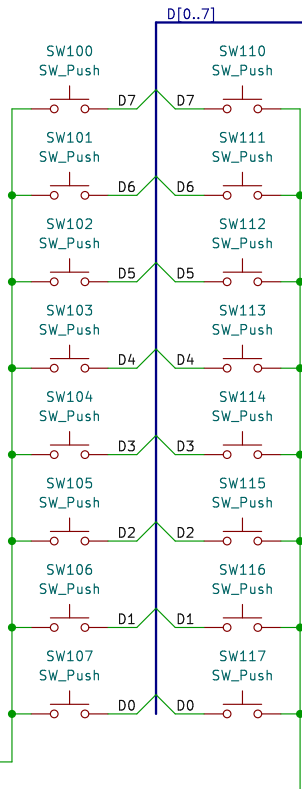

Sheet: /		
File: keyboard.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 8.0.0		Id: 1/1