

## Scheduled Maintenance

### ▼ Scheduled Maintenance

#### NOTE

After the prescribed period, continue to follow the described maintenance at the recommended intervals.

#### Emission control and related systems

The ignition and fuel systems are highly important to the emission control system and to efficient engine operation. Do not tamper with them.

All inspections and adjustments must be made by an expert repairer (we recommend an Authorised Mazda Repairer).

### ▼ Europe

#### Vehicles utilizing the vehicle status monitor feature (My Mazda Service):

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

#### For vehicles in European countries, except SKYACTIV-D 1.8 for Ukraine

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval, 20,000 km (12,500 miles) or 12 months, whichever comes first. (after the previous maintenance)

#### For SKYACTIV-D 1.8 vehicles in Ukraine

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval, 10,000 km (6,250 miles) or 12 months, whichever comes first. (after the previous maintenance)

Maintenance item		1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
<b>SKYACTIV-G 1.5, SKYACTIV-G 2.0, AND SKYACTIV-X 2.0</b>													
Engine oil & filter *1*2		R	R	R	R	R	R	R	R	R	R	R	R
Spark plugs *4	SKYACTIV-G 1.5/ SKYACTIV-G 2.0	Replace every 120,000 km (75,000 miles).											
	SKYACTIV-X 2.0	Replace every 64,000 km (40,000 miles).											
Air filter *5				R			R			R			R
Fuel lines and hoses			I		I		I		I		I		I
Hoses and tubes for emission				I			I			I			I
<b>SKYACTIV-D 1.8</b>													

Maintenance and Care

# Scheduled Maintenance

Maintenance item		1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Engine oil & filter *1*3		R	R	R	R	R	R	R	R	R	R	R	R
Air filter *5		C	C	R	C	C	R	C	C	R	C	C	R
Fuel filter				R			R			R			R
Fuel lines and hoses	Except Uk-raine		I		I		I		I		I		I
	Ukraine	I	I	I	I	I	I	I	I	I	I	I	I
SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, AND SKYACTIV-D 1.8													
Drive belts *6				I			I			I			I
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant *7		Replace at first 200,000 km (125,000 miles) or 10 years; after that, every 100,000 km (62,500 miles) or 5 years.											
Battery *8*9		I	I	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections		I	I	I	I	I	I	I	I	I	I	I	I
Vacuum brake booster and hose	With vacuum booster		I		I		I		I		I		I
Brake fluid *10			R		R		R		R		R		R
Disc brakes		I	I	I	I	I	I	I	I	I	I	I	I
Manual transmission oil		Replace every 180,000 km (112,500 miles).											
Steering operation and linkages			I		I		I		I		I		I
Rear differential oil		*11											
Transfer oil		*11											
Front and rear suspension, ball joints and wheel bearing axial play			I		I		I		I		I		I
Driveshaft dust boots			I		I		I		I		I		I
Exhaust system and heat shields		Inspect every 100,000 km (62,500 miles) or 8 years.											
Bolts and nuts on chassis and body			T		T		T		T		T		T
Body condition (for rust, corrosion and perforation)		I	I	I	I	I	I	I	I	I	I	I	I
Cabin air filter (if installed)			R		R		R		R		R		R
Tyre inflation pressure and tyre wear *12*13		I	I	I	I	I	I	I	I	I	I	I	I
Emergency flat tyre repair kit (if installed)*14		I	I	I	I	I	I	I	I	I	I	I	I
Self-test with Mazda Modular Diagnostic System (M-MDS)*15*16 SKYACTIV-G & SKYACTIV-X	Ukraine	I	I	I	I	I	I	I	I	I	I	I	I