



- | | |
|--|---|
| 1 Extra Wide Slots with Self-centering Cage | 7 Reheat Button |
| 2 Stainless Steel Housing | 8 Lighter Toast Button |
| 3 Removable Crumb Trays | 9 Pro-Select® LCD Display with Countdown Indicator |
| 4 Power Cord | 10 Darker Toast Button |
| 5 Effortless™ Lift-Out Lever | 11 Defrost |
| 6 Bagel Button | 12 Cancel |

Toasting Bread

If at any time you want to stop the toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- 1 If the Toaster is not plugged in, plug it in to a grounded wall outlet now.
- 2 Place one to four slices of fresh bread into the Toaster.
- 3 Using the Up or Down arrows, set the degree of darkness to the desired setting; number 7 being the darkest.
- 4 Press the Effortless™ Lift-Out Lever all the way down until it locks into place. The toasting cycle will begin immediately and display the countdown indicator.
- 5 Once the cycle is complete, the lever will lift the toast up for removal. If the bread products are smaller in size and hard to reach safely, gently lift the lever up to raise the toast higher in the slots.
- 6 The toast and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the toast from the Toaster.

Toasting Bagels (or English Muffins)

By turning off the outer heating elements, the Bagel function will toast the sliced side of the bagel, while gently warming the soft, unsliced side.

If at any time you want to stop the toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- 1 Place one to four sliced bagel halves into the Toaster. Insert the bagel (or English muffin) halves so that the sliced side faces the center of each set of slots.
- 2 Using the Up or Down arrows, set the degree of darkness to the desired setting; number 7 being the darkest. English muffins typically require a slightly higher setting than bagels.
- 3 Press the Effortless™ Lift-Out Lever all the way down until it locks into place. The toasting cycle will begin immediately and display the countdown indicator.
- 4 Once the cycle is complete, the lever will lift the bagel or muffin up for removal. If the bread products are smaller in size and hard to reach safely, gently lift the lever up to raise the toasted food up higher in the slots.

- 5** The bagel and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the bagel from the Toaster.

Reheating

Quickly reheat previously toasted food. Do not reheat food with butter or other toppings. Reheat only dry food products.

If at any time you want to stop the toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- 1** Place the previously toasted food into the Toaster.
- 2** Press the Reheat button. No level setting number will be present, as the warming temperature and heating time are preset.
- 3** Once the food has been adequately heated, the unit will raise the food.
- 4** The food and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the toast from the Toaster.

Defrost

Defrost and toast frozen bread in one easy step. Frozen waffles, pancakes, and french toast should be warmed using the Defrost function.

If at any time you want to stop the Defrost/Toasting process, simply press the Cancel button and the unit will turn off and lift the product.

- 1** Insert the frozen bread into the Toaster and press the Defrost button.
- 2** Using the Up or Down arrows, set the degree of darkness to the desired setting; number 7 being the darkest.
- 3** Press the Effortless™ Lift-Out Lever all the way down until it locks into place. The Defrost cycle will begin immediately. Once the Defrost cycle is complete, the toasting process will automatically begin. At the end of the Toast cycle, the lever will lift the food up for removal.
- 4** The toast and the surface surrounding the slots will be hot. To avoid burns, use extreme caution when removing the toast from the Toaster.

TIPS AND TROUBLESHOOTING

Tips

- Drier breads typically require a lower darkness level setting than normal.
- Very fresh and whole wheat breads typically require a higher darkness level setting than normal.
- Use caution with toaster pastries as the filling can become very hot before the surface is toasted. Never toast or warm these unattended.
- Never force foods into the toasting slots.
- After each use, unplug the Toaster from the electrical outlet.

Troubleshooting

If your Toaster should fail to operate, check to make sure it is plugged into a properly grounded electrical outlet. If it is, unplug the unit for one minute and then plug back in. If the unit fails to operate, unplug the Toaster and check the fuse or circuit breaker to the electrical outlet.

If this does not solve the problem, immediately discontinue the use of the Toaster. See the Frigidaire warranty section of this guide to obtain service information.