

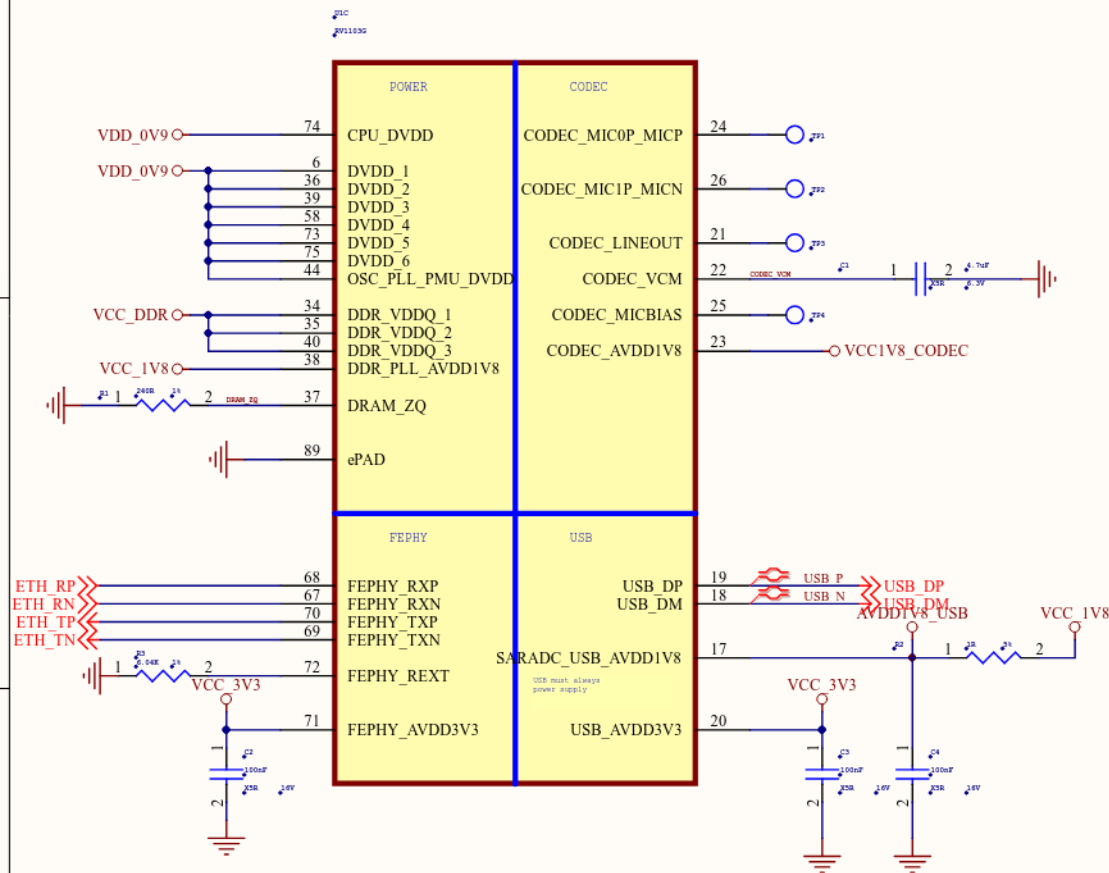



## PART C

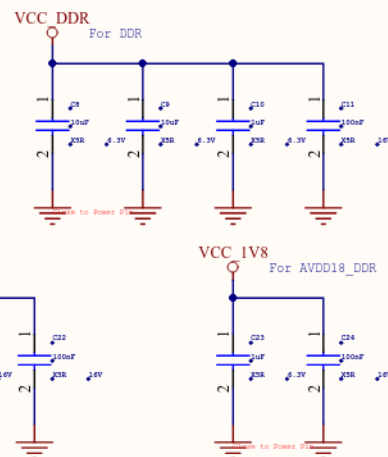


## POWER

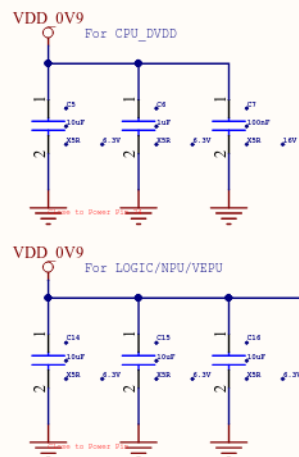


Micro-SD Card

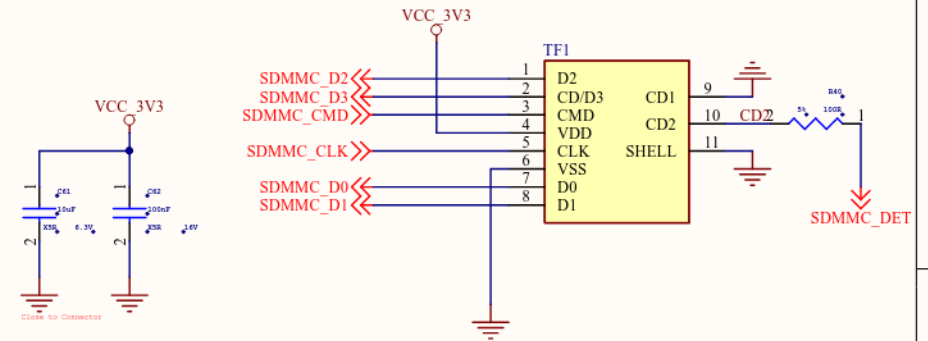


**ETH**

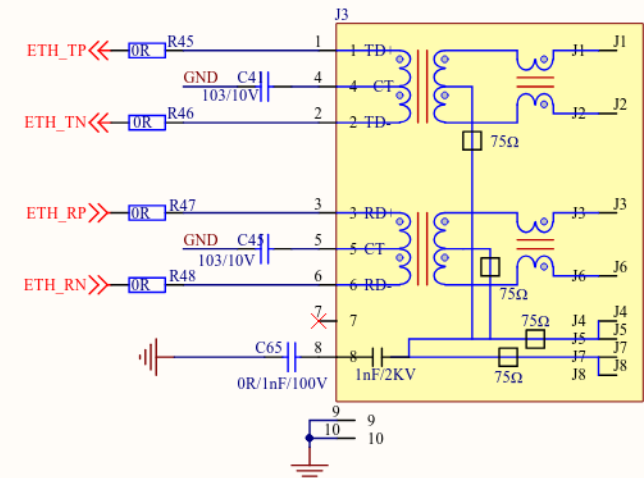


## Luckfox Pico Plus

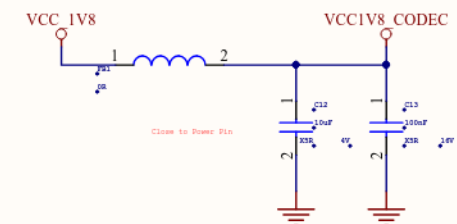


PART A

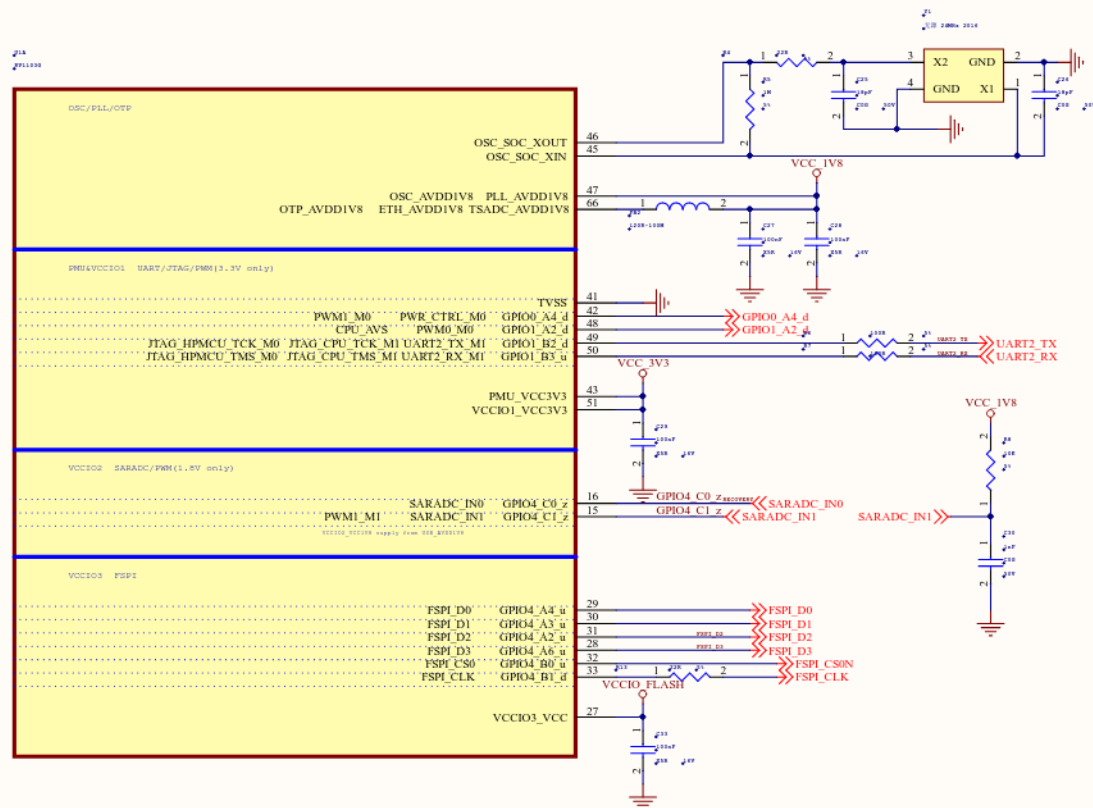

## CAM

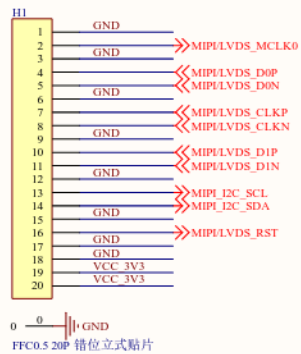


### Pin Out

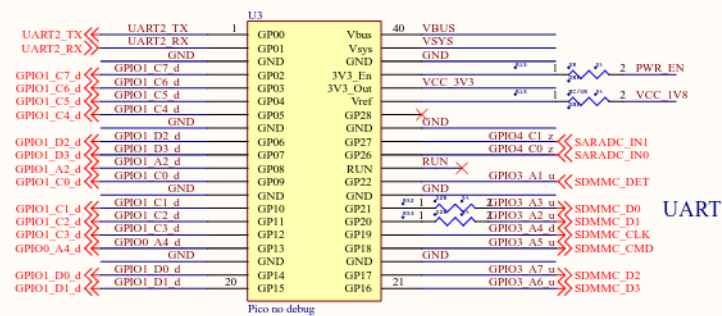


## SPI Flash

**NOTE:**  
Refer to the latest AVL for parts selection.

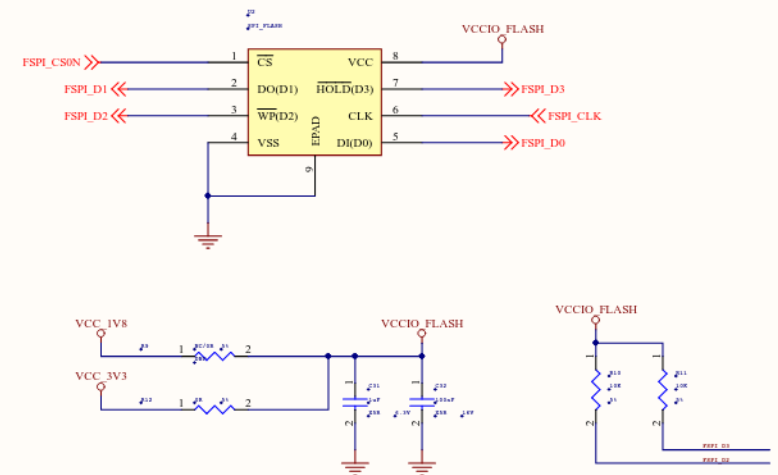


LED


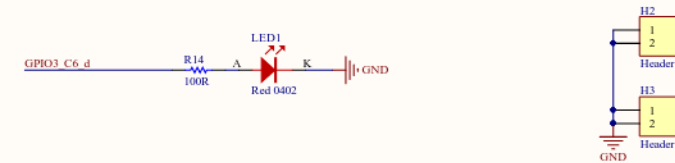


## RECOVERY Key

Note:  
SARADC\_IN0 must always be pulled-up.

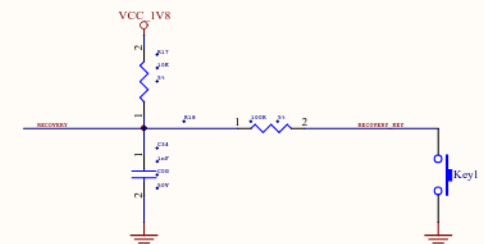


## PART B

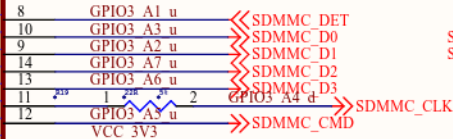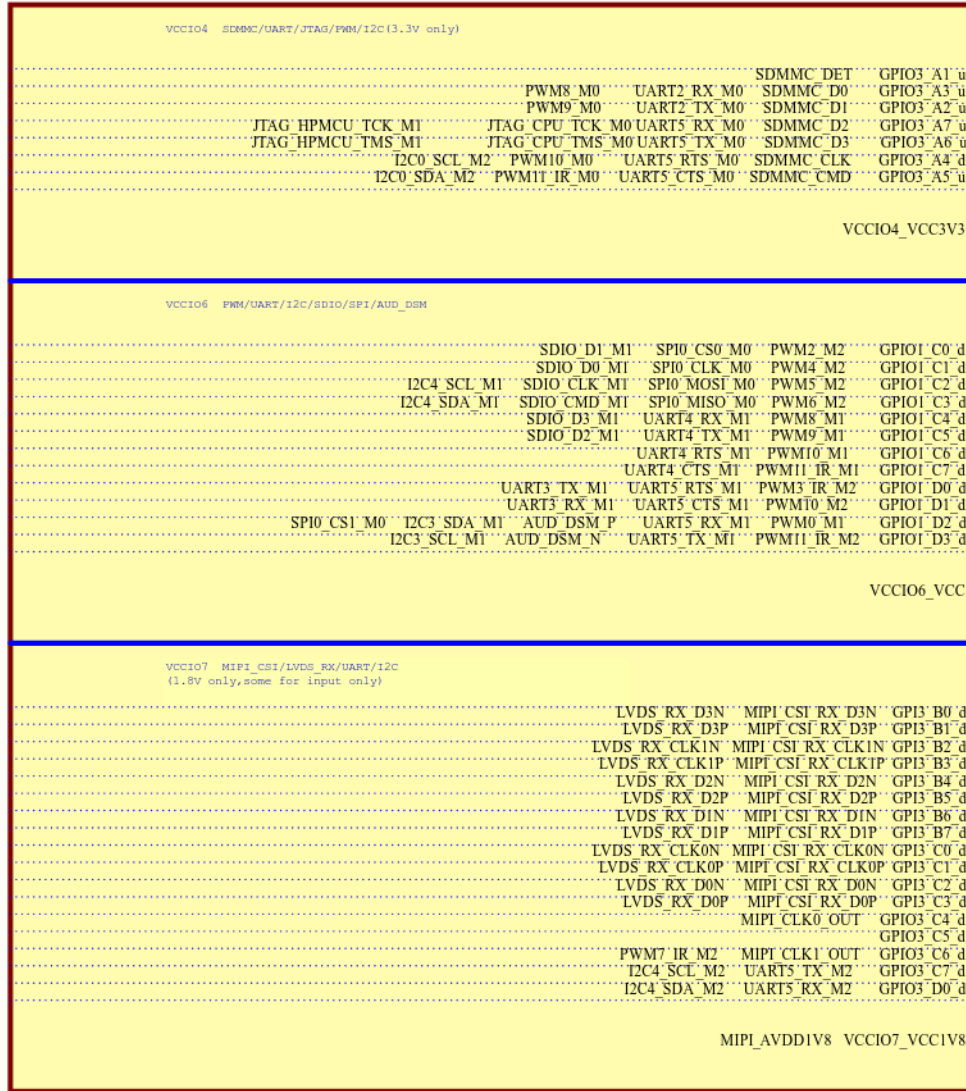J18  
JY11035





## UART

SDMMC\_D0


SDMMC\_D1

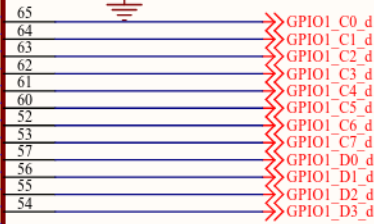


0402 1A

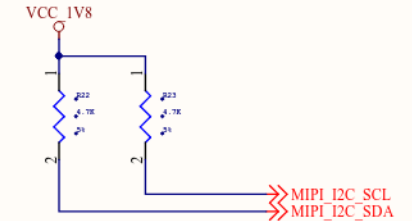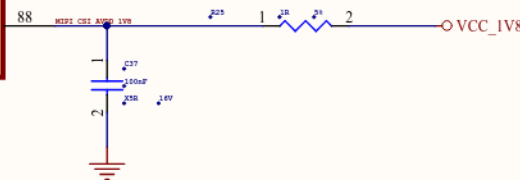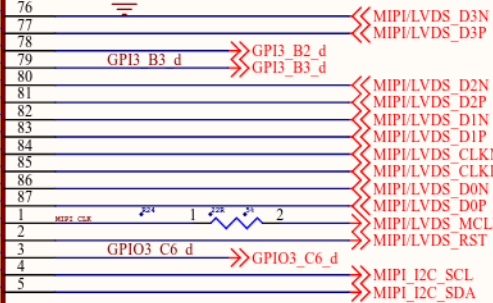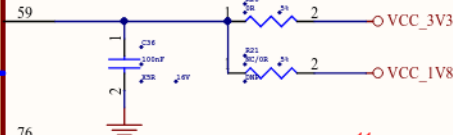


# USB POWER IN

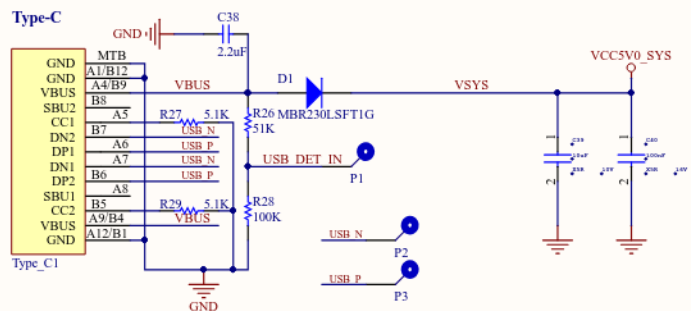

## VCC5V0\_SYS--->VCC\_DDR Setp 2

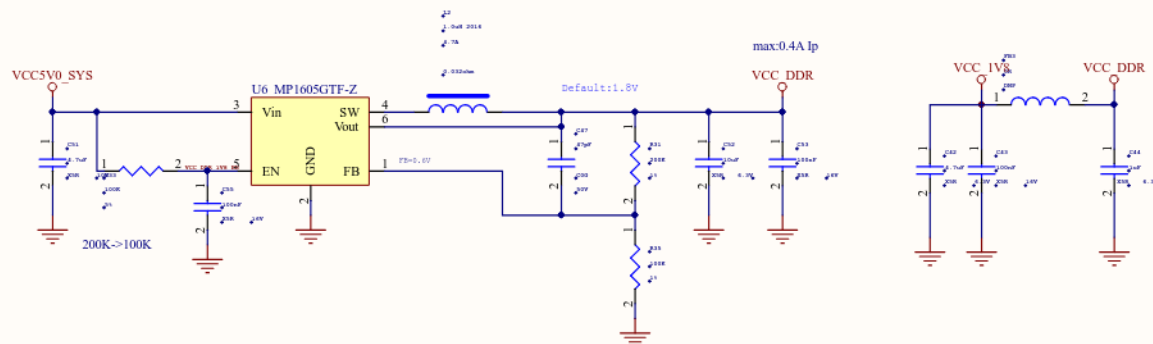

## VCC5V0\_SYS--->VDD\_0V9 Setp 1

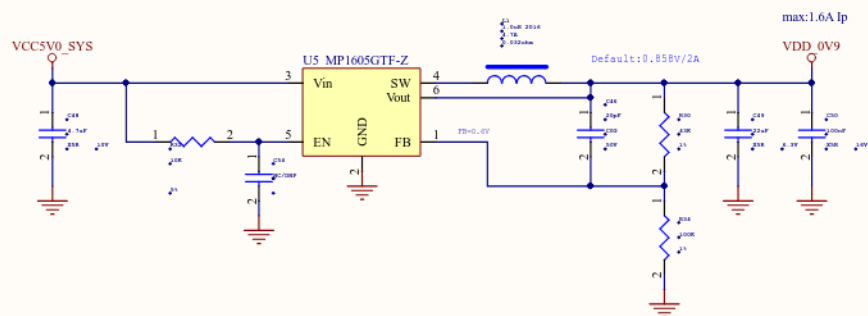

## VCC5V0\_SYS--->VCC\_3V3 Setp 3

