



MT825 Config Tool User Guide

1. Install USB Driver "PL2303_GPS_Driver";
2. Insert SIM Card, Power on the MT825 and then open the back cover;
3. Connect the "USB Config Cable" between MT825 and PC
 - USB Cable **4 PIN** Connector to MT825 **4PIN** Port(**as follow image**)
 - Other side connect to PC USB Port

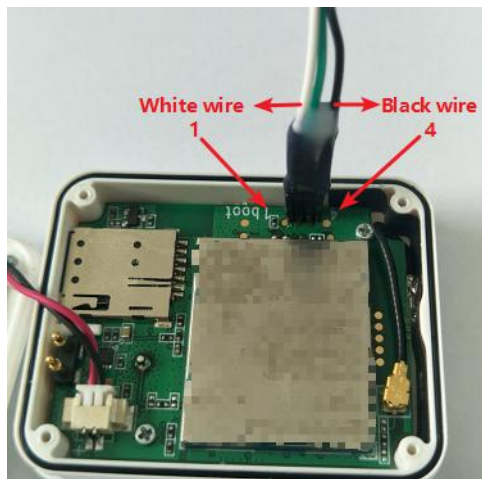

4. Open Config Tool "SSCOM" and operate as follow:
 - Select ComNum named **Prolific USB-to-Serial Comm Port** (step 1 in picture)
 - Click "OpenCom" (step 2 in picture)
 - Click "EXT" (step 3 in picture)
 - **Click** "Config commands" to setup the device(step 4 in picture)

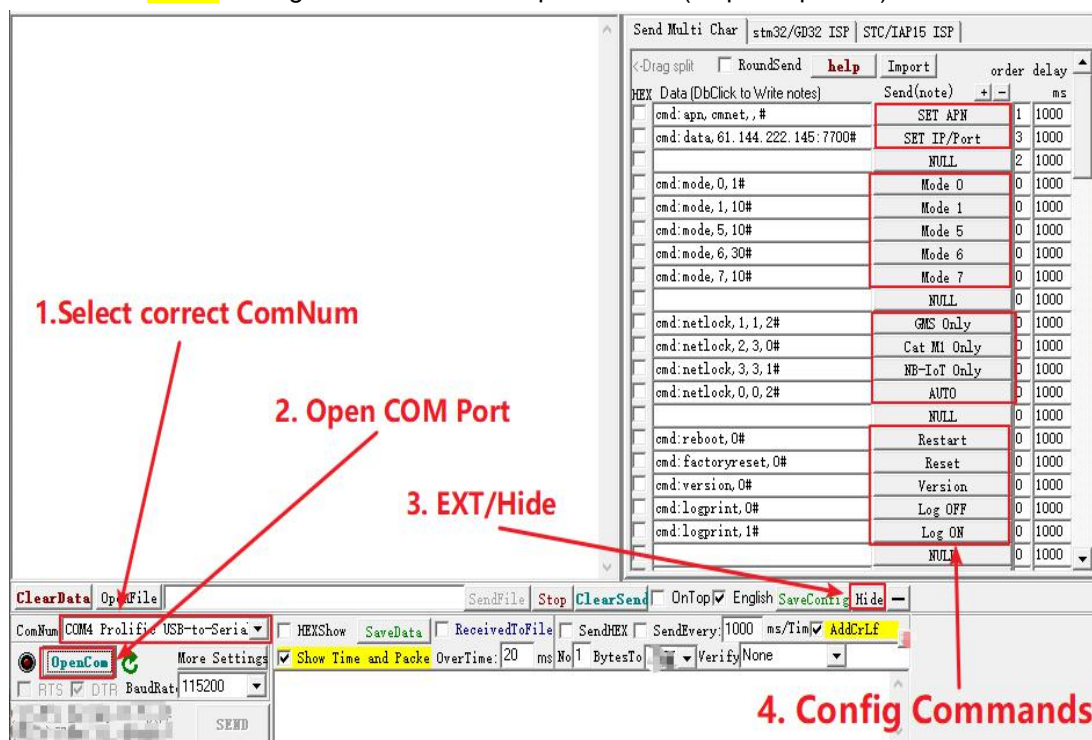

5. Support Config Commands:

Item	Command format	Example
APN	cmd:apn,apn, apn user, apn password#	cmd:apn,iot.nb,,# cmd:apn,internet,internet,internet#
IP/Port	cmd:data,IP:Port#	cmd:data,61.144.222.145:7700#
Mode 0	cmd:mode,0,T#	cmd:mode,0,8#
Mode 1	cmd:mode,1,T#	cmd:mode,1,10#
Mode 5	cmd:mode,5,T#	cmd:mode,5,10#
Mode 6	cmd:mode,6,T#	cmd:mode,6,10#
Mode 7	cmd:mode,7,T#	cmd:mode,7,10#
GSM Only	cmd:netlock,1,1,2#	cmd:netlock,1,1,2#
Cat M1 Only	cmd:netlock,2,3,0#	cmd:netlock,2,3,0#
NB-IoT Only	cmd:netlock,3,3,1#	cmd:netlock,3,3,1#
AUTO	cmd:netlock,0,0,2#	cmd:netlock,0,0,2#
RESTART	cmd:reboot,0#	cmd:reboot,0#
RESET	cmd:factoryreset,1#	cmd:factoryreset,1#
Log ON	cmd:logprint,1#	cmd:logprint,1#
Log OFF	cmd:logprint,0#	cmd:logprint,0#
Read Config	cmd:rconf,1#	cmd:rconf,1#
UDP (No ACK)	cmd:protocol,0,0#	cmd:protocol,0,0#
UDP (with ACK)	cmd:protocol,0,1#	cmd:protocol,0,1#
TCP (No ACK)	cmd:protocol,1,0#	cmd:protocol,1,0#
TCP (with ACK)	cmd:protocol,1,1#	cmd:protocol,1,1#
Check network	AT+QNWINFO	AT+QNWINFO

(End of the document)

mictrack

Shenzhen Mictrack Electronics Co.,Ltd.**Add:** B305-306, Kangsheng Electronic Industrial Park, Zhonghua Rd, Longhua District, Shenzhen, China 518131**Tel:** +86-755-21014699**Email:** info@mictrack.com**Web:** www.mictrack.com