

C64AI

When used with a Pi Zero 2, the USB-TTL and USB-CONSOLE ports of the C64AI must be connected using an OTG-compatible USB cable; power must be supplied via the POWER port with +5V / 2A.

When using devices other than the Pi Zero 2, the USB connection must be made exclusively through the C64AI USB-TTL port.



POWER LED



SHUTDOWN

