



USB_I2C BRIDGE

-Place R5 if you want to reset the I2c expander and I2c master together


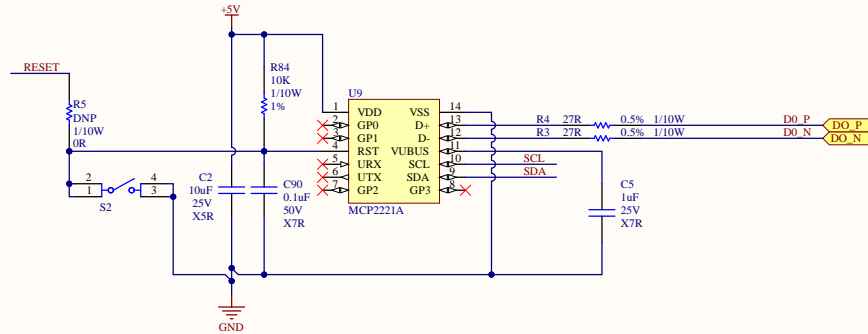


LDO ENABLE SWITCH

-To Enable LDO manually use DIP- Switches.
-Use SMA connector to enable LDO using external signal.

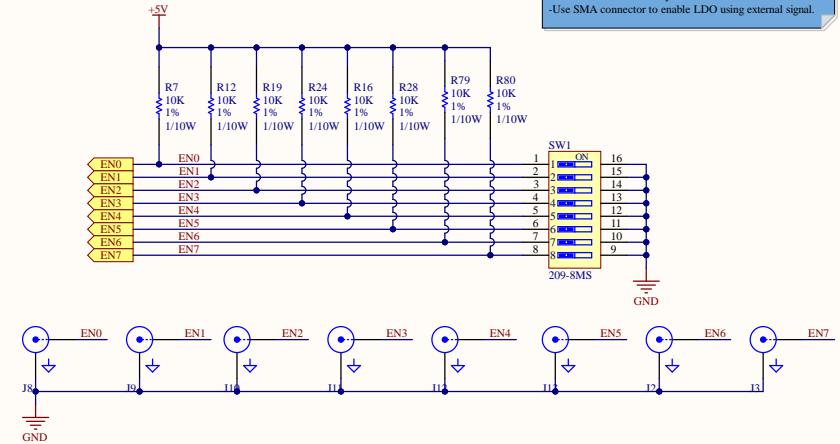

I2C EXPANDER

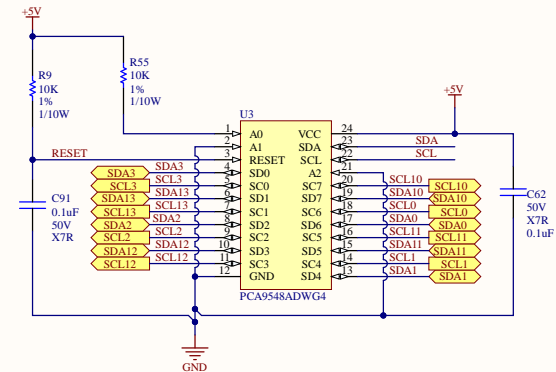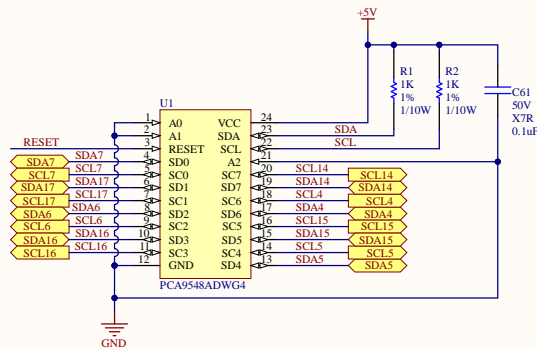

Title **ENICS_PS**

Size: Tabloid [Number: 1] Revision: 0

Sheet Name: FTDI_MUX_SchDoc


Date: 29-Aug-22 Time: 12:41:08 PM Sheet 2 of 12

Drafter: Frank R P Client: Mr. Yoav


OoB Services
F/439, Sumel-11,
Shahibag,
Ahmedabad-380004



POWER_SUPPLY_0

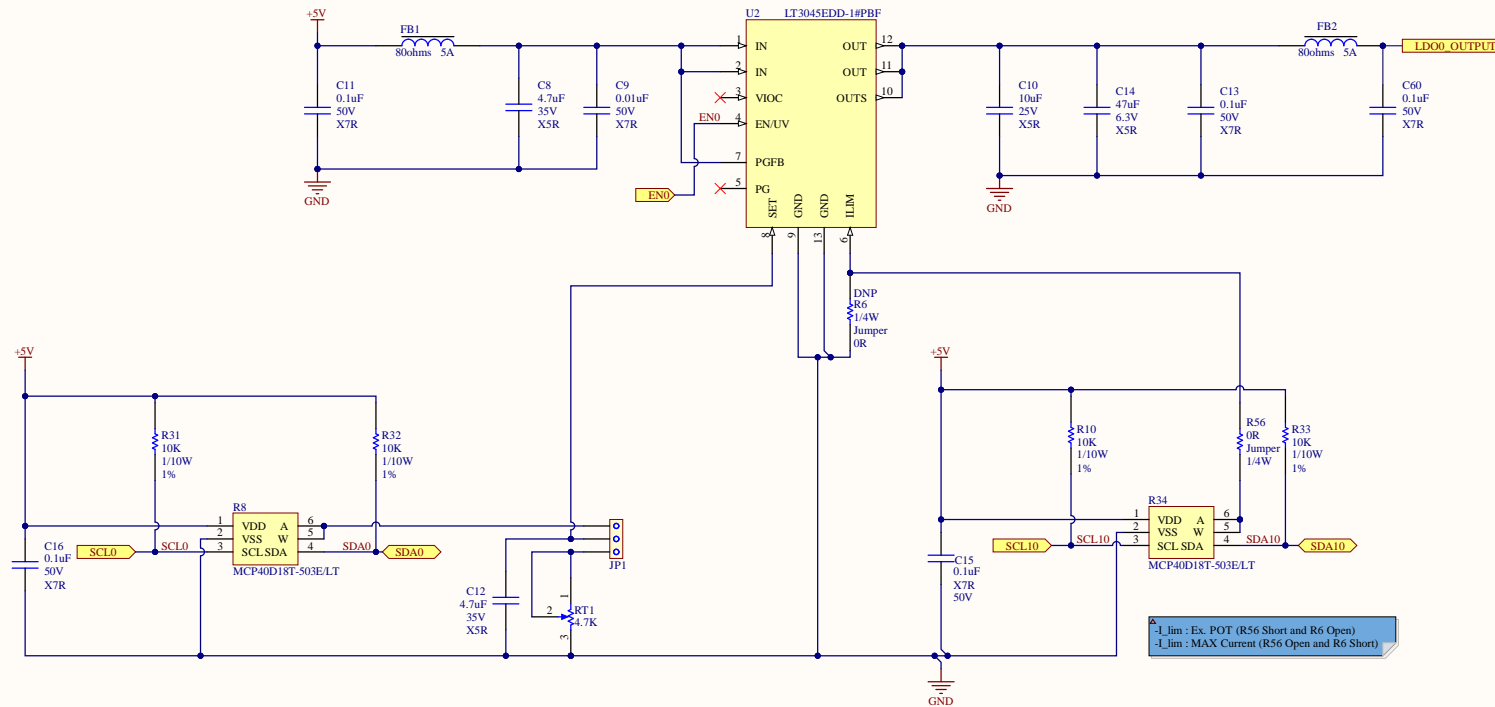

POWER_SUPPLY_1

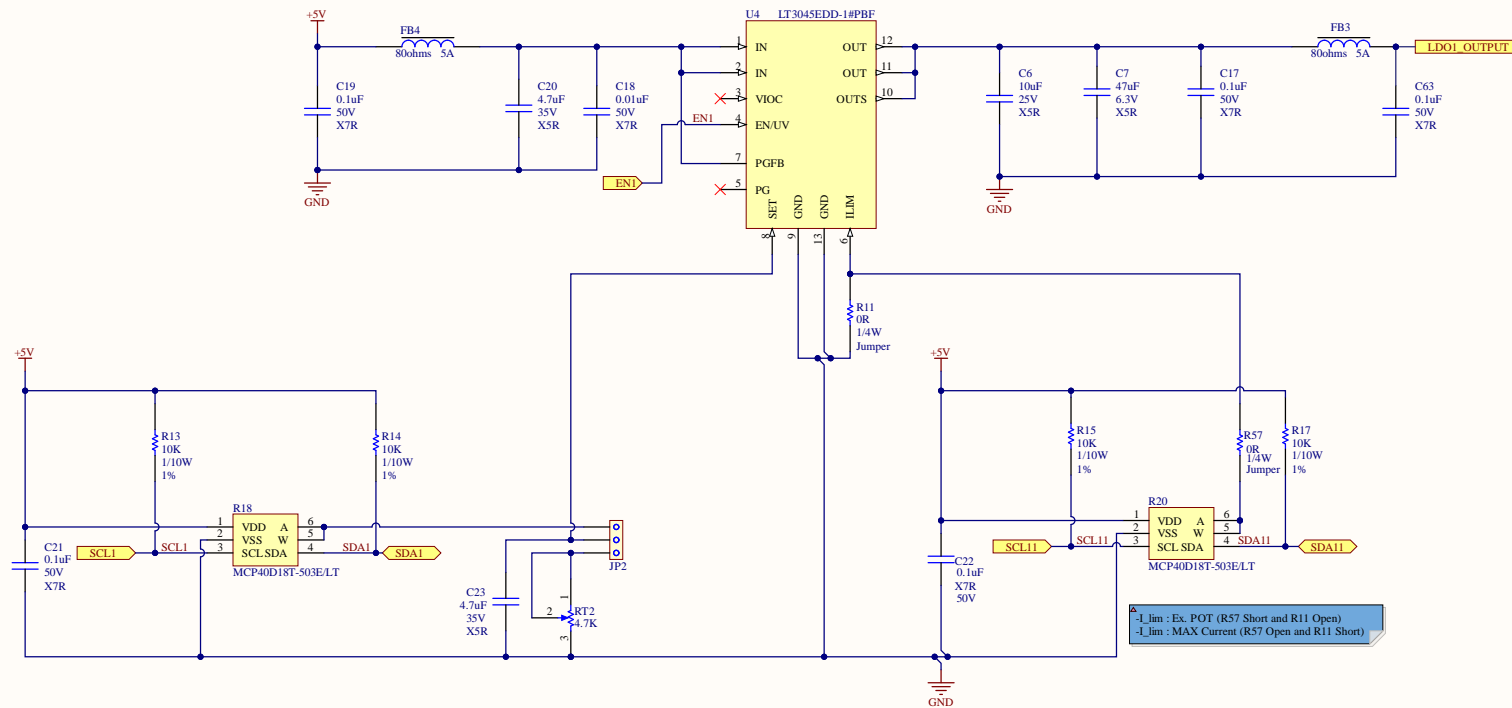


Title ENICS_PS		
Size: Tabloid	Number: 1	Revision: 0
Sheet Name: PS1.SchDoc		
Date: 29-Aug-22	Time: 12:41:08 PM	Sheet 4 of 12
Drafter: Pratik R P	Client: Mr. Yoav	


OoB Services
F/439, Sumel-11,
Shahibag,
Ahmedabad-380004



POWER_SUPPLY_2

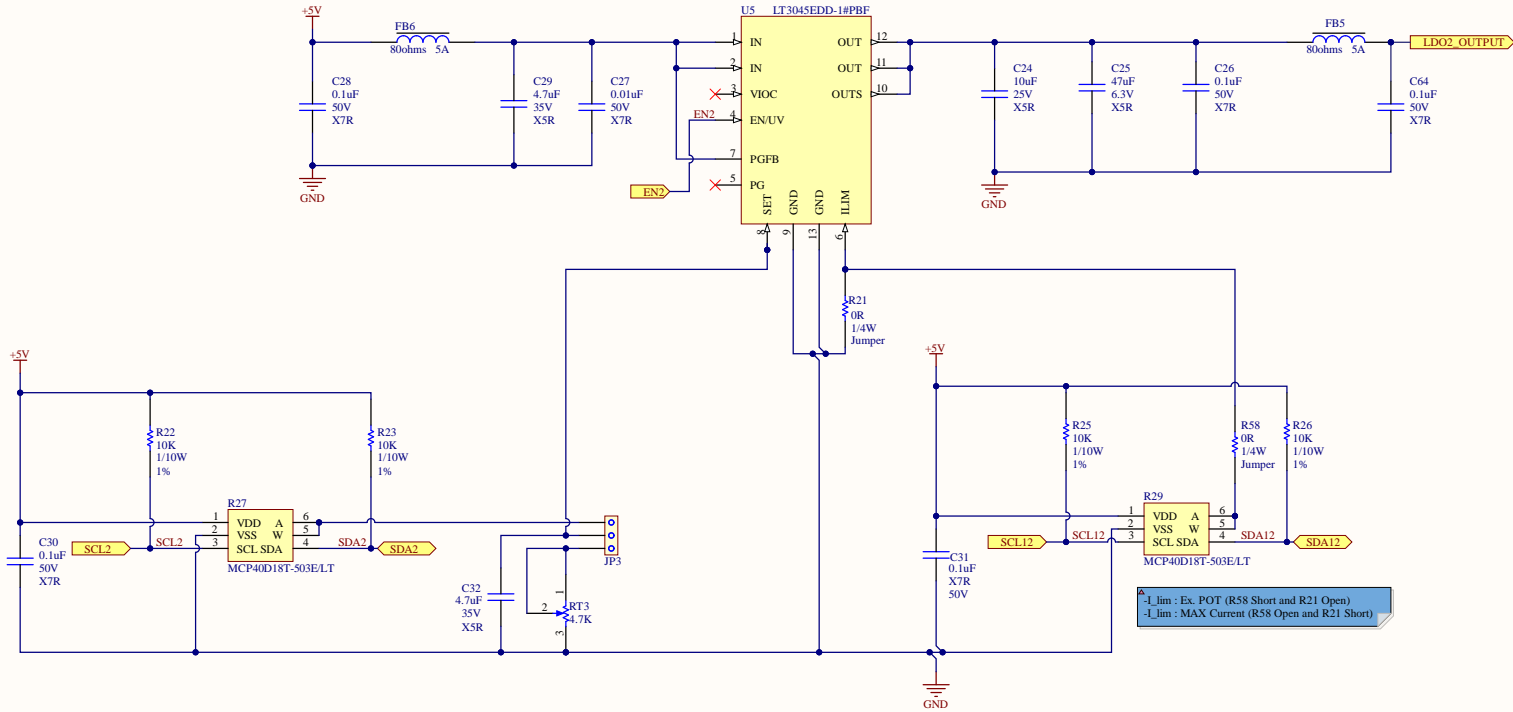


POWER_SUPPLY_3

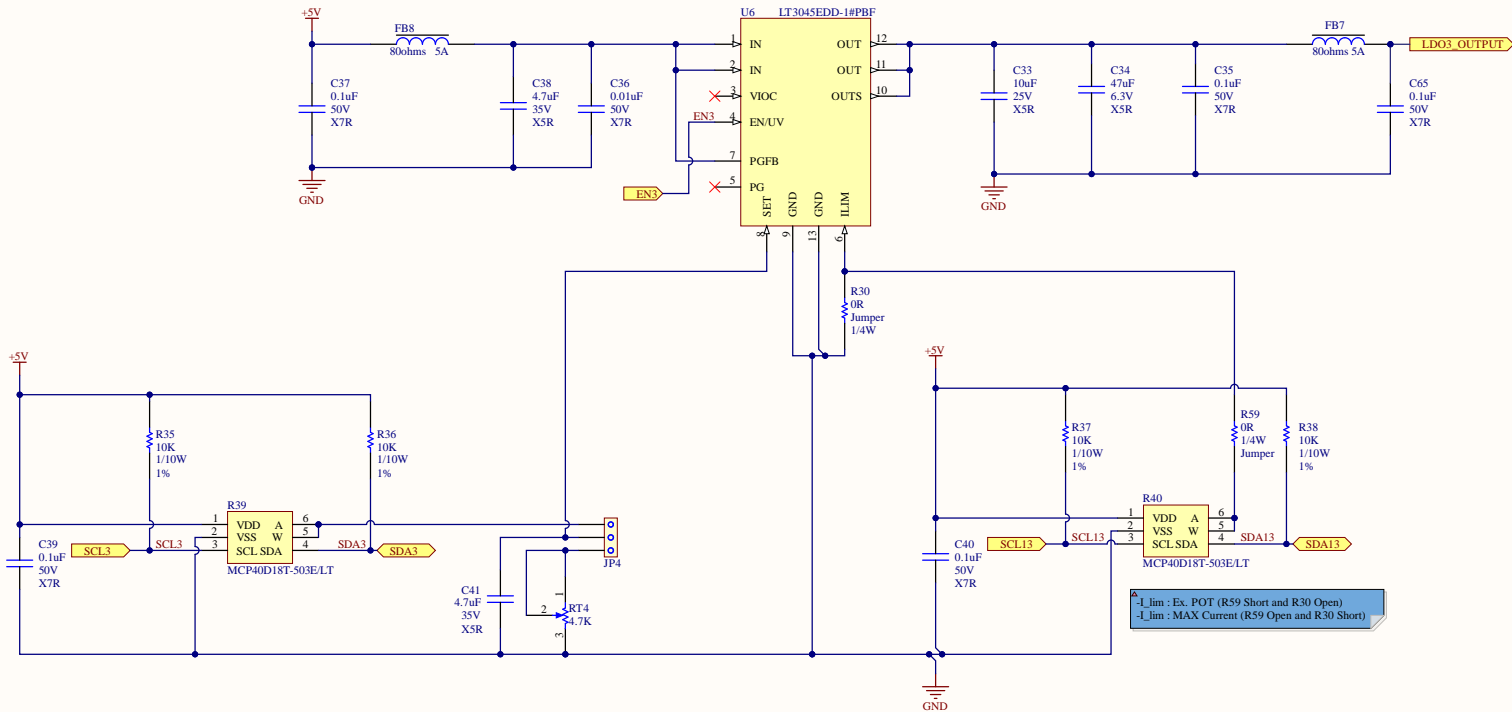


Title ENICS_PS			oOb Services F/439, Sumel-11, Shahibag, Ahmedabad-380004
Size: Tabloid	Number: 1	Revision: 0	
Sheet Name: PS3.SchDoc			
Date: 29-Aug-22	Time: 12:41:09 PM	Sheet 6 of 12	
Drafter: Pratik R P	Client: Mr. Yoav		



POWER_SUPPLY_4

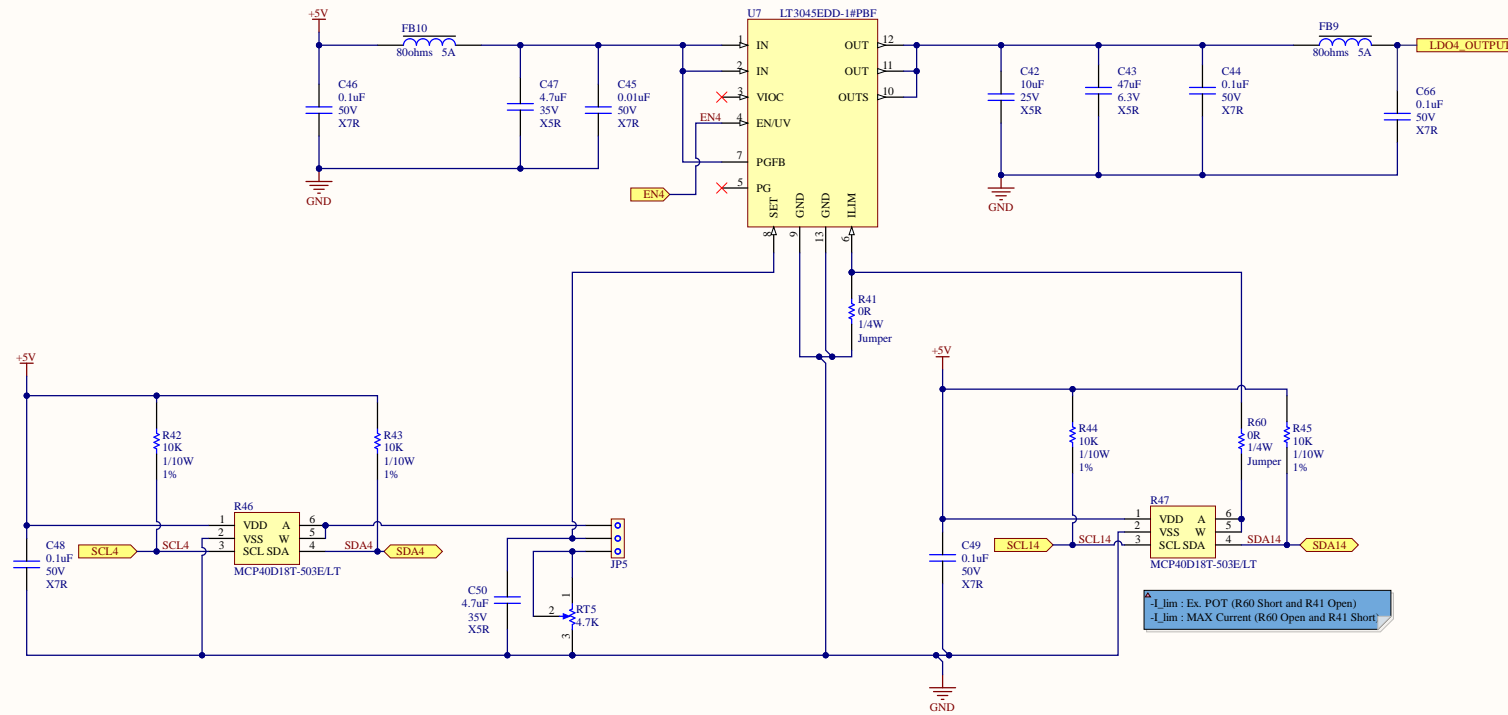

POWER_SUPPLY_5

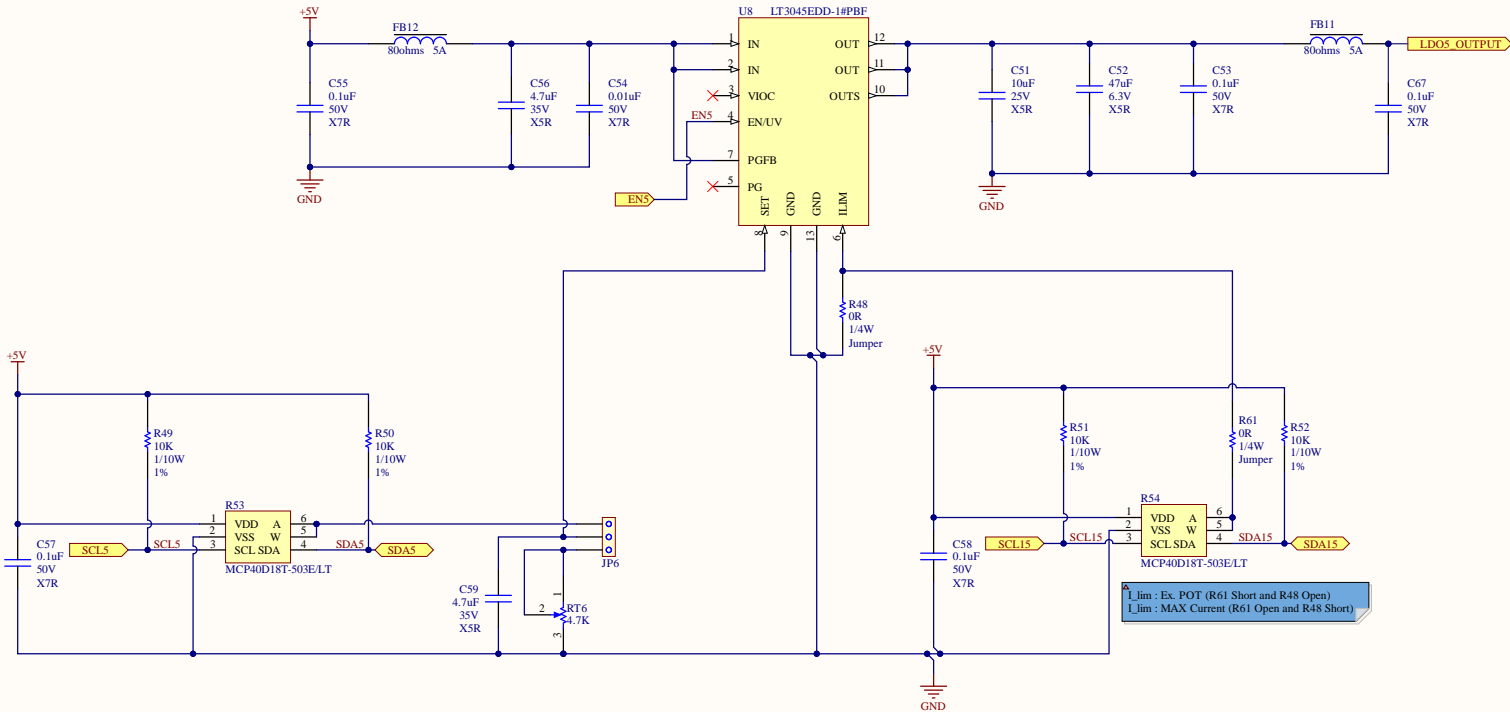


Title <i>ENICS_PS</i>		
Size: Tabloid	Number: 1	Revision: 0
Sheet Name: PS5.SchDoc		
Date: 29-Aug-22	Time: 12:41:09 PM	Sheet 8 of 12
Drafter: Pratik R P	Client: Mr Yoav	


OoB Services
F/439, Sumel-11,
Shahibag,
Ahmedabad-380004



POWER_SUPPLY_6

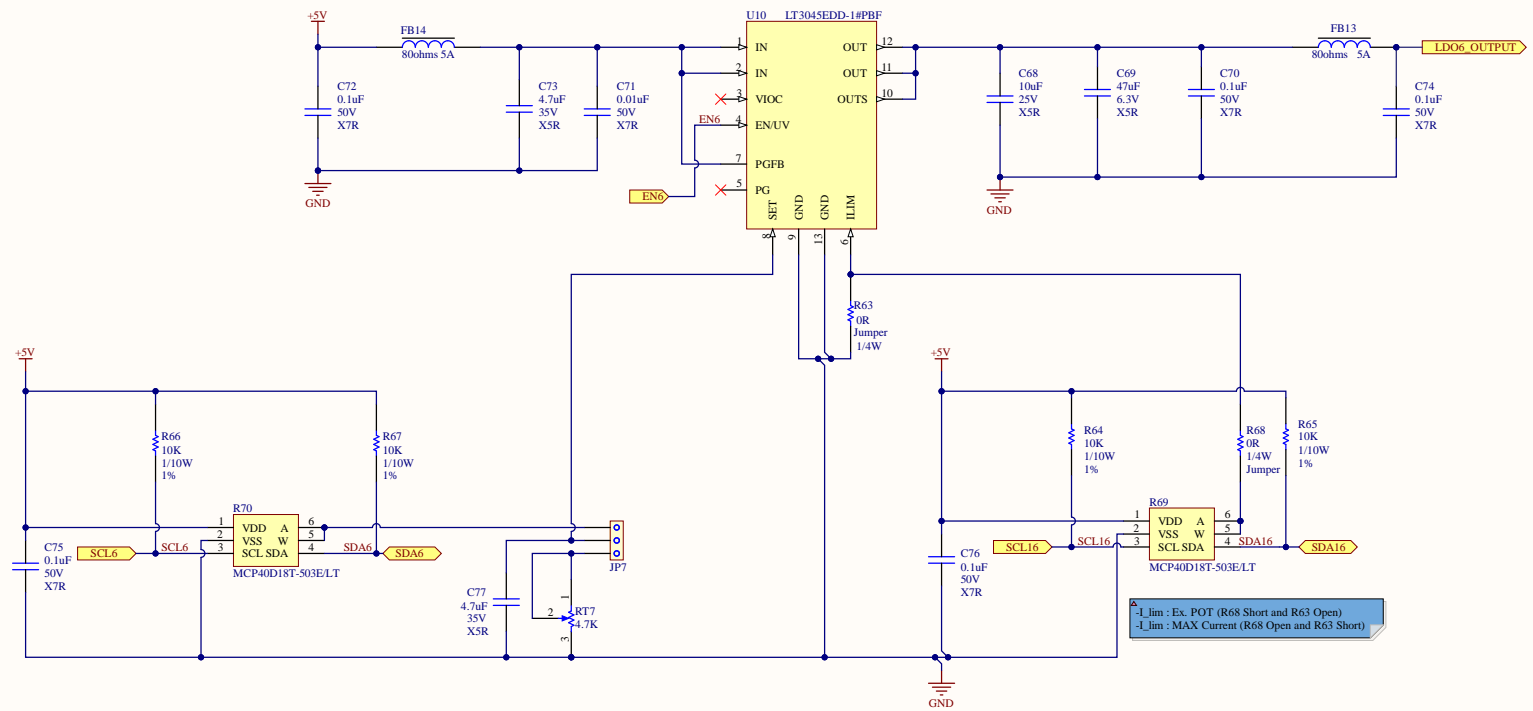

POWER_SUPPLY_7

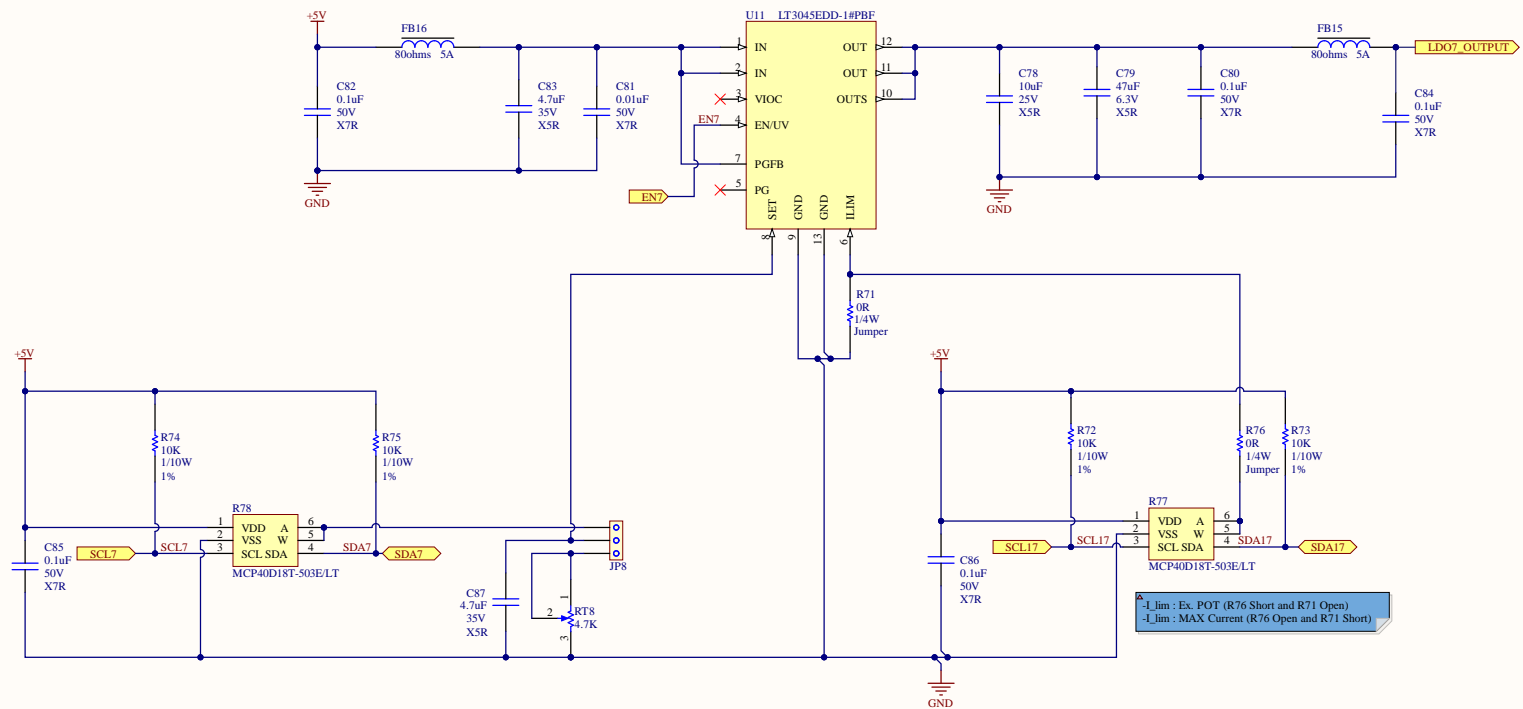

Title ENICS_PS			<i>OoB Services</i> <i>F/439, Sumel-11,</i> <i>Shahibag,</i> <i>Ahmedabad-380004</i>
Size: Tabloid	Number: 1	Revision: 0	
Sheet Name: PS7.SchDoc			
Date: 29-Aug-22	Time: 12:41:09 PM	Sheet 10 of 12	
Drafter: Pratik R P	Client: Mr. Yoav		



SMA AND BURGSTRIP

