


# Instructions for removing cylinder.

## Step 1.


Using the key, make sure the lever assembly is in the unlocked position.

Using the hex wrench, loosen the set screw within the circular hole on the lever shank by turning counterclockwise.

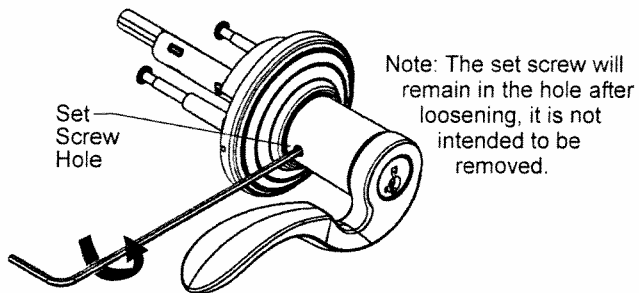


## Step 2.

Once set screw is loosened, (1) remove hex wrench from hole and then (2) remove lever from the shank.

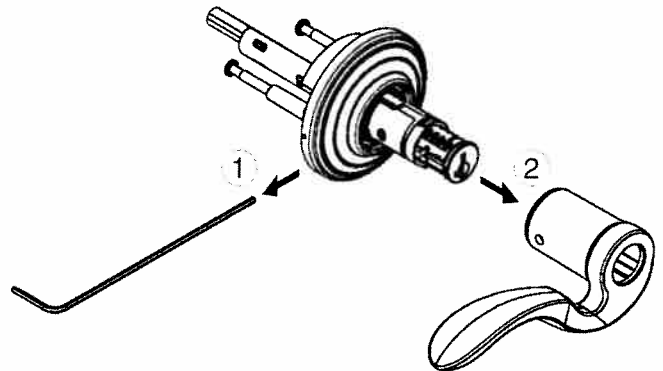


## Step 3.

Using a very small, thin blade screwdriver, (1) remove the retaining clip and then (2) remove the cylinder from the shank.

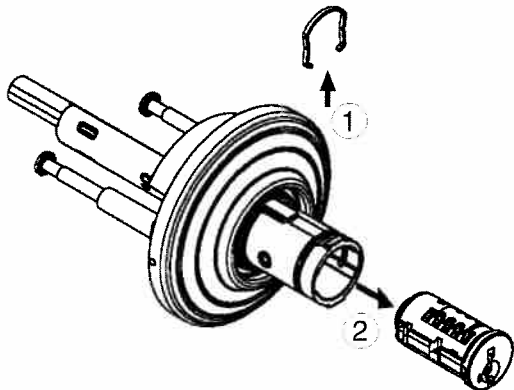


## Step 4.

Rotate the cylinder to the proper orientation and (1) insert the cylinder back into the shank and then (2) replace the clip.

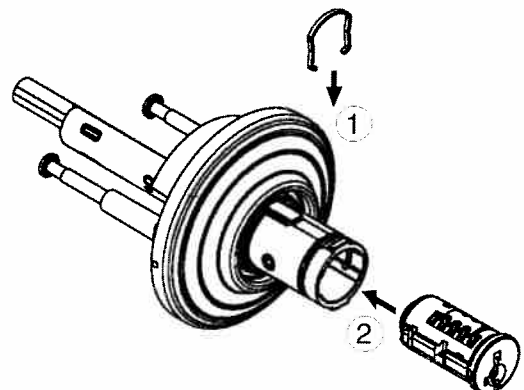

## Step 5.

Place the lever back onto the shank.

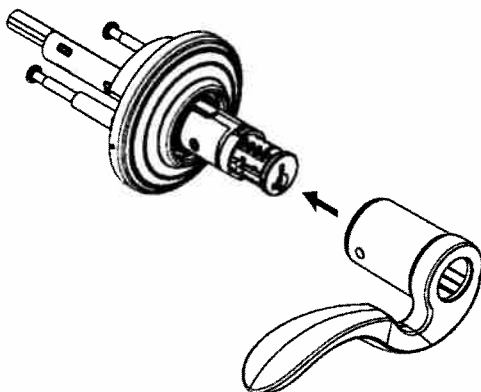

## Step 6.

Secure lever to shank by turning set screw clockwise.

