

BK Radio Programming

1. Select group you want to program.
 - Press (#), then desired 2-digit group number
 - Press (ENT)
2. Bridge gap between rear upper & lower contacts of accessory jack w/ metal, then hold (FCN) key. (Approx. 3 sec.).
3. At "ID" display, enter 6-digit password (000000) and press (ENT).
4. At the "CH 00" display, press channel # to program and press (ENT). Display will change to desired channel.
5. Press (FCN) key and Receive (Rx) freq. will be displayed. To skip press (FCN). To change press (CLR), enter new Rx freq, then (ENT).
6. Rx code guard will be displayed. As a rule, input tone frequencies only on TxCG. To skip press (ENT).
7. Transmit (Tx) freq. is displayed. To skip press (FCN). To change press (CLR), enter new Tx freq. and press (ENT).
8. Tx code guard will be displayed. To skip press (FCN). To change press (CLR), enter new TxCG & press (ENT).
9. Channel label will show, press (FCN).
10. You are now back at entry point, "PRG" will appear in the upper left of display. To review changes press (FCN) repeatedly to scroll through programming options.
11. To enter new channel to program, go back to step 4.
12. When changes are complete, turn radio off then on again to use new frequency information.

****Input tones for Tx only (unless otherwise specified).**