



Adafruit's Raspberry Pi Lesson 4. GPIO Setup

By [Simon Monk](#)

Learn how to set up your Pi for
Hacking Electronics

- [Overview](#)
- [The GPIO Connector](#)
- [Adafruit Pi Code](#)
- [Configuring I2C](#)
- [Configuring SPI](#)
- [Test and Configure](#)
- [Featured Products](#)
- [Single page](#)
- [Download PDF](#)

[Feedback? Corrections?](#)

Configuring I2C

[Save](#) [Subscribe](#)



New Subscription

Please [sign in](#) to subscribe to this guide.

You will be redirected back to this guide once you [sign in](#), and can then subscribe to this guide.

Close

I2C is a very commonly used standard designed to allow one chip to talk to another. So, since the Raspberry Pi can talk I2C we can connect it to a variety of I2C capable chips and modules.

The I2C bus allows multiple devices to be connected to your Raspberry Pi, each with a unique address, that can often be set by changing jumper settings on the module. It is very useful to be able to see which devices are connected to your Pi as a way of making sure everything is working.

[Download File](#)


[Copy Code](#)

```
sudo apt-get install -y python-smbus
sudo apt-get install -y i2c-tools
```


Installing Kernel Support (with Raspi-Config)

Run **sudo raspi-config** and follow the prompts to install i2c support for the ARM core and linux kernel


Go to **Interfacing Options**

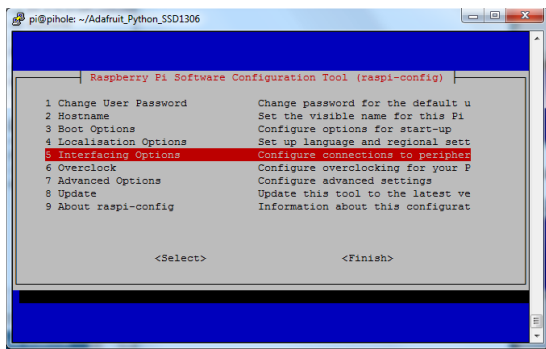


On older versions, look under **Advanced**

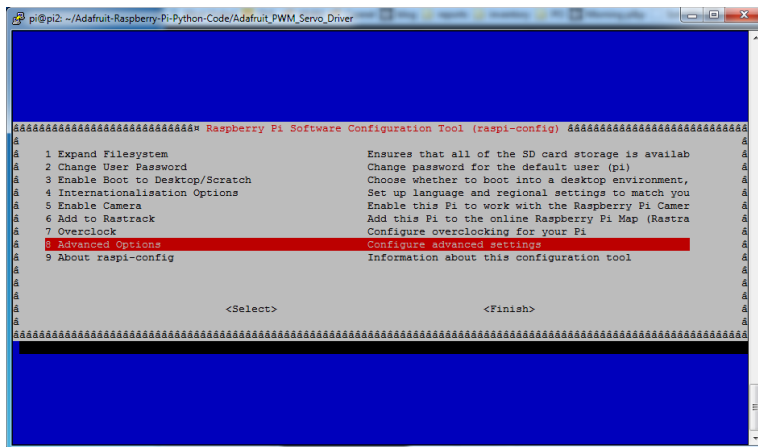

then I2C

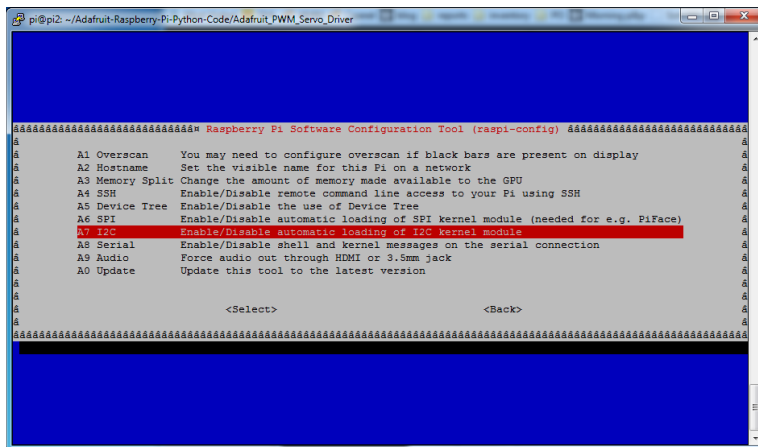

Enable!

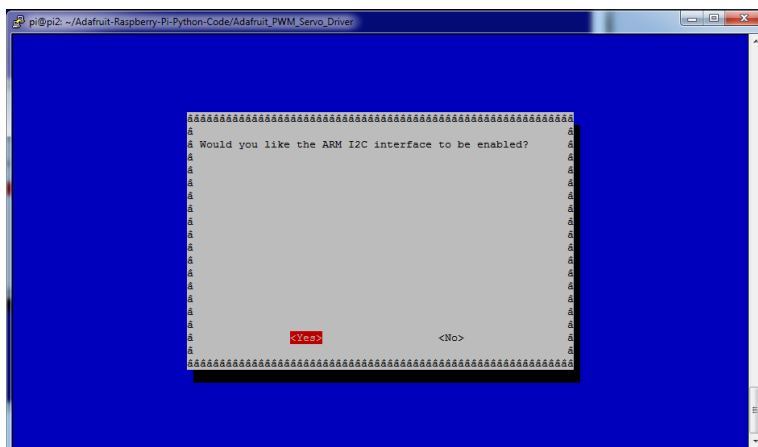



[Download File](#)

[Copy Code](#)

sudo reboot

Testing I2C

Now when you log in you can type the following command to see all the connected devices

[Download File](#)

[Copy Code](#)

sudo i2cdetect -y 1

```
LXTerminal
root@raspberrypi:~# sudo i2cdetect -y 1
 0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -- -- -- -- -- -- -- -- -- -- -- -- --
10: -- -- -- -- -- -- -- -- -- -- -- -- --
20: -- -- -- -- -- -- -- -- -- -- -- -- --
30: -- -- -- -- -- -- -- -- -- -- -- -- --
40: 40 -- -- -- -- -- -- -- -- -- -- -- -- --
50: -- -- -- -- -- -- -- -- -- -- -- -- --
60: -- -- -- -- -- -- -- -- -- -- -- -- --
70: 70 -- -- -- -- -- -- -- -- -- -- -- -- --
root@raspberrypi:~#
```

This shows that two I2C addresses are in use - 0x40 and 0x70.

These values will be different for you depending on what is currently attached to the I2C pins of your Raspberry Pi

Note that if you are using one of the very first Raspberry Pis (a 256MB Raspberry Pi Model B) then you will need to change the command to:

[Download File](#)

[Copy Code](#)

sudo i2cdetect -y 0

The Raspberry Pi designers swapped over I2C ports between board releases. Just remember: 512M Pi's use i2c port 1, 256M ones use i2c port 0!

When you are finished in raspi-config reboot for the i2c modules to automatically load into the kernel.

[Adafruit Pi Code Configuring SPI](#)

This guide was first published on Dec 14, 2012. It was last updated on Dec 14, 2012.

This page (Configuring I2C) was last updated on Nov 24, 2021.

Text editor powered by [tinymce](#).

Difficulty: Beginner

Guide Type: Project

Contributors: [Simon Monk](#), [lady_ada](#)

Categories: [Raspberry Pi/Learn Raspberry Pi](#)

Groups: [Learn Raspberry Pi \(4 of 13\)](#)

165 Saves

Featured Products