

# RAK3172 Evaluation Board Datasheet

## Overview

### Description

The RAK3172-E is a WisDuo evaluation board for the RAK3172 module, using an STM32WLE5CCU6 SoC chip. It is based on the RAK3372 WisBlock Core, compatible with the RAK5005-O base board. It provides easy access to the important pins of the RAK3172 module, simplifying development and testing. It also allows connection of other modules to the base board slots, enabling the building of complete IoT projects with integrated connectors for battery and solar panel, plus an onboard charging circuit.

This module complies with LoRaWAN 1.0.3 specifications (Classes A, B, and C). It also supports LoRa point-to-point (P2P) communication, facilitating the quick implementation of customized long-range LoRa networks.

### Features

- Based on **STM32WLE5CCU6**
- **LoRaWAN 1.0.3** specification compliant
- **Supported bands:** EU433, CN470, IN865, EU868, AU915, US915, KR920, RU864, and AS923-1/2/3/4
- LoRaWAN Activation by OTAA/ABP
- LoRa Point-to-Point (P2P) communication
- Custom firmware using Arduino via RUI3 API
- Easy to use AT command set via UART interface
- Long-range - greater than 15 km with optimized antenna
- ARM Cortex-M4 32-bit
- 256 kbytes flash memory with ECC
- 64 kbytes RAM
- **Supply Voltage:** 5 V via USB or 3.7-4.2 V using Li-Ion Battery
- **Temperature Range:** -20° C ~ 70° C

## Specifications

This section covers the hardware and software specifications for the RAK3172 Evaluation Board. It includes the interfaces, operating parameters, and a link to the board's latest firmware.

### Overview

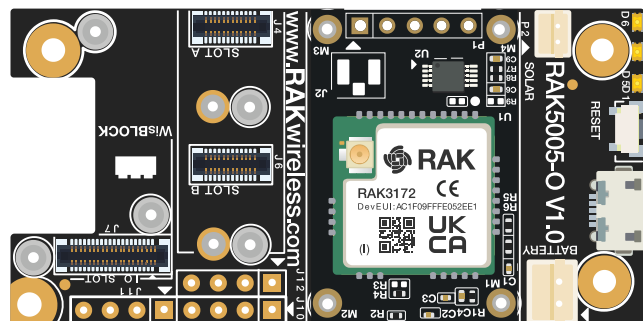


Figure 1: RAK3172 Evaluation Board Overview

### Hardware

The hardware specification is categorized into six parts. It discusses the interfacing, pinouts, and their corresponding functions and diagrams. It also covers the electrical, mechanical, and environmental parameters, including tabular data of the functionalities and standard values of the RAK3172 Evaluation Board.

## Interfaces

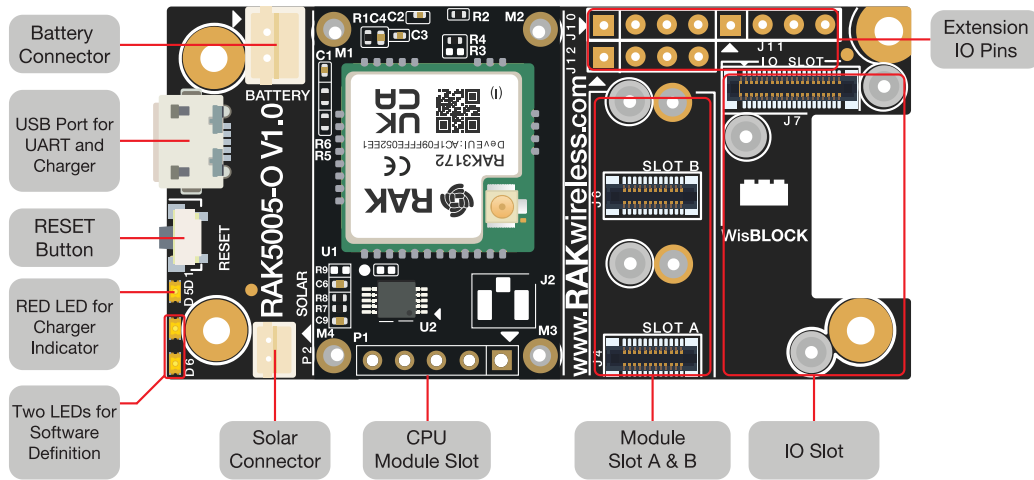


Figure 2: RAK3172 Evaluation Board Interfaces

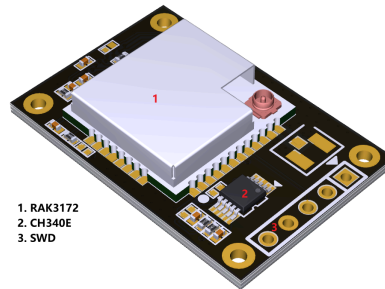


Figure 3: Parts RAK3372 Module

## RF Interface

The RF Antenna of the RAK3172 Evaluation Board is connected to a standard iPEX antenna connector.



Figure 4: RAK3172 LoRa antenna

### WARNING

Make sure to install the LoRa antenna first before powering the RAK3172 Evaluation Board. Failure to do so can damage the board.

## USB Interface

The Micro-B USB connector is compliant with the USB 2.0 specification. The pin definition of the USB interface is shown below:

Pin Number	Pin Name	Description
1	USB_VBUS	(+5 V) USB Bus Voltage
2	USB_DM	USB Bus D+ positive pin
3	USB_DP	USB Bus D- negative pin
4	NC	Not connected
5	GND	Ground

 


Figure 5: RAK3172 Micro-B USB connector

The USB data bus is connected to a **USB-SERIAL CH340** chip. The **CH340** is a series of USB bus adapters that provide a virtual serial interface over the USB bus.

#### Battery Connector

The RAK3172 Evaluation Board can be powered by a battery via the P1 connector. The battery is not included in the packaging.

Use **Figure 6** as a guide to connect the battery. The pin highlighted in the yellow box with the triangle silkscreen mark indicates pin 1 (GND).

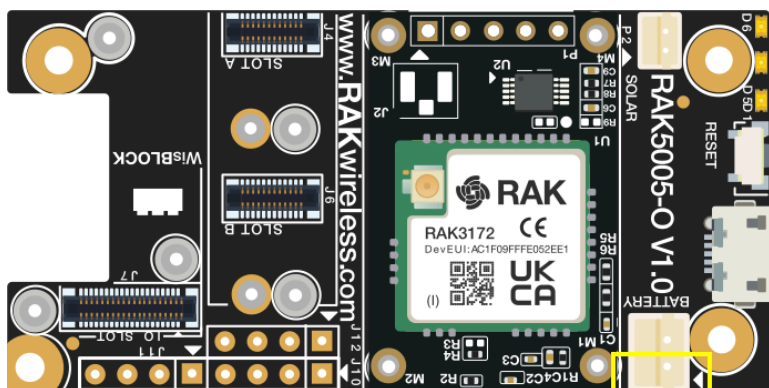


Figure 6: RAK3172 EVB battery connector

The pin definition of the RAK3172 Evaluation Board Li-Ion battery connector is shown in the table below. The matching connector for the battery wires is a [JST PHR-2.2 mm pitch female](#).

#### P1 Battery Connector

Pin	Pin Name	Description
1	GND	Ground
2	VBAT	Positive + pin of the battery

The full specification of RAK3172 Evaluation Board battery is shown in the table below.

No.	Item	Specification
1	Charge Cut-off Voltage	4.2 V
2	Nominal Voltage	3.7 V
3	Discharge Cut-off Voltage	2.75 V
4	Typical Capacity	2650 mAh
5	Max Discharge Current	0.5 C at 25 °C to 45 °C
6	PH Connector	2.0 mm pitch
7	Cable Length	110.0±3.0 mm
8	Cable Color	Red: VBAT, Black: GND

#### NOTE

The voltage of the Li-Ion battery **must not exceed 4.3 V**. When connecting the battery make sure the polarity is correct. Not all connectors are wired the same.

#### Solar Panel Connector

A 5 V solar panel can be connected to the board via the P2 connector to charge the battery. The solar panel is not included in the RAK3172 Evaluation Board packaging. Use **Figure 7** as a guide to connect the solar panel. The pin highlighted in the yellow box with triangle silkscreen marking indicates pin 1 (5 V solar panel positive).

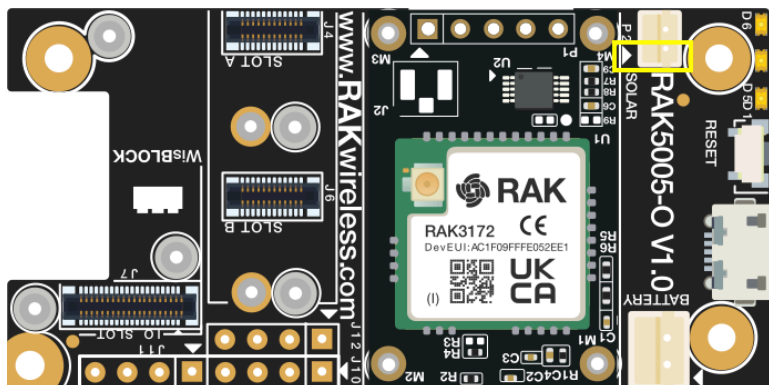


Figure 7: RAK3172 EVB solar connector

The pin definition of the RAK3172 Evaluation Board solar panel connector is shown in the table below. The matching connector for the solar panel wires is an [JST ZHR-2 1.5 mm pitch female](#).

#### P2 Solar Panel connector

Pin	Pin Name	Description
1	C0NN_5V	Positive + pin of solar panel
2	GND	GND

The full specification of the Solar Panel for the RAK3172 Evaluation Board is shown in the table below.

No.	Item	Specification
1	Nominal Voltage	5 V
2	Typical Current	80 mA
3	Size	Length: 60 mm, Width: 60 mm, Height: 2 mm
4	Connector	1.5 mm pitch
5	Cable Color	Red: CONN_5V, Black: GND

#### NOTE

The output of the solar panel **must not exceed 5.5 V**. Otherwise, it may cause permanent damage to the board.

#### LEDs

- **Red LED** - connected to the charger chip to indicate the charger status. When the battery is charging, the red LED is on. When the battery is full, this LED is dimmed or off.
- **Green LED** - connected to the MCU module, can be controlled in code by the user.
- **Blue LED** - connected to the MCU module, can be controlled in code by the user.

#### RESET Button

The reset push button is connected to the NRST pin of the RAK3172. When pushed, it resets the MCU.

#### Pin Definition

The following tables below show the pin definitions of the RAK3172 Evaluation Board:

##### J10, J11, J12 2.54 mm header

##### J10

Pin Number	Pin Name	Description	Microcontroller Pin
1	BOOT0	Boot for ST MCU	BOOT0
2	VDD	Power supply generated by CPU module	
3	TX1/USART1_TX	USART1 TX pin	PB6
4	RX1/USART1_RX	USART1 RX pin	PB7

##### J11

Pin Number	Pin Name	Description	Microcontroller Pin
1	AIN1	ADC input signal	PB3
2	IO1	General purpose IO	PB5
3	IO2	Power switch control of 3V3_S	PA8
4	GND	Ground	

### NOTE

3V3\_S is another 3.3 V power supply that can be turned on and off by the MCU. Set pin IO2 to **LOW/0** when the sensor is not in use to save power.

### J12

Pin Number	Pin Name	Description	Microcontroller Pin
1	GND	Ground	
2	I2C1_SCL	I2C clock pin	PA12
3	I2C1_SDA	I2C data pin	PA11
4	VDD	Power supply generated by CPU module	

### RF Characteristics

The RAK3172 supports two frequency variations: RAK3172(L) for low radio frequencies and RAK3172(H) for high radio frequencies.

### Operating Frequencies

Module	Region	Frequency
RAK3172(L)	Europe	EU433
	China	CN470
RAK3172(H)	Europe	EU868
	North America	US915
	Australia	AU915
	Korea	KR920
	Asia	AS923-1/2/3/4
	India	IN865
	Russia	RU864

### Electrical Characteristics

#### Operating Voltage

Power is supplied to the RAK3172 Evaluation Board via USB (5 V) or a Li-Ion battery.

The LDO regulator can operate on the following voltage range:

Feature	Minimum	Maximum	Unit
Vin	1.8	6.5	Volts (V)

### Schematic Diagram

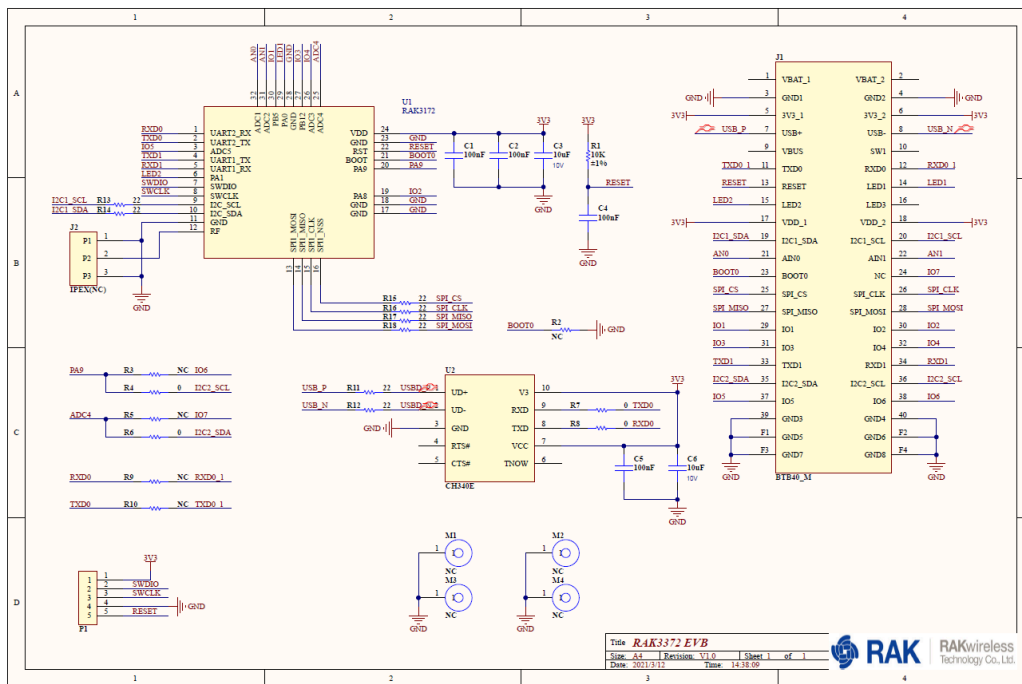


Figure 8: RAK3172 Evaluation Board Schematic Diagram

## Mechanical Characteristics

## Module Dimensions

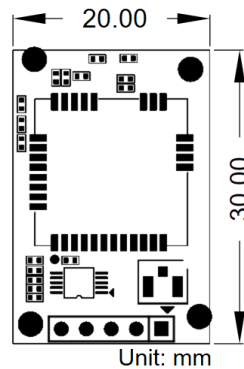


Figure 9: RAK3172 Physical Dimension

## Environmental Characteristics

## Operating Temperature

Feature	Minimum	Typical	Maximum	Unit
Operating Temperature	-35	25	70	°C

## Software

Download the latest firmware for the RAK3172 WisDuo evaluation board provided below. The RAK3172(L) and RAK3172(H) use the same firmware; it will automatically detect the module variant.

The **bin** file contains the application code only and you need the RAK DFU Tool to upload this file to the module.

The **hex** file contains both the bootloader and the application code. You need to use STM32CubeProgrammer to upload this.

**⚠ WARNING**

Uploading the **\*\*.hex\*\*** file via STM32CubeProgrammer will erase all configured data on the device.




RAK3172 uses UART2's serial pins to upload the latest firmware.

**💡 NOTE**

RAK3172 should automatically go to BOOT mode when the firmware is being uploaded via RAK DFU Tool or WisToolBox.


If BOOT mode is not initiated, you can manually send **AT+BOOT** command to start bootloader mode.

**Firmware/OS**

Model	Version	Source
RAK3172	RUI3 (default baudrate = 115200)	<a href="#">Download</a> 
RAK3172	RUI3 (default baudrate = 115200)	<a href="#">Download</a> 
RAK3172	<b>DEPRECATED</b> V1.0.4 (default baudrate = 9600)	<a href="#">Download</a> 

**⚠ WARNING**

There are RAK3172 devices loaded with old firmware versions which are not based on RUI3 (RAKwireless Unified Interface V3). These devices have v1.0.4 and below.

If the host microcontroller code is based on this old firmware, we have a [RAK3172 AT Command migration guide](#)  that explain in detail the few differences between the two AT commands set.

**Certification**
**💡 NOTE**

For CE and FCC certifications we provide an AT command guide.

You can find it in our [RUI3 documentation](#)  or get it from our [Download Center](#) .