 
 


Induction cooktop

It's an induction cooktop, so you need to have a pan on top of the cooktop for it to heat. All our pans work on this cooktop. (1) shows the back burner, (2) the front burner and (3) the control panel.

The left side of the control panel controls the front burner; the right side controls the back burner.

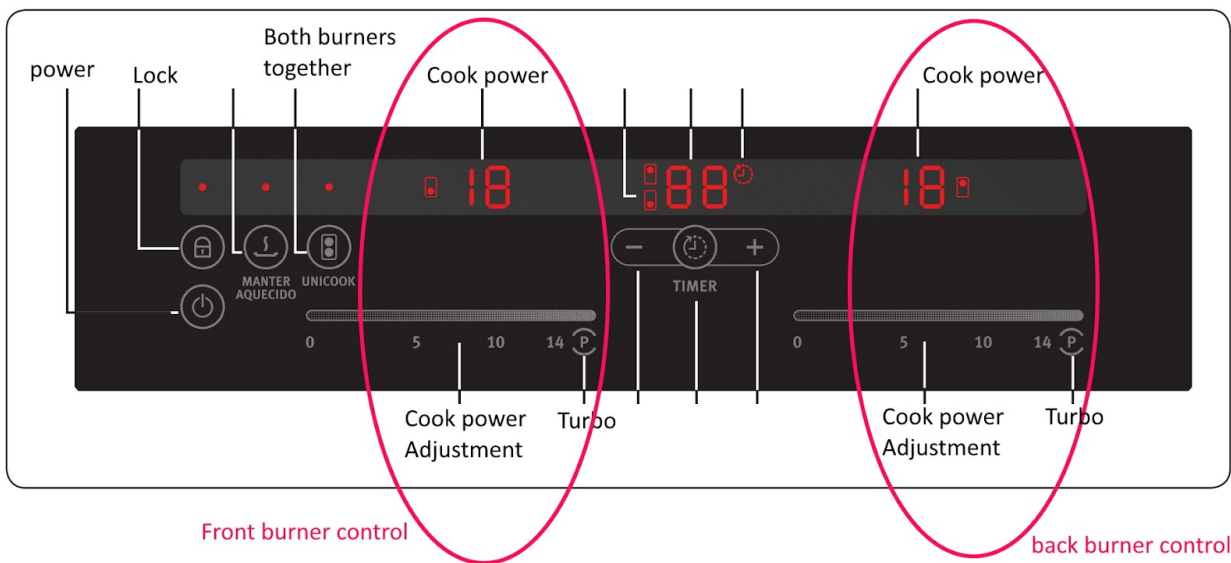

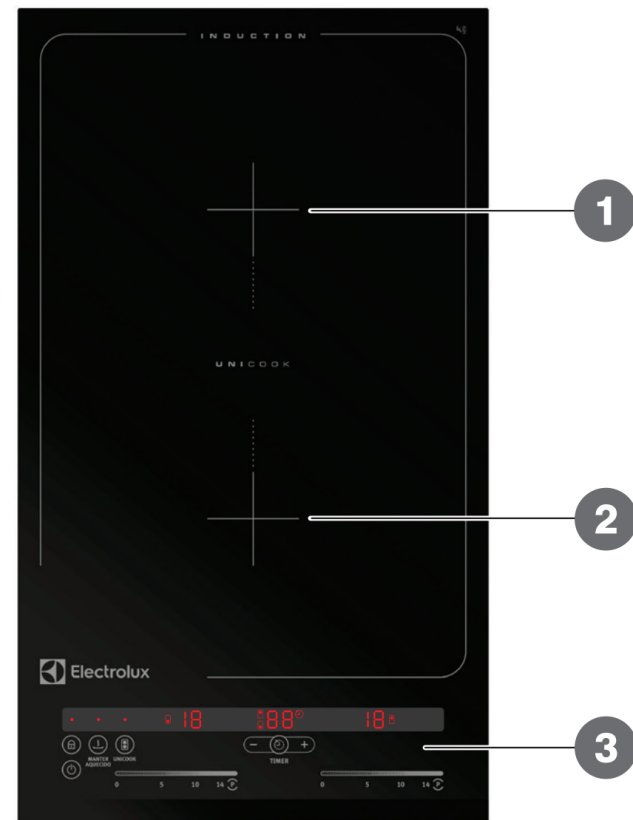 












How to use it

- 1) Press power to turn it on, a sound will play and the indicator light turns on
- 2) Choose the back or front burner, put a pan on top of it. The cooktop doesn't heat if there's no pan.
- 3) Adjust the power for the front (left) or back (right) burner using the correct slider
- 4) To turn it off, press the power button for 1s, a sound will play and the indicator light turns off.

More info you Might Need...

There are several indicator signals that show up in the cook power place above:

	Cooking area off
 - 	Cooking area on, numbers from 1-14 indicate cooking power.
	Warm function is on
	Heat automatically is on
	Turbo power is on
 + dígito	Error
 /  / 	Cooking power level
	Lock is on
	Pan is not positioned correctly
	Automatic turning off is ongoing

[Manual \(in Portuguese\)](#)