

Exhaust Fan



How to use

Slide it out to turn it on, pulling gently from the sides or bottom. To turn it off, slide it in.

More info you Might Need...


The buttons on the exhaust fan (only visible when opened) should already be in the correct position to make the fan work properly. If it is not:

- Left button to turn on/off lighting
- Right button to alter fan speed.

[Manual \(in Portuguese\)](#)



Exaustor

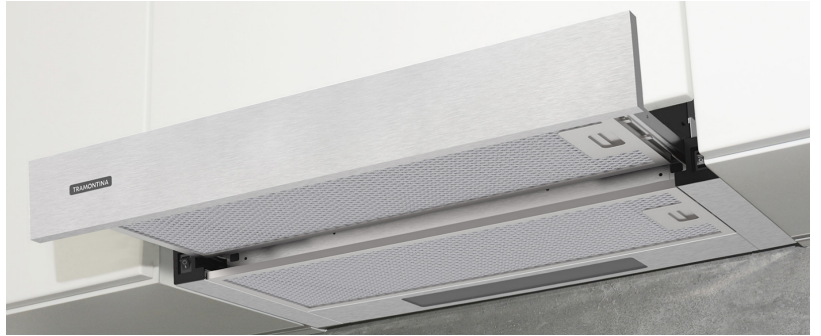

How to use

Puxando gentilmente pelos lados ou por baixo, puxe o painel frontal. O exaustor ligará automaticamente, e as luzes acenderão. Para desligar, feche o painel frontal.

Mais informações caso você precise...

Os botões no exaustor que só estão visíveis quando o exaustor está aberto já devem estar nas posições corretas para o exaustor funcionar corretamente. Em caso de problemas:

- Botão esquerdo aciona iluminação.
- Botão direito altera a velocidade do ventilador.

[Manual](#)

