



SD card for DFPLAYER must be programmed with mp3 tracks before use

SD card tracks must look like this 0001 sampletrack.mp3

DAC-L and DAC-R and Ground to headphones or external amplifier input

SW1 turn to select mp3 track and push to play

SW2 short press = PREVIOUS SELECTION and long press raises volume

SW3 short press = NEXT SELECTION and long press lowers volume

\*\* Use either a speaker or the stereo output jack but not both at the same time.

TITLE: <b>SOUND DFPLAYER</b>		REV: 1.0
Date: 2018-08-28	Sheet: 1/1	
EasyEDA V5.7.22	Drawn By: experimentool	