


Fire Bird V P89V51RD2

Switch & Buzzer Interfacing and
Programming

Buzzer Control

- Buzzer is located on the Fire Bird V robot's main board.
- Buzzer will turn on when logic 0 is applied to the buzzer enable pin.

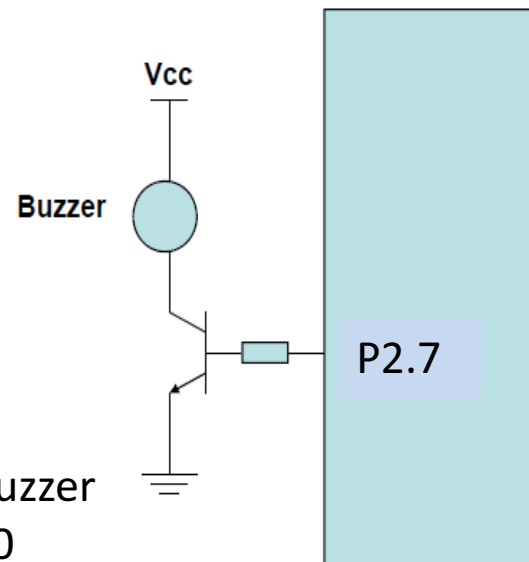


To turn ON the buzzer
Set P2.7 to logic 0

Buzzer & Switch Control

- Switch is located on the Fire Bird V robot's main board.
- Switch connected to P3.3 pin of uC.
- When we press switch, Pin is Grounded.

Switch Pressed then
Pin3.3 logic is 0

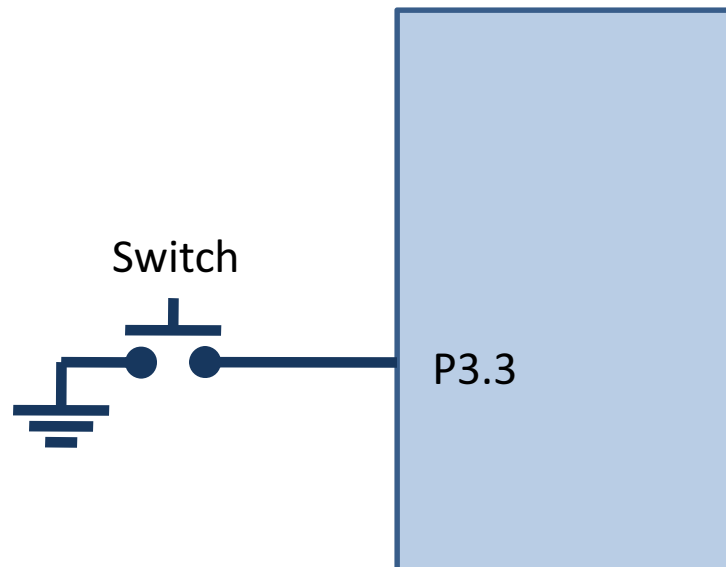

A grayscale, pixelated image of a hand holding a pen, with the text "Thank You" overlaid in blue.

*Thank
You*