




Delete\_Screen\_Layer(If you have a layer? you may delete it. To give an example from the beginning.)

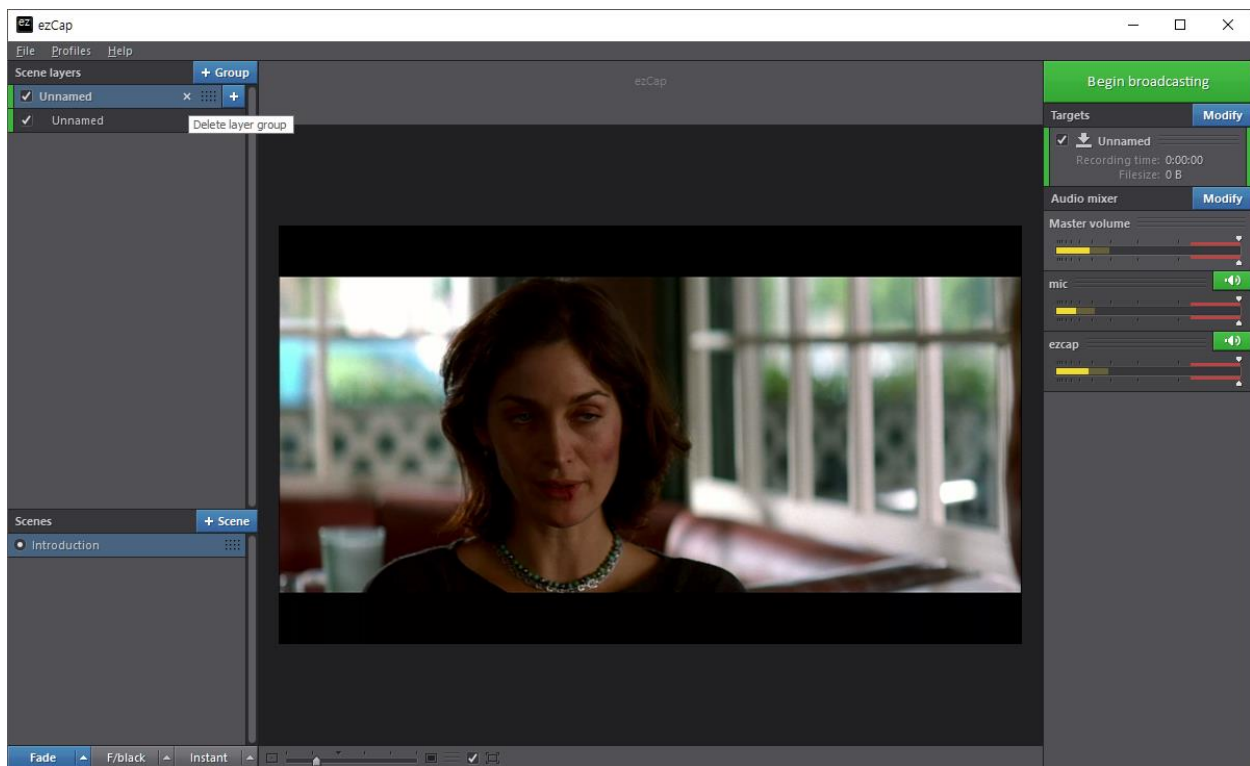


Delete\_Layer\_Group

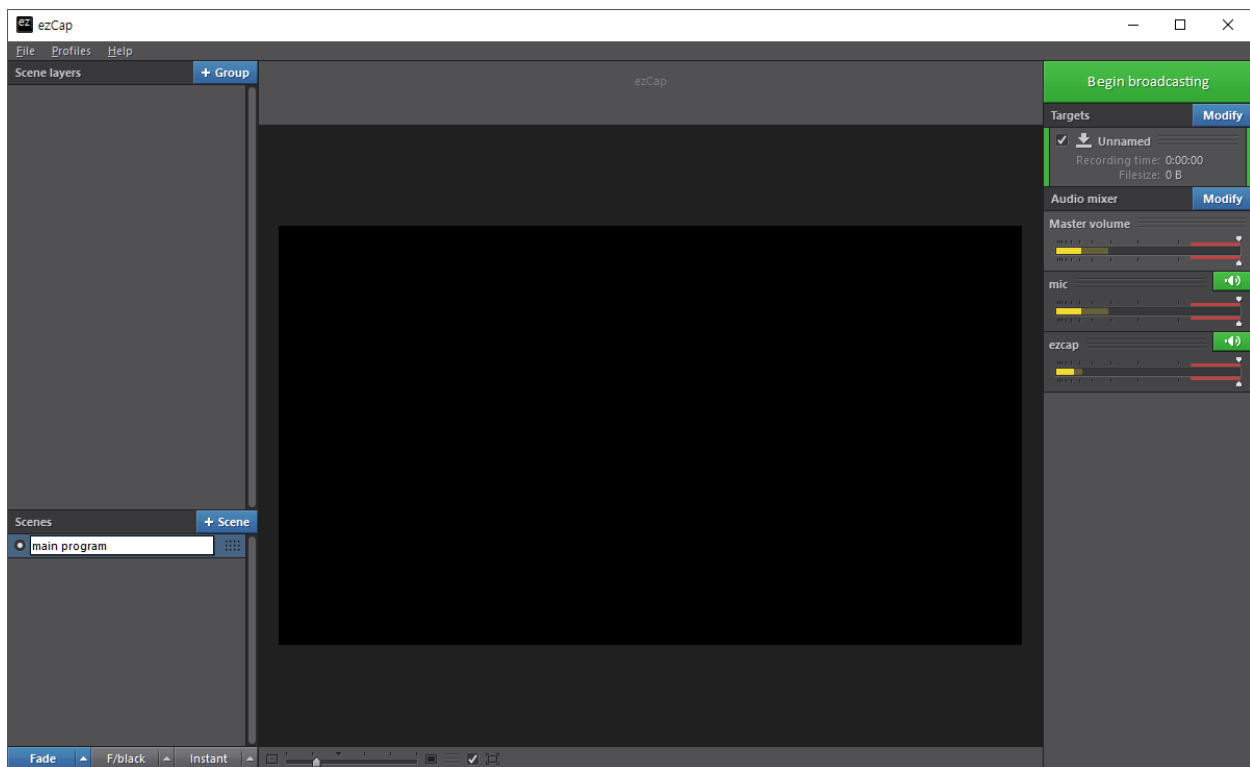


The scene can not be erased. There must be at least one scene. And Change the Scene Name

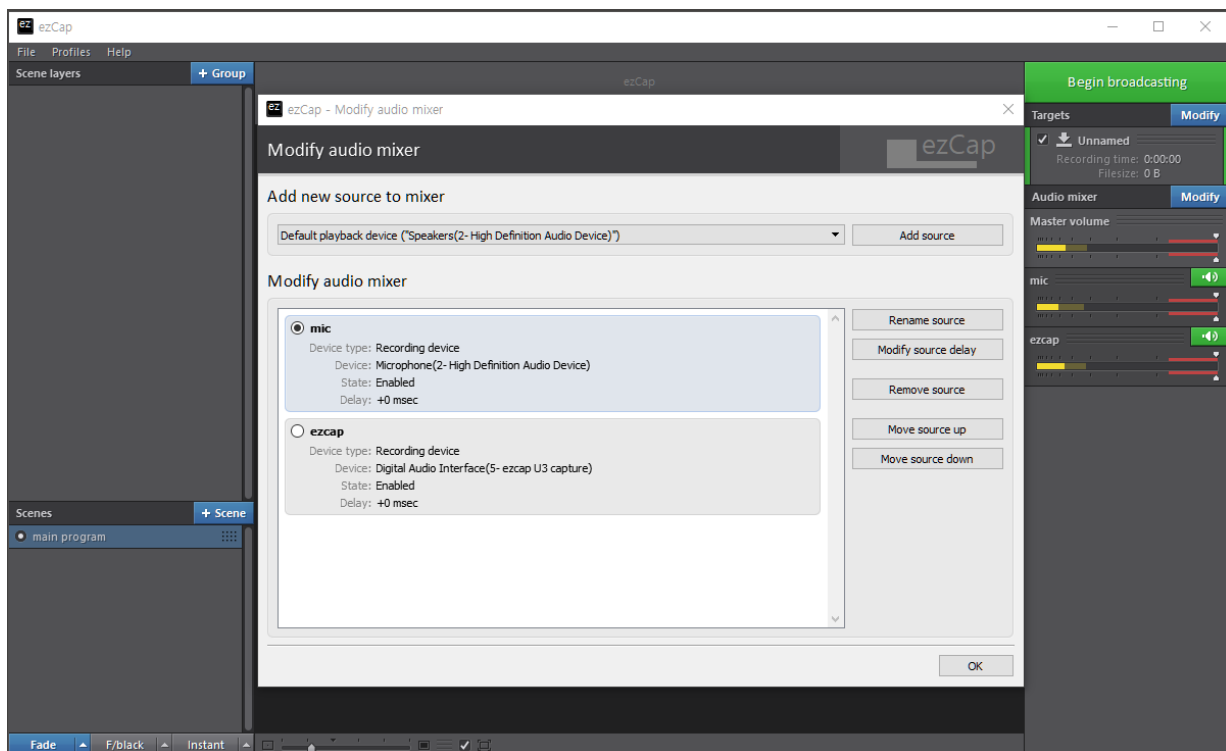


Also, Erase Audio Settings to [Remove source] button

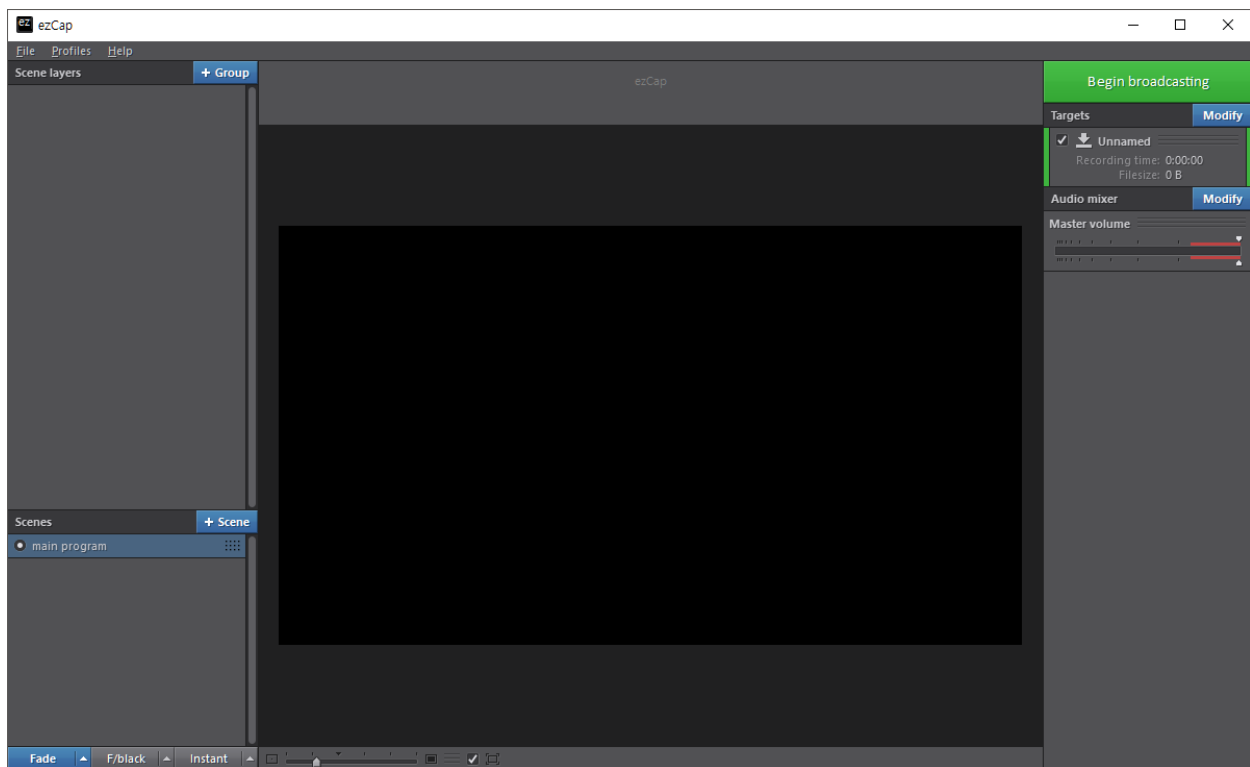


Empty Now

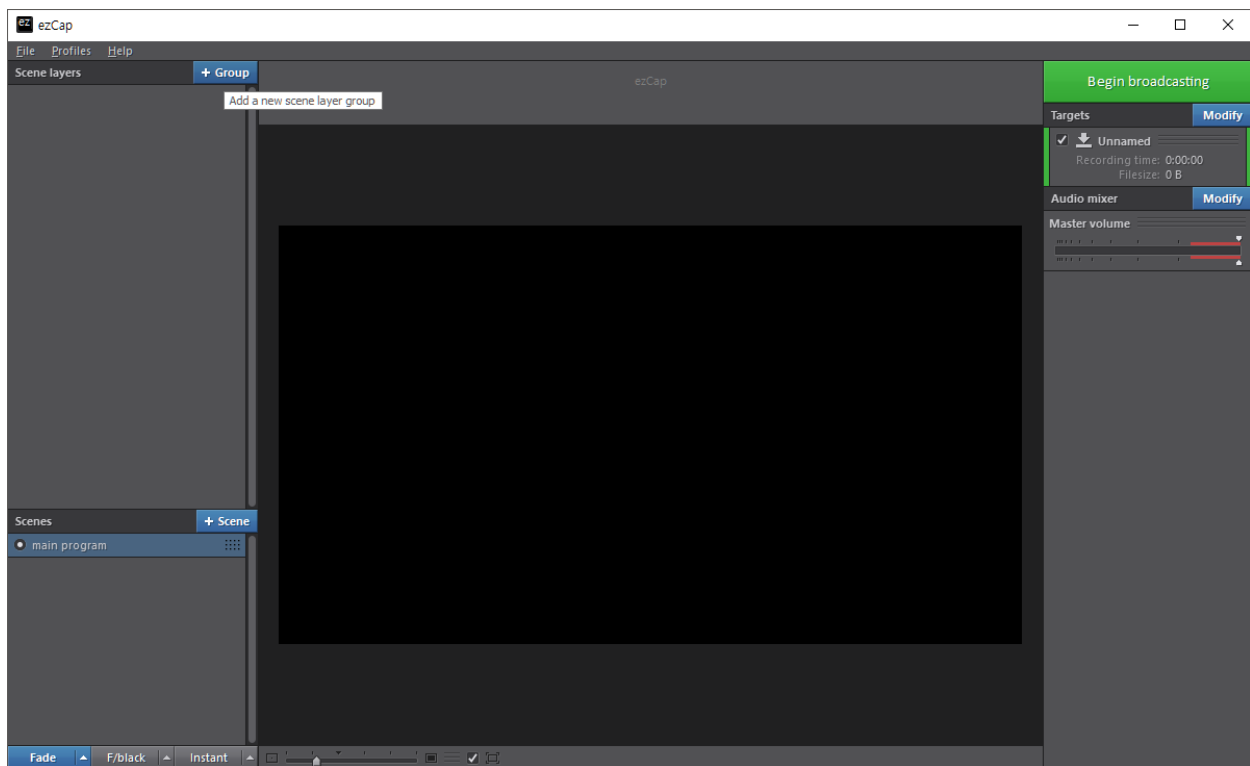


Add Layer Group

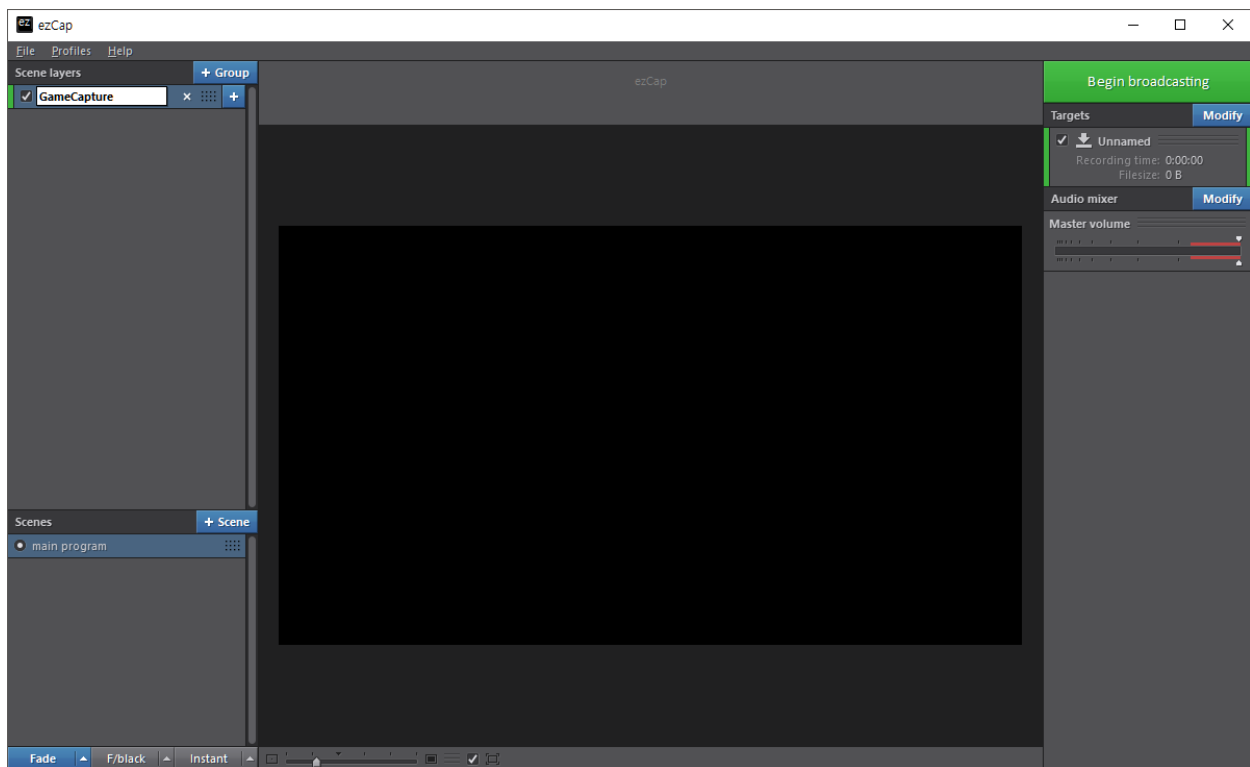


Change Layer Group Name

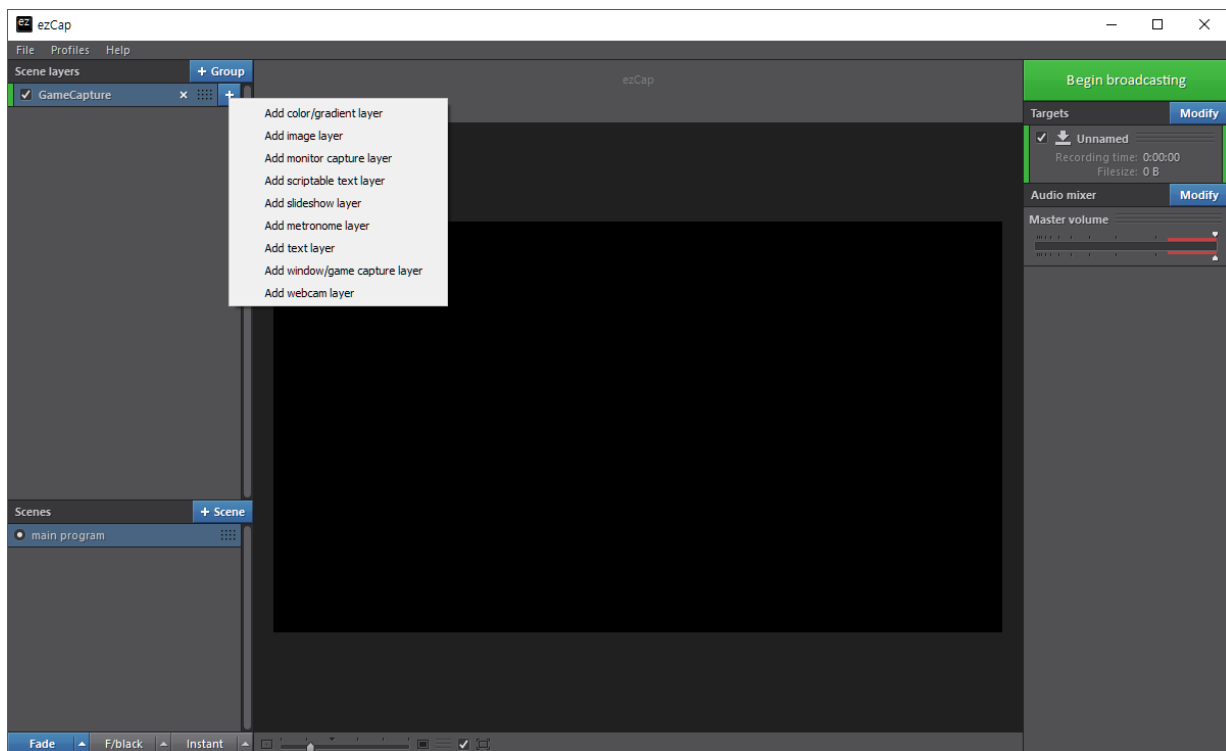


Add Webcam Layer

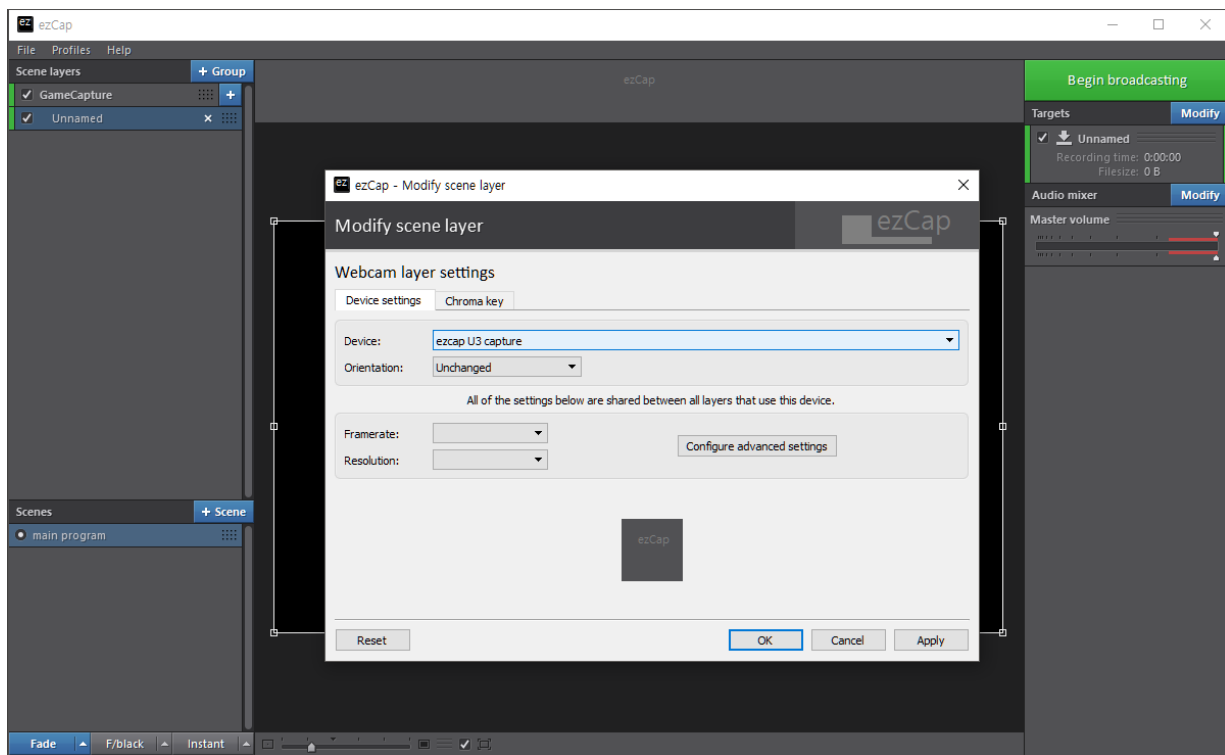


Ezcap Device for Webcam Layer, Sometimes Frame Rate Resolution Not Displayed...

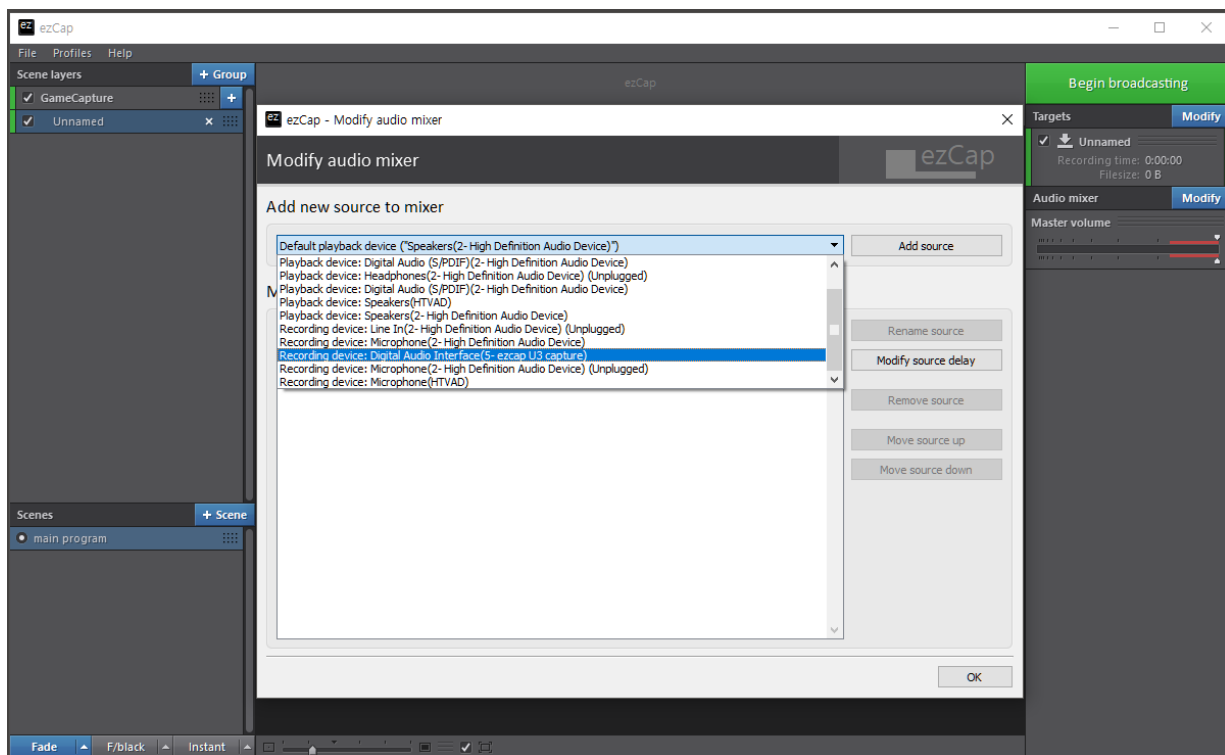


Add Audio Device, select ezcap

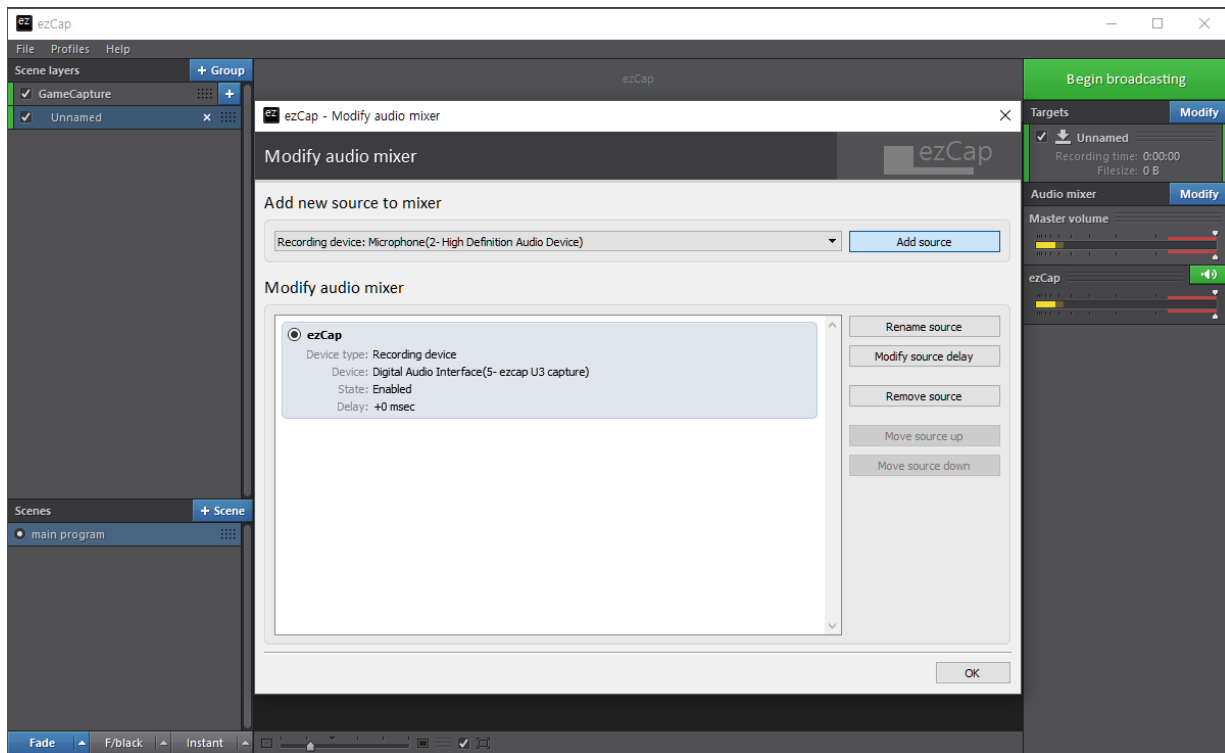


## Ezcap audio

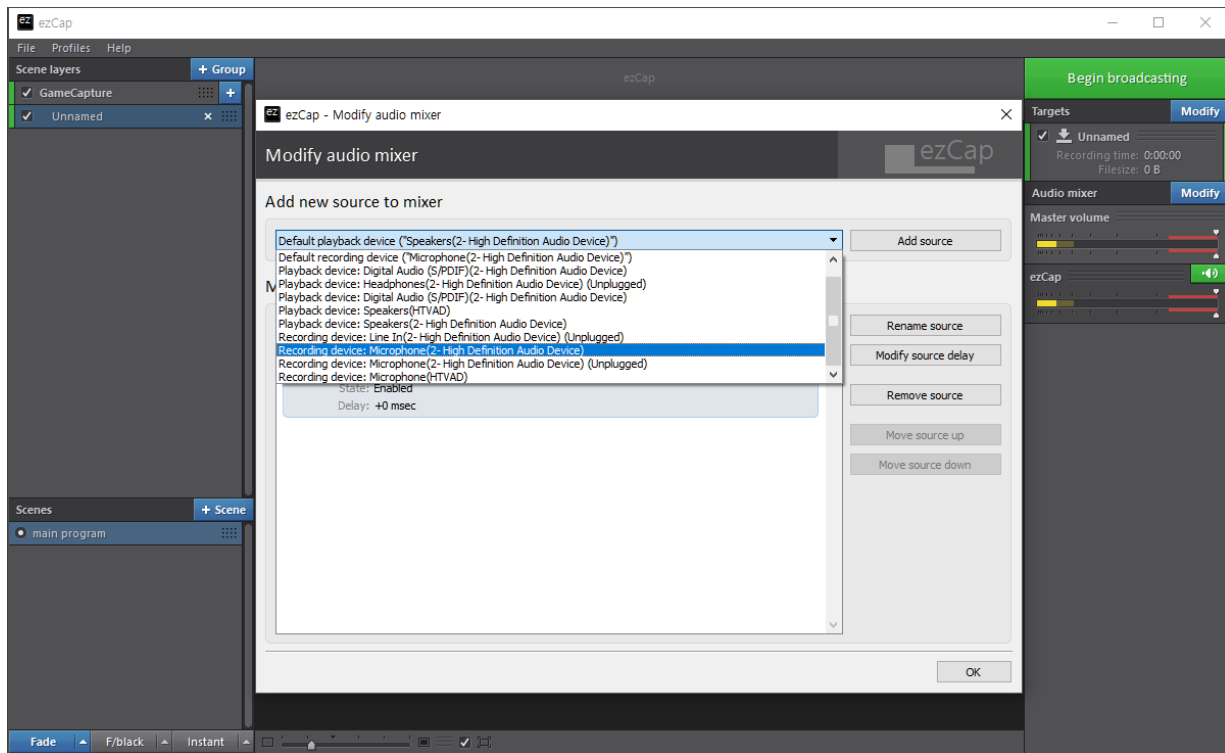


## Select Mic

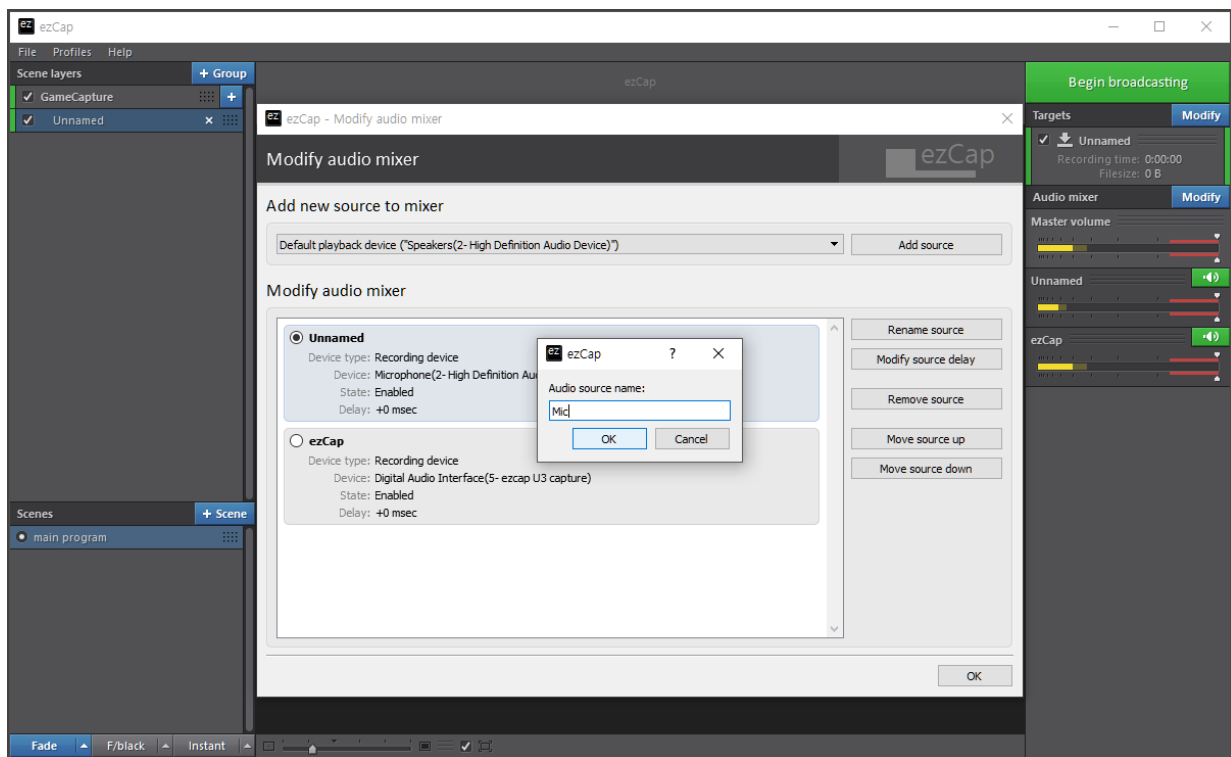


Add Mic, Rename to Mic

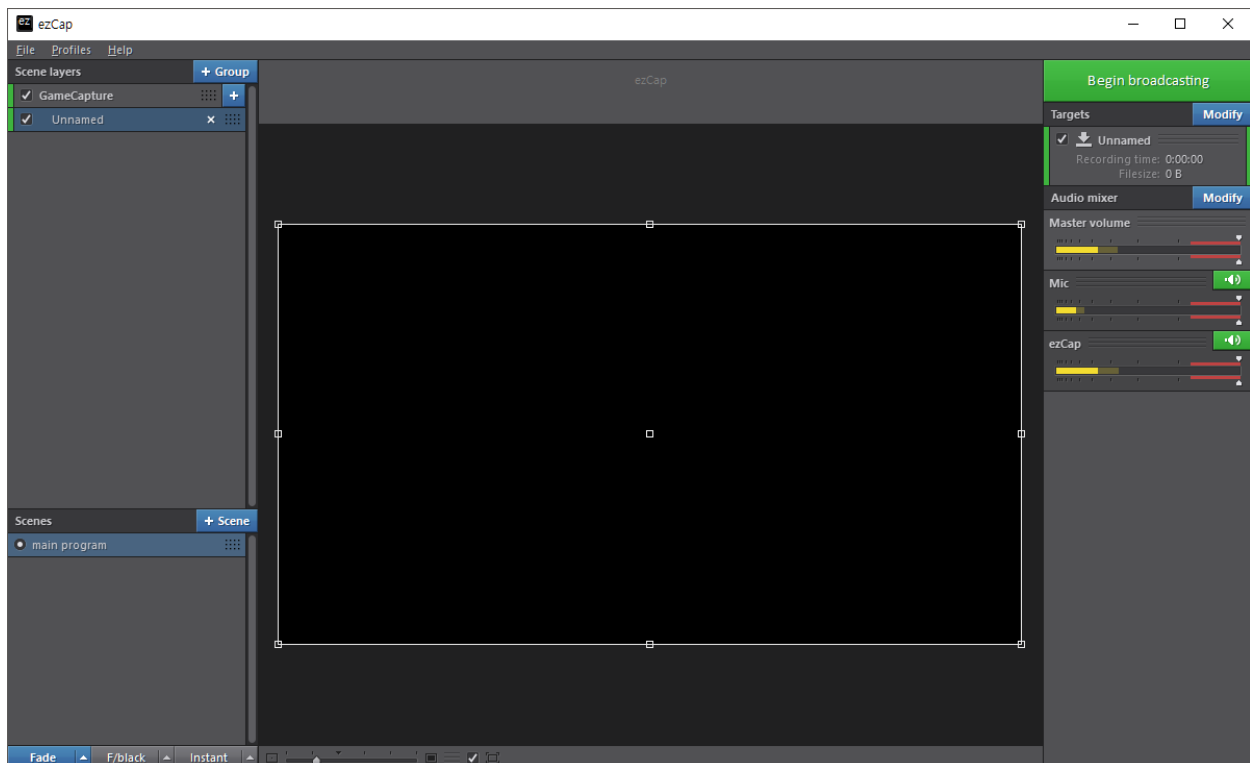

Now, One Layer, Two Audio

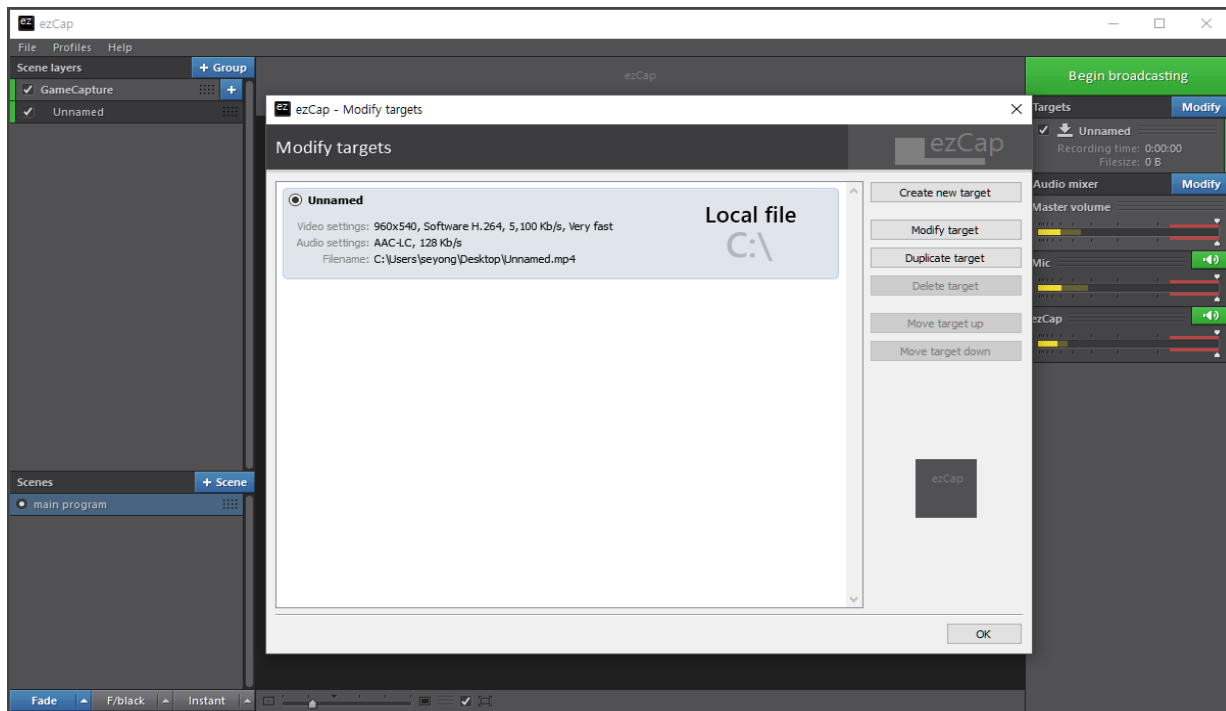

Target Modify[setting]

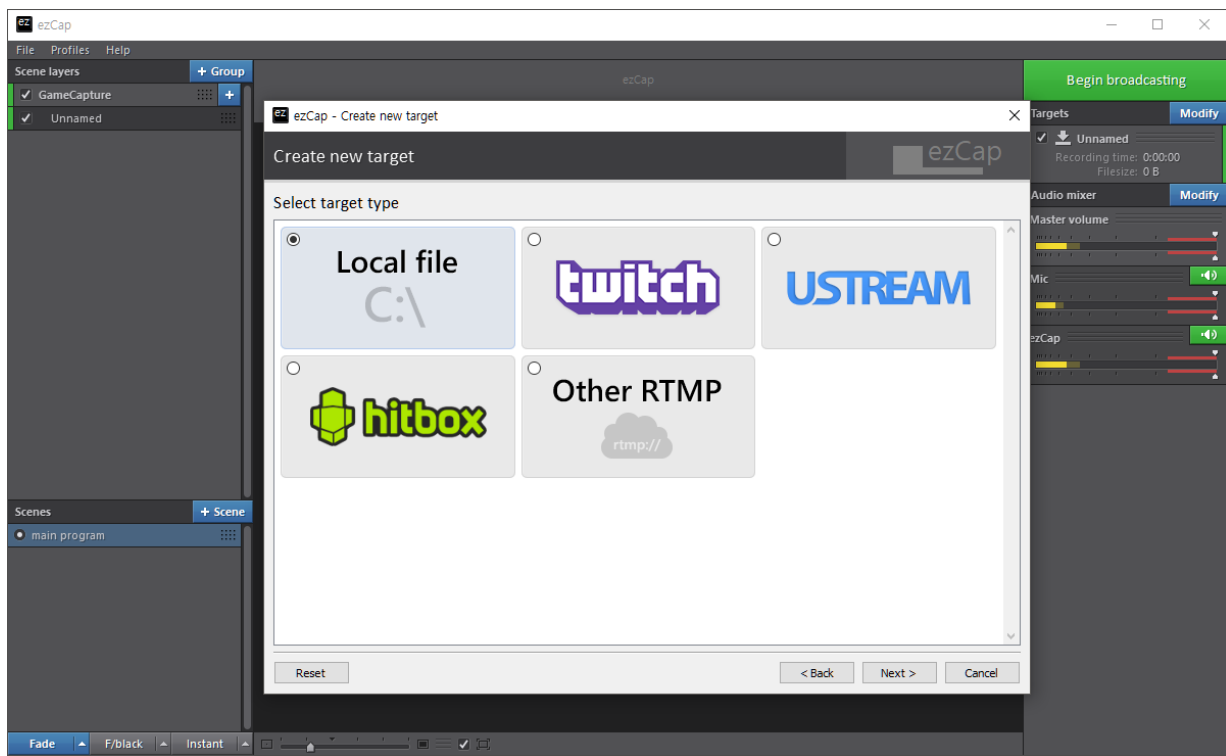

For Fast Test, Select / Add Local File Generate



If you do not see the video when you have added a webcam layer,.

You have to exit the program again and run it again.

Also If you have when add/select an audio ezcap device, Same issue happened,

you have to exit the program again and run it again.

I'm fixing this issue.