


## Connecting App to the KSC

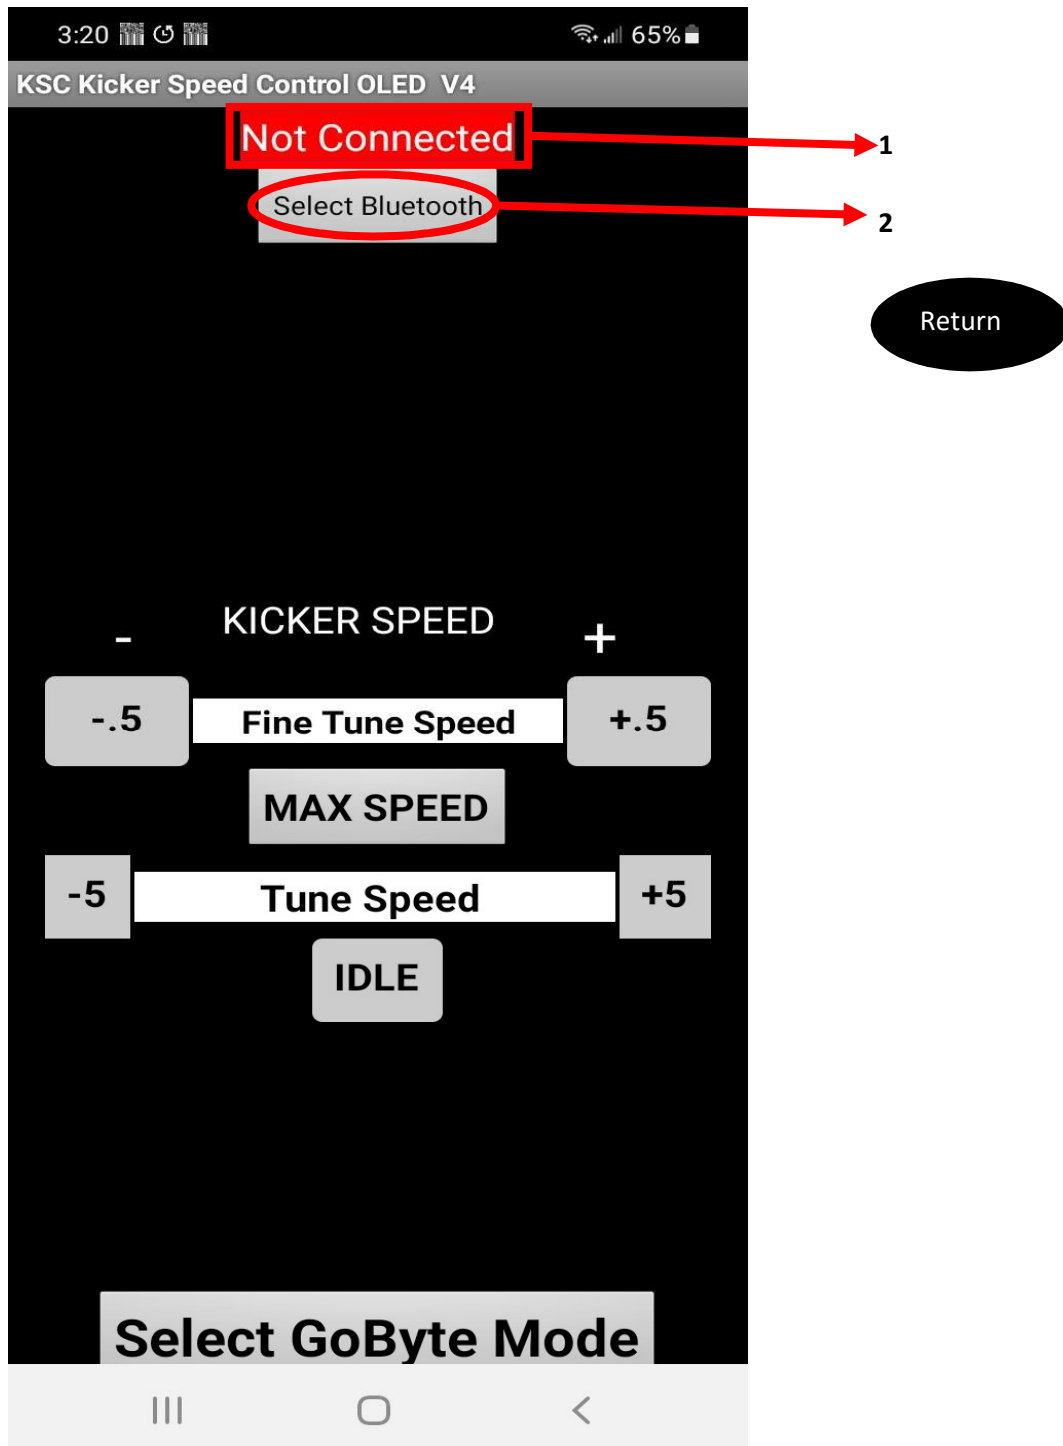

Zone 1 = Indicate that you are not connected in the RED box

The Not Connected and the red box will disappear when the box is connected to the App

Zone 2 = Button go to available bluetooth device for selecting

NOTE: Prior to connect the App to KSC you have to pair it with your device


## Available Bluetooth Device page



Return

You choose your KSC in the available Device

## Main Screen

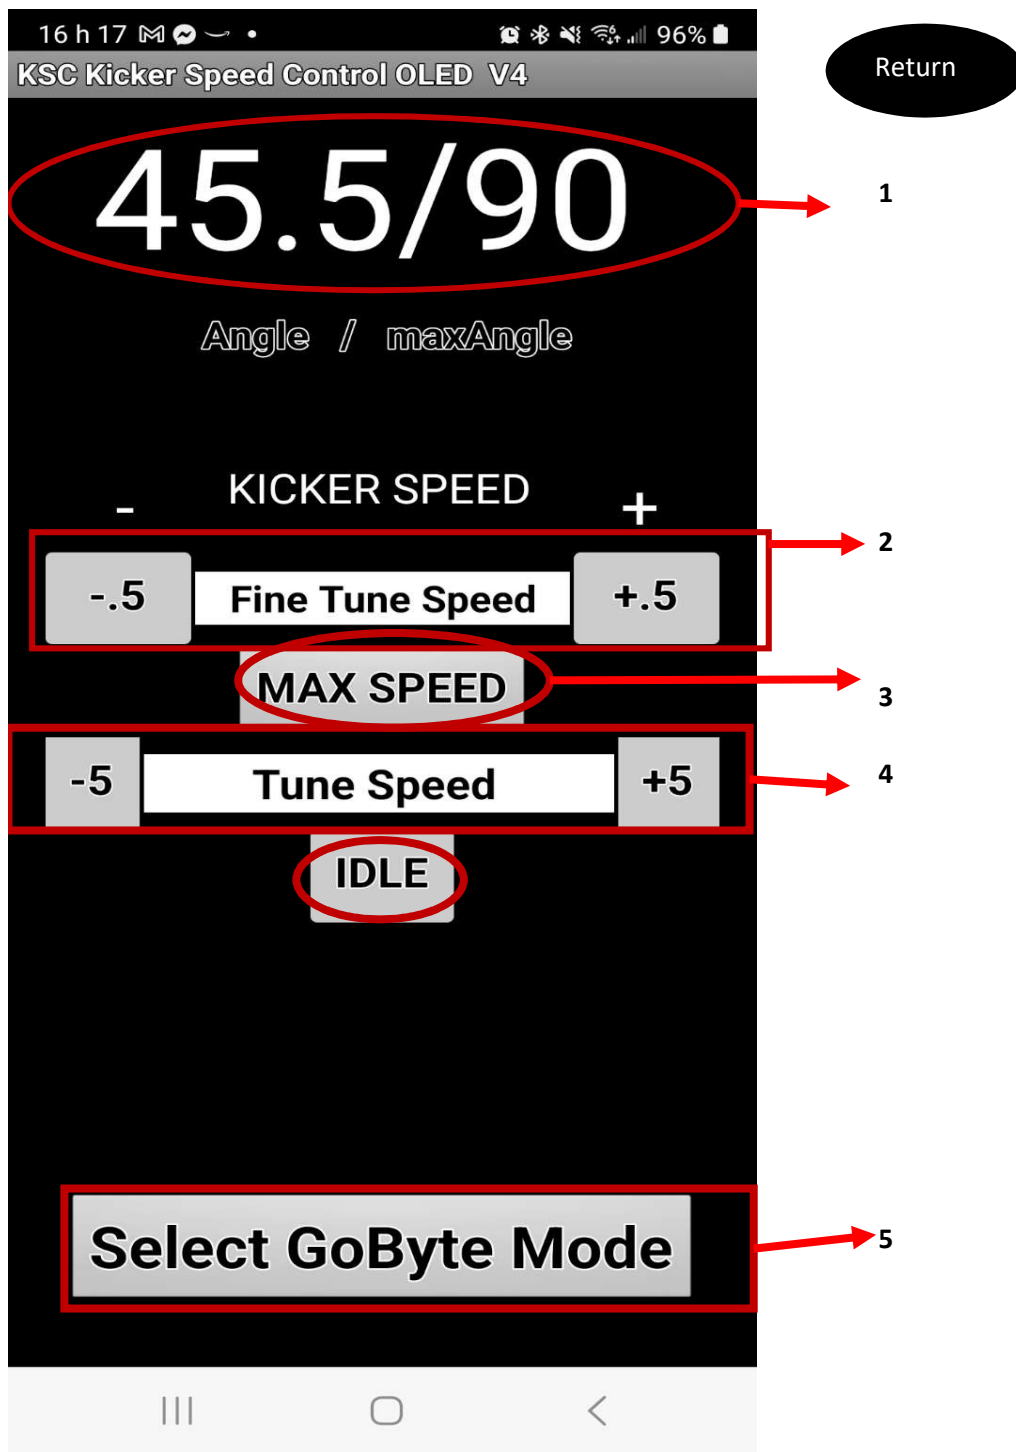

Zone 1 = Give the servo angle

Zone 2 = Fine tune servo angle ( Kicker speed) by +.5 or -.5 degree

Zone 3 = Servo go to Max Angle ( Kicker speed high revolution )

Zone 4 = Adjust servo angle ( Kicker speed)by +5 or -5 degrees )

Zone 5 = Go to screen GoByte mode for selecting the mode


## GoByte Screen



Return

When you choose one of the mode  
the servo will speed up or slow down the motor  
according to the mode you choose for 10 secondes  
every 2, 4, 6 minutes according to the mode you  
have chosen

This screen show up after you choose the GoByte Mode

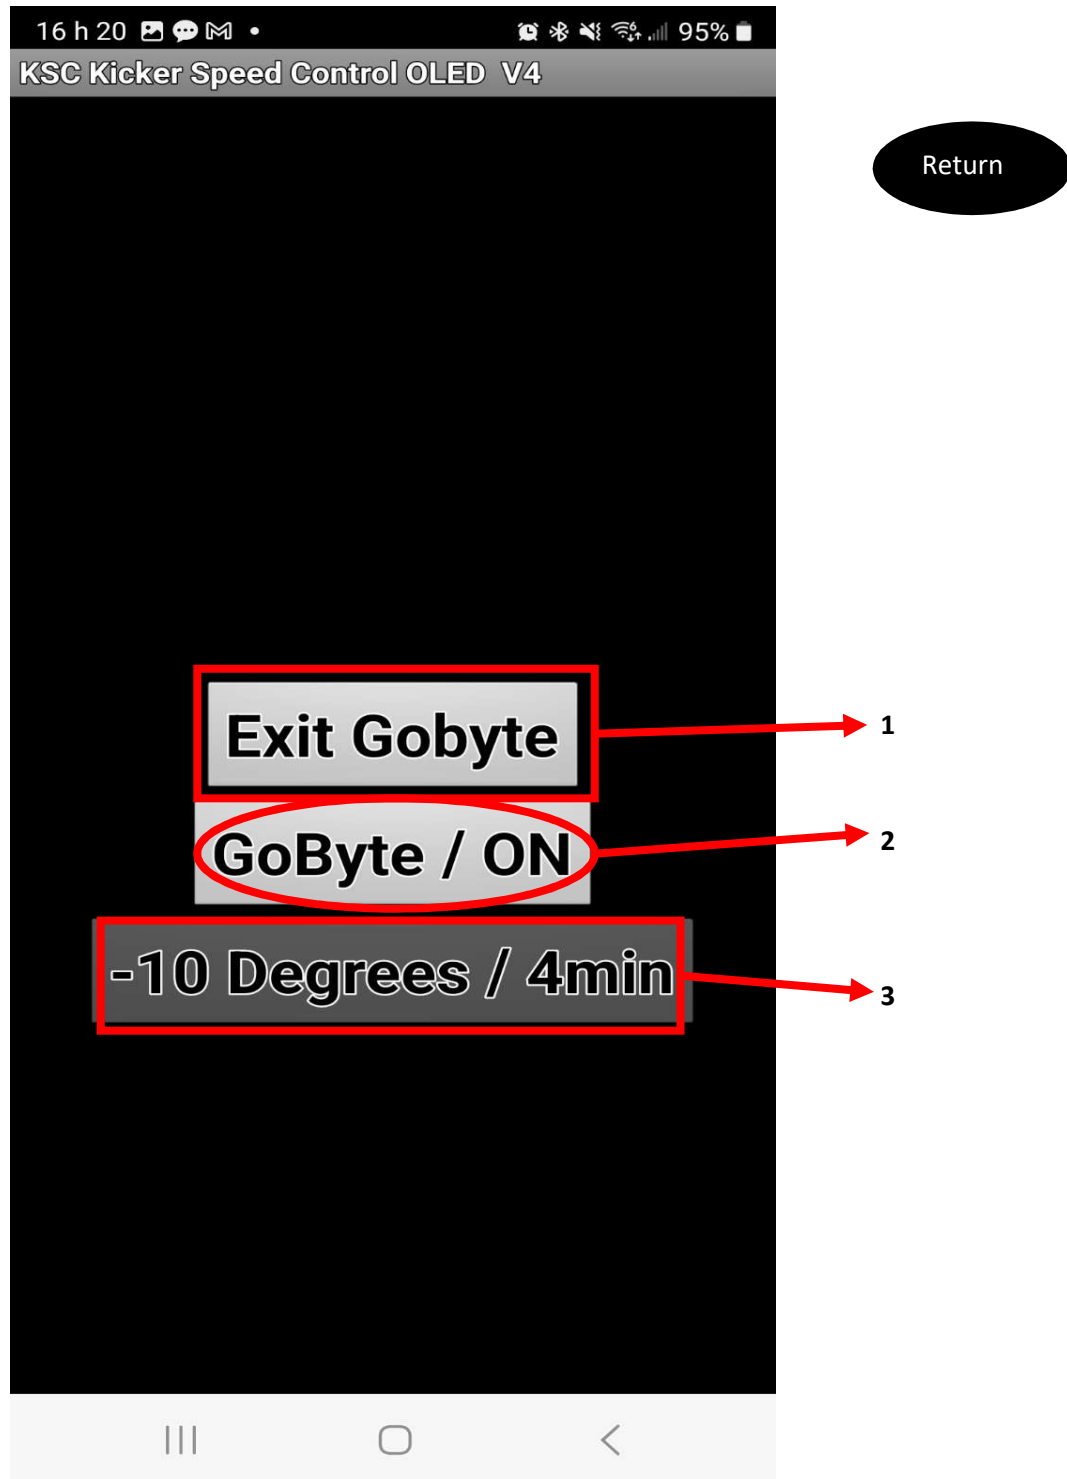

Zone 1 = Button to exit GoByte mode


Zone 2 = Indicate GoByte mode is ON

Zone 3 = Show the mode you have chosen

NOTE: when you are in GoByte Mode

you can't adjust the servo angle ( Motor Speed )

## Setup screen

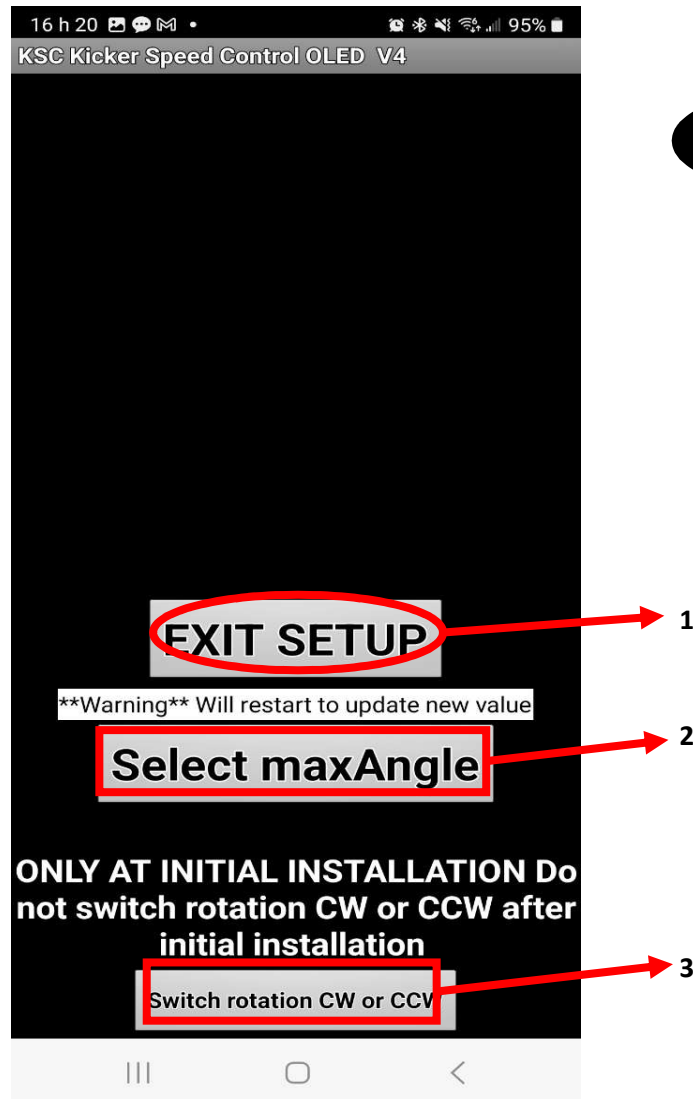

Zone 1 = Button to exit Setup screen

Zone 2 = Button to go to maxAngle setup

Zone 3 = Button to switch servo rotation CW or CCW

### Selecting maxAngle

Normally adjusting only at initial setup. Adjust to make the carburator lever near fully open when pushing MAX SPEED button

### Switch rotation CW or CCW

According to the way you installing the servo, sometime you need to change the servo rotation Clockwise or Conterclockwise

You have to switch rotation or not, **ONLY** at the initial setup

Never switch rotation when the servo is fully install

## max Angle screen



Return

After selecting the maxAngle to your need, the KSC will restart to save the new value and you have to reconnect the KSC App

Note: Switching rotation CC or CCW will make the KSC restart to save the new value and you have to reconnect the App