

Save This Manual
For Future Reference

Sears

**owners
manual**

**MODEL NO.
113.243300**
SAW ONLY

**MODEL NO.
113.243311**
SAW WITH LEGS
AND MOTOR


Serial
Number _____

Model and serial
number may be found
at the right-hand side
of the frame.

You should record both
model and serial number
in a safe place for
future use.

CAUTION:

Read **GENERAL** and
ADDITIONAL SAFETY
INSTRUCTIONS
carefully

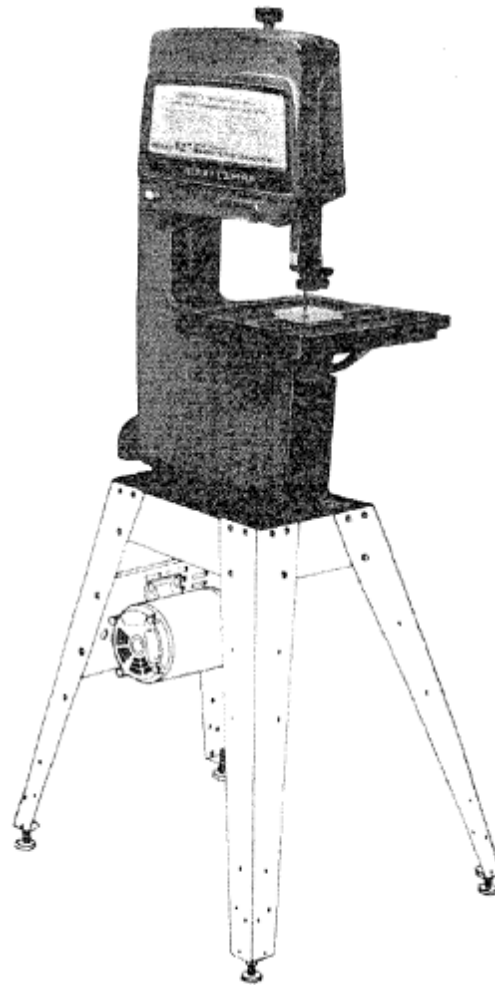

CRAFTSMAN

12-INCH BAND SAW/ SANDER

- **assembly**
- **operating**
- **repair parts**

Sold by SEARS, ROEBUCK AND CO., Chicago, IL. 60684 U.S.A.

FULL ONE YEAR WARRANTY ON CRAFTSMAN BAND SAW

If within one year from the date of purchase, this Craftsman Band Saw fails due to a defect in material or workmanship, Sears will repair it, free of charge.

WARRANTY SERVICE IS AVAILABLE BY SIMPLY CONTACTING THE NEAREST SEARS SERVICE CENTER/DEPARTMENT THROUGHOUT THE UNITED STATES.

THIS WARRANTY APPLIES ONLY WHILE THIS PRODUCT IS IN USE IN THE UNITED STATES.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO., 698/731A, Sears Tower, Chicago, IL 60684

general safety instructions for power tools

1. KNOW YOUR POWER TOOL

Read and understand the owner's manual and labels affixed to the tool. Learn its application and limitations as well as the specific potential hazards peculiar to this tool.

2. GROUND ALL TOOLS

This tool is equipped with an approved 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding type receptacle. The green conductor in the cord is the grounding wire. Never connect the green wire to a live terminal.

3. KEEP GUARDS IN PLACE

— in working order, and in proper adjustment and alignment.

4. REMOVE ADJUSTING KEYS AND WRENCHES

5. KEEP WORK AREA CLEAN

6. AVOID DANGEROUS ENVIRONMENT

7. KEEP CHILDREN AWAY

8. MAKE WORKSHOP CHILD-PROOF

9. DON'T FORCE TOOL

10. USE RIGHT TOOL

11. WEAR PROPER APPAREL

12. USE SAFETY GOGGLES (Head Protection)

13. SECURE WORK

14. DON'T OVERREACH

15. MAINTAIN TOOLS WITH CARE

16. DISCONNECT TOOLS

17. AVOID ACCIDENTAL STARTING

18. USE RECOMMENDED ACCESSORIES

19. NEVER STAND ON TOOL

20. CHECK DAMAGED PARTS

21. DIRECTION OF FEED

22. NEVER LEAVE TOOL RUNNING UNATTENDED

