 


HEADPHONES OPERATIONS

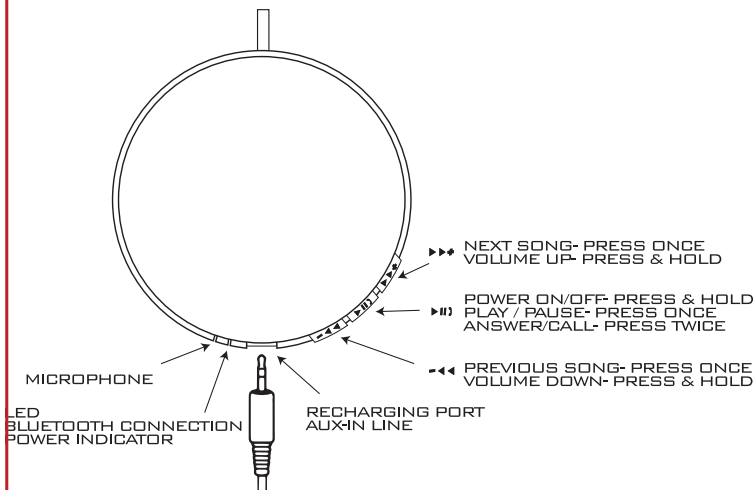

RECHARGE

 
FOR BEST RESULTS, FULLY CHARGE YOUR HEADPHONES BEFORE FIRST USE. YOUR HEADPHONES REQUIRES DC5V/1A USB POWER TO CHARGE. CONNECT THE HEADPHONES TO A COMPUTER WITH THE INCLUDED 3.5MM TO USB MICRO CABLE.

POWER ON
BLUE LED

CHARGING
RED LED

RECHARGE TIME
4 HOURS

3.5MM TO USB MICRO CABLE (INCLUDED)



LAPTOP/PC

CONNECT WITH BLUETOOTH®

WIRELESSLY CONNECT TO HEADPHONES WITH ANY BLUETOOTH ENABLED DEVICE WITHIN A 30 FOOT/10 METER LINE OF SIGHT RADIUS. (WALLS OR OBSTRUCTIONS MAY REDUCE SIGNAL RANGE)

READY YOUR HEADPHONES

TURN ON YOUR HEADPHONES. AFTER A FEW SECONDS IT WILL BEEP AND THE LED LIGHT WILL PULSE BLUE INDICATING AN OPEN CONNECTION.

READY YOUR BLUETOOTH DEVICE

TURN ON BLUETOOTH UNDER THE SETTINGS MENU OF YOUR DEVICE. SELECT THE "JUSTICE" FROM THE LIST OF DEVICE CONNECTIONS.

PAIRED CONNECTION

YOU WILL HEAR A CRESCENDO SOUND FROM YOUR HEADPHONES ONCE IT SUCCESSFULLY PAIRS WITH YOUR DEVICE.

UNPAIRED CONNECTION

DISCONNECT THE BLUETOOTH SIGNAL FROM YOUR DEVICE OR TURN IT OFF.

CONNECT WITH AUX-IN

CONNECT THE 3.5MM STEREO AUX CABLE (INCLUDED) INTO THE HEADPHONE JACK ON ANY DEVICE.

3.5MM STEREO CABLE

 
USE THE INCLUDED IMIXID 3.5 MM STEREO CABLE TO CONNECT YOUR HEADPHONES TO ANY DEVICE WITH A HEADPHONE JACK.

AUDIO PRIORITY

AUDIO CONTENT VIA AUX-IN WILL OVERRIDE ALL BLUETOOTH FUNCTIONS.

SOUND QUALITY

TO ACHIEVE THE OPTIMUM SOUND EXPERIENCE, TURN THE VOLUME ON YOUR PHONE/DEVICE DOWN BEFORE ADJUSTING THE VOLUME CONTROLS ON YOUR HEADPHONES.

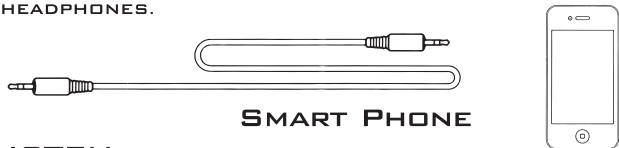

SMART PHONE

LISTEN

CONTROL YOUR HEADPHONES™

YOU CAN USE THE BLUETOOTH CONNECTION TO CONTROL YOUR DEVICE. SIMPLY SELECT THE SONG ON YOUR PHONE AND PRESS PLAY.

PLAY/ PAUSE

PRESS THE "PLAY/PAUSE/PHONE" BUTTON.

VOLUME UP/DOWN & F.FWRD/REWIND

LIGHTLY PRESS TO MOVE TRACKS FORWARD AND REVERSE.

PRESS AND HOLD FOR VOLUME, YOU WILL HEAR A DROP AT MAX LEVELS.

SOUND QUALITY

TO ACHIEVE THE OPTIMUM SOUND EXPERIENCE, YOU WILL NEED TO ADJUST THE VOLUME ON BOTH YOUR DEVICE THE HEADPHONES.

TALK

ANSWER A CALL

PRESS THE "PHONE" BUTTON TO CONNECT TO AN INCOMING CALL.
PRESS AGAIN TO DISCONNECT.

REDIAL A CALL

PRESS THE "PHONE" BUTTON TWICE TO REDIAL THE LAST CALL.

CALL PRIORITY

ALL CALLS WILL TAKE PRIORITY OVER AUDIO PLAYBACK ON THE HEADPHONES.

SPEAKERPHONE

THE HEADPHONES HAVE A BUILT-IN MICROPHONE ON THE FRONT STAR THAT WORKS WHEN USING A BLUETOOTH CONNECTION.

TROUBLESHOOT

DISTORTED SOUND

-USING LOW QUALITY/LOW BIT RATE SAMPLE AUDIO FILES AFFECTS PLAYBACK.
-LOWER THE VOLUME ON YOUR PHONE/DEVICE.
-LOW BATTERY, RECHARGE YOUR HEADPHONES.

LOW SPEAKER VOLUME

-USING LOW QUALITY/LOW BIT RATE SAMPLE AUDIO FILES AFFECTS PLAYBACK.
-TURN UP THE VOLUME ON HEADPHONES AND YOUR DEVICE/PHONE.
-LOW BATTERY, RECHARGE YOUR HEADPHONES.
-CONNECT VIA 3.5MM AUX-IN.

UNABLE TO PAIR WITH BLUETOOTH DEVICE

-MAKE SURE YOUR DEVICE/PHONE SUPPORTS BLUETOOTH.
-LOW BATTERY, RECHARGE YOUR HEADPHONES.
-RESTART BOTH YOUR PHONE AND YOUR HEADPHONES.

SIGNAL LOSS OR AUDIO DROP OUT

-MOVE YOUR DEVICE CLOSER TO THE HEADPHONES.
-LOW BATTERY, RECHARGE YOUR HEADPHONES.
-RESTART BOTH YOUR PHONE AND YOUR HEADPHONES.

FOR ADDITIONAL QUESTIONS CONTACT US

[HTTP://WWW.SCRATCH-TRACKS.COM/CUSTOMER-SERVICE](http://www.scratch-tracks.com/customer-service)

SAFETY WARNING INFORMATION

TO ENSURE PERSONAL SAFETY AND AVOID PROPERTY DAMAGE, PLEASE READ THESE SAFETY WARNINGS AND CAUTIONS CAREFULLY.



LI-POLY BATTERY / CHARGING HAZARDS

-HEADPHONES USES A RECHARGEABLE LITHIUM POLYMER BATTERY.
-ONLY CHARGE THE BATTERY IN ACCORDANCE WITH THESE INSTRUCTIONS, FAILING TO FOLLOW THE INSTRUCTIONS MAY RESULT IN SHOCK OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
-DO NOT DISASSEMBLE, MODIFY, OR FORCE OPEN THE HEADPHONES, THE BUILT-IN BATTERY OR CHARGER AS THIS MAY RESULT IN ELECTRIC SHOCK.
-DO NOT STORE OR CHARGE THE HEADPHONES IN HIGH OR LOW TEMPERATURES OR IN DAMP/WET ENVIRONMENTS. THIS MAY RESULT IN SHOCK OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
-DO NOT CLEAN THE HEADPHONES WHILE IT IS CHARGING. ALWAYS UNPLUG THE CHARGER BEFORE CLEANING.
-PROPERLY DISPOSE OF THE HEADPHONES. DO NOT THROW IN FIRE AS THIS MAY CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.

TRANSPORTATION / MOVING PROJECTILE / FALLING HAZARDS

-DO NOT OPERATE THE HEADPHONES IN A MOVING VEHICLE SUCH AS CAR, TRUCK OR BIKE. SUDDEN STOPS MAY TURN THE HEADPHONES INTO A MOVING PROJECTILE THAT CAN CAUSE SEVERE INJURY OR EVEN DEATH.
-MANY STATES HAVE DRIVER DISTRACTION LAWS. PLEASE FOLLOW ALL LOCAL LAWS!

ELECTRICAL SHOCK AND FIRE HAZARDS

-HEADPHONES USES A RECHARGEABLE LITHIUM POLYMER BATTERY.
-DO NOT EXPOSE THE HEADPHONES TO LIQUIDS, SNOW, RAIN, ICE, MOISTURE OR HIGH HUMIDITY. DO NOT STORE OR USE IN OR NEAR SWIMMING POOLS, SAUNAS, STEAM ROOMS, SINKS, BATHTUBS, SHOWERS. EXPOSURE TO MOISTURE OR DAMP/WET ENVIRONMENTS, MAY RESULT IN SHOCK, FIRE OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
-DO NOT DISASSEMBLE, FORCE OPEN, MODIFY, DROP, DAMAGE, HACK, JACK, CRACK, CRUSH, BEND, DEFORM, PAINT, BURN, OR INSERT FOREIGN OBJECTS IN TO THE HEADPHONES AS THIS MAY RESULT IN SHOCK, FIRE OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
-DO NOT STORE OR CHARGE THE HEADPHONES IN HIGH OR LOW TEMPERATURES OR IN DAMP/WET ENVIRONMENTS. THIS MAY RESULT IN SHOCK, FIRE OR CAUSE THE BATTERY TO EXPLODE RESULTING IN SEVERE INJURY OR DEATH.
-DO NOT CLEAN THE HEADPHONES WHILE IT IS CHARGING. ALWAYS UNPLUG THE CHARGER FIRST.
-CLEAN ONLY WITH A DAMP CLOTH
-DO NOT STORE OR EXPOSE THE HEADPHONES IN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME.
-DO NOT STORE OR EXPOSE THE HEADPHONES NEAR OPEN FLAMES SUCH AS BONFIRES, FIREPLACES OR CANDLES.
-DO NOT BLOCK ANY VENTILATION OPENINGS.

FCC STATEMENT

- HANDLE YOUR HEADPHONES WITH CARE. DO NOT DROP OR THROW. THIS MAY RESULT IN DAMAGE TO INTERNAL COMPONENTS AFFECTING SOUND QUALITY. PERFORMANCE BE RESULTING IN SHOCK OR FIRE HAZARD.
-DO NOT INSERT FOREIGN OBJECTS INTO THE HEADPHONES SPEAKER, MESH OR PORTS UNLESS OTHERWISE SPECIFIED IN THIS USER MANUAL. THIS MAY DAMAGE INTERNAL COMPONENTS AFFECTING SOUND QUALITY, PERFORMANCE OR RESULTING IN SHOCK OR FIRE HAZARD.
-DO NOT ATTEMPT TO REPAIR, MODIFY, DISASSEMBLE OR REPLACE ANY PART OF THE HEADPHONES SPEAKER YOURSELF. THE HEADPHONES DOES NOT INCLUDE ANY USER-SERVICEABLE PARTS OR COMPONENTS.
-THE BATTERY IS BUILT-IN AND IS NOT REPLACEABLE. IF YOU HAVE ANY ISSUES, PLEASE CONSULT THE TROUBLE SHOOTING GUIDE.
-SWITCH OFF THE HEADPHONES IN AREAS DESIGNATED RF RADIO OR ELECTRICAL DEVICE FREE. TURN OFF AND PROPERLY STOW PRIOR TO BOARDING ANY AIRCRAFT.
-PROPERLY DISPOSE OF THE HEADPHONES'S BATTERY IN ACCORDANCE WITH ALL LOCAL LAWS AND REGULATIONS. DO NOT DISPOSE IN HOUSEHOLD WASTE.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

FCC NOTICE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC CAUTION

- ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.
- THIS DEVICE AND ITS ANTENNA(S) MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER.

FCC ID: 2AA2JBK3254

©COPYRIGHT 2010 ALL RIGHTS RESERVED / ©2016 TOUTS DROITS RESERVES.
MANUFACTURED BY SCRATCH TRACKS NEW YORK, USA

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY IMIXID IS UNDER LICENSE. OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS.

IPHONE IS A TRADEMARK OF APPLE COMPUTER. INCORPORATED IN THE U.S. AND OTHER COUNTRIES.

IPHONE QNT DE MARQUE D'APPLE COMPUTER, INC DÉPOSÉE AUX USA ET AILLEURS.

SAMSUNG IS A TRADEMARK OF SAMSUNG IN THE UNITED STATES OR OTHER COUNTRIES.

MADE WITH CARE IN P.R.C. / FABRIQUE EN P.R.C.



REF: DID D029673