

VERDIN FULL FUNCTION REMOTE

MODEL # FFR-01

The buttons on the remote control offer easy execution of various library songs or stored shortcut function.

- To execute short-cut (1) thru (7) simply depress the desired shortcut number on the remote control number pad and then depress the Enter button (ENT). Button (8) executes the stop function.
- The Clear button (CLR) can be used to clear unwanted button entries.
- To play a library song simply enter its corresponding song number on the remote button panel then press the enter key (ENT).



NOTE:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult The Verdin Company for help.

Operation with non-approved equipment is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without approval of manufacture could void the user's authority to operate this equipment.