

Quick Start Instruction manual

Product name: Key Finder and Multimedia Remote Control

Model number: KMR930

Manual ver_1.2



Features:

- Key Finder
- Presenter
- Music player
- Camera remote shutter
- Video Camera recorder


Specification:

- Bluetooth 4.0 compatible
- Maximum Operate range: 40m (Outdoor), 20m (Indoor)
- Dimension: 54.5 mm x 32 mm x 12 mm
- Battery: CR2032


Installing / Replacing the Batteries

3V lithium battery (CR2032) is included in the package.

Use only 3V lithium batteries. Do not use or replace the battery with different types of batteries. Doing so will damage the electronics of the device.

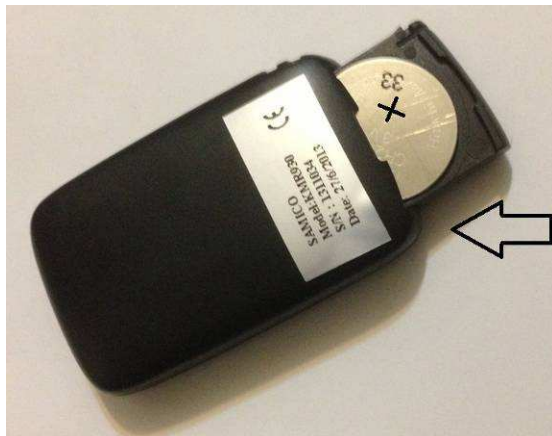

Keys definition:

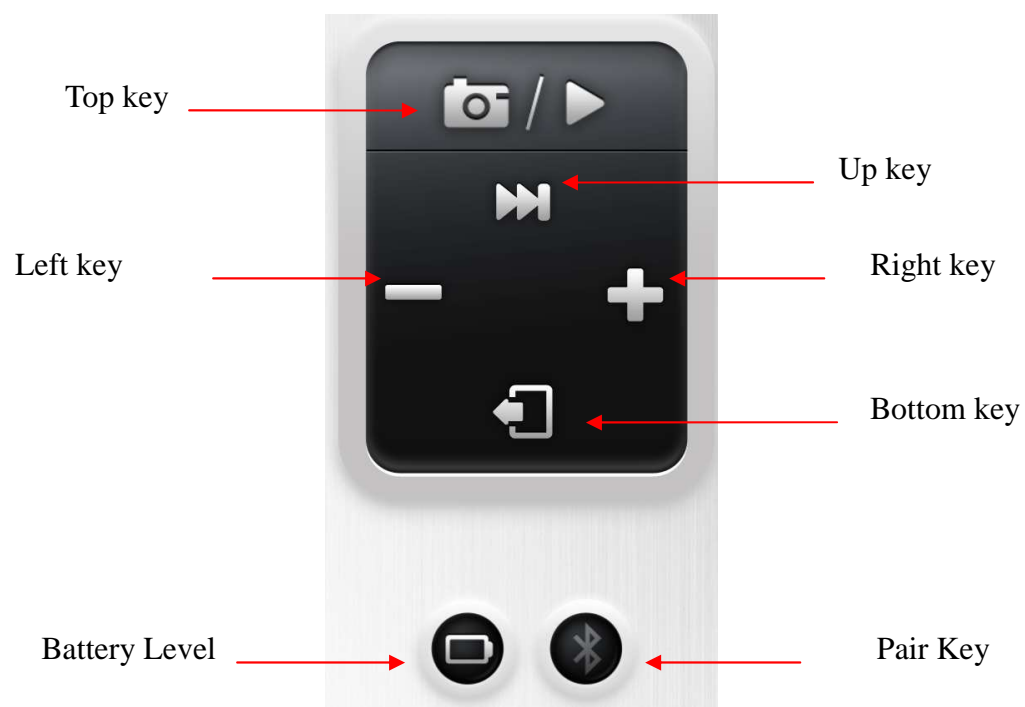


Setup Procedures

Installation

Prior to first use, Download and install "Key Finder" application to your iOS device.


(Bluetooth 4.0 capabilities, e.g. iPhone 4S, iPhone 5, NewiPad and iPadMini)

Connect to iOS Device via Bluetooth

- Turn Bluetooth "On" under the "Settings" menu on the iOS device.
- Press and hold the Top Key  until the RED/BLEUE LED is ON (approximately 3 seconds).
- First time to open "Key Finder" application on your iOS device, The screen will show you " Please press this button to select your keyfinder for pairing".



After press the button, will show the Devices List and show your device listed, press "Pair" button to start the Pairing.

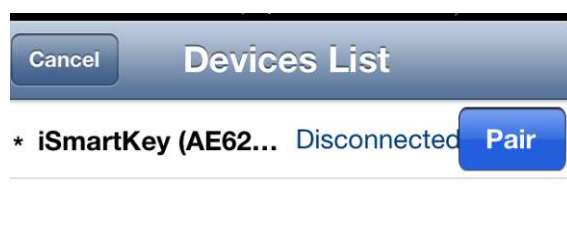

Press the "Pair" to start the pairing.




After connected, the Bluetooth icon will light ON.

The Bluetooth icon will light ON & the device have "Beep Beep" sound upon successful connection.

Reminder: The Key Finder device will turn off when no pairing after 30s.



Operation

Menu Screen: Select the activate function

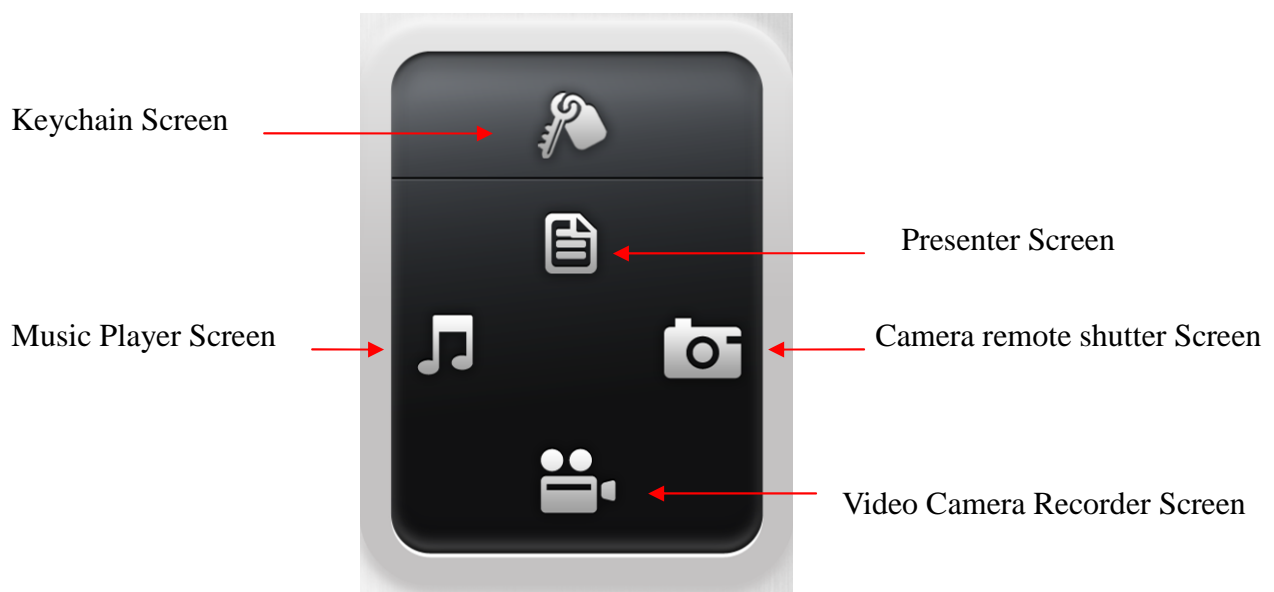


Camera Remote Sutter Screen:

The Pop-Up instruction will show the all keys definitions and press any key to start the Camera.

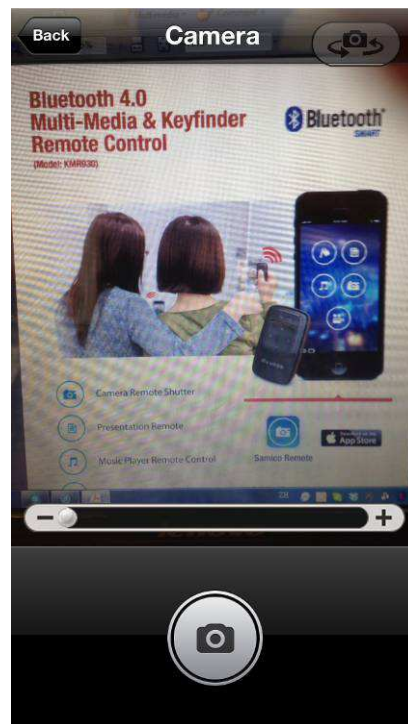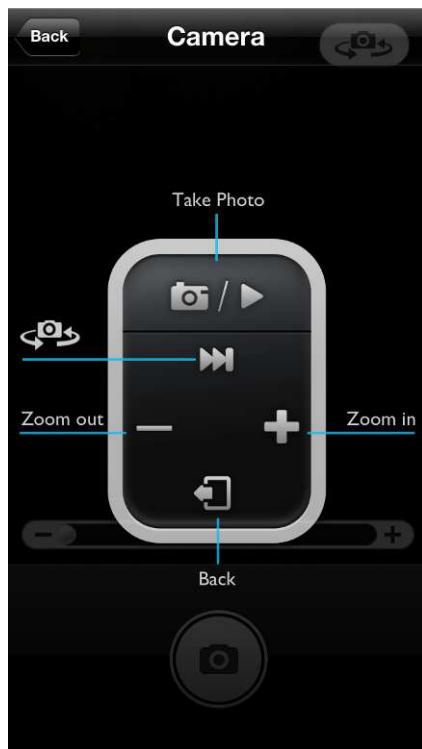



Video Camera Recording Screen:

The Pop-Up instruction will show the all keys definitions and press any key to start the Video Camera.

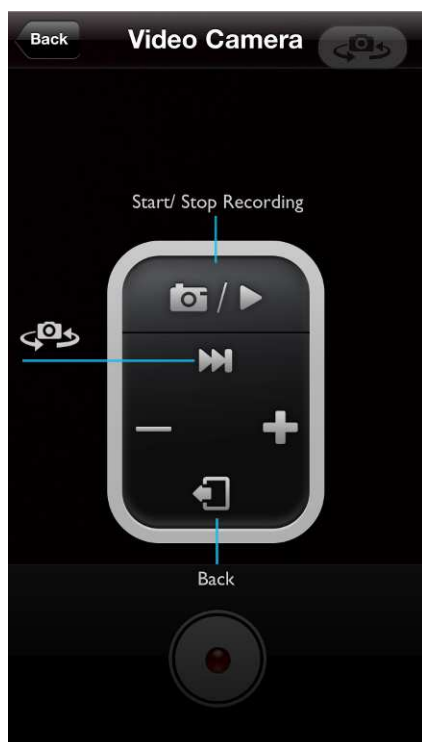

Music Player Screen:

The Pop-Up instruction will show the all keys definitions and press any key to start the Music Player.

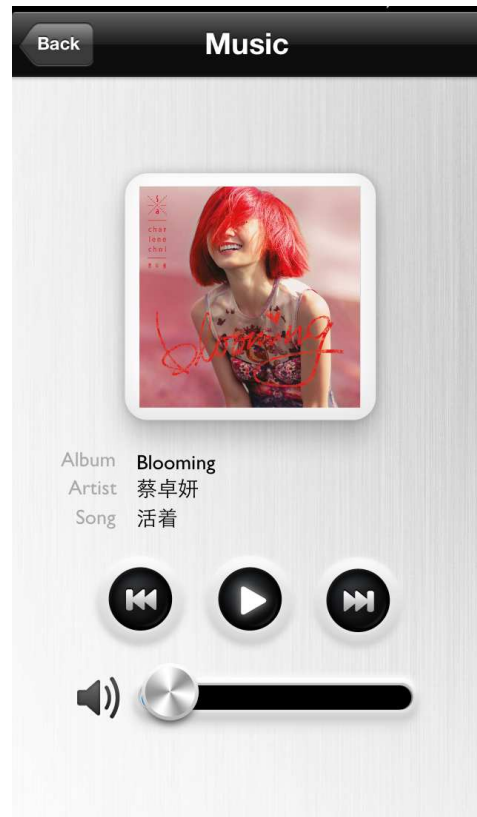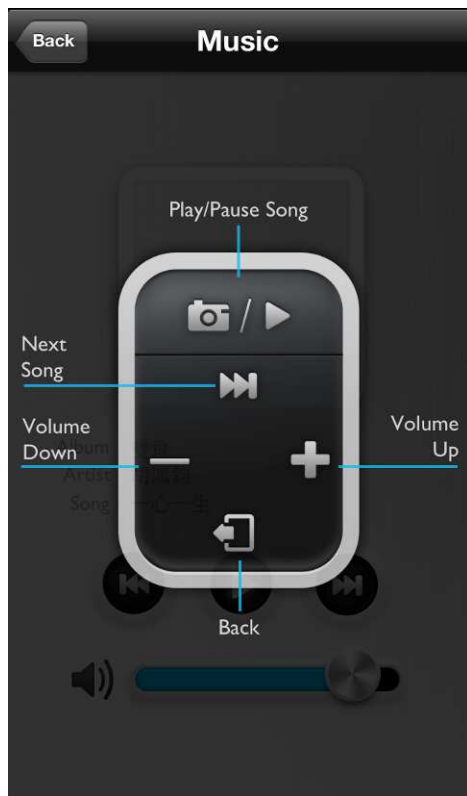

Presenter Screen:

The Pop-Up instruction will show the all keys definitions and press any key to start the Presenter. (Supported Pdf file only)



Choose open PDF file:

1. Select and Open on the application listed




- ## 2. Select and Open with Key Finder:



Keychain Screen:

Press device top key to start the Keychain or back to main screen.

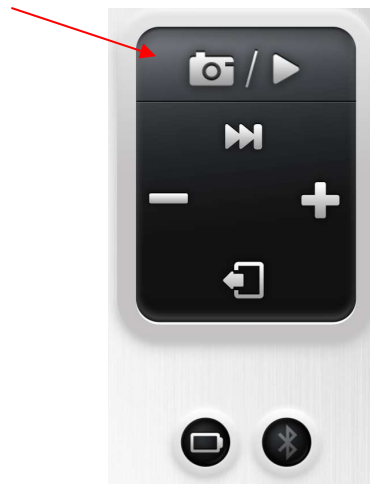

On Keychain Screen:

Turn On/Off the keychain feature

On/Off Out Of Range Alert

Near/Far Range Alert

On/Off Link Loss Alert

Select iPhone/iPad Alert Level


Find Keyfinder

The device have "Beep Beep" sound upon press the **Find Keyfinder** Tab

Silence Keyfinder

Press the **Silence Keyfinder** Tab to stop the device "Beep Beep" sound

On/Off Show Pop-Up instructions

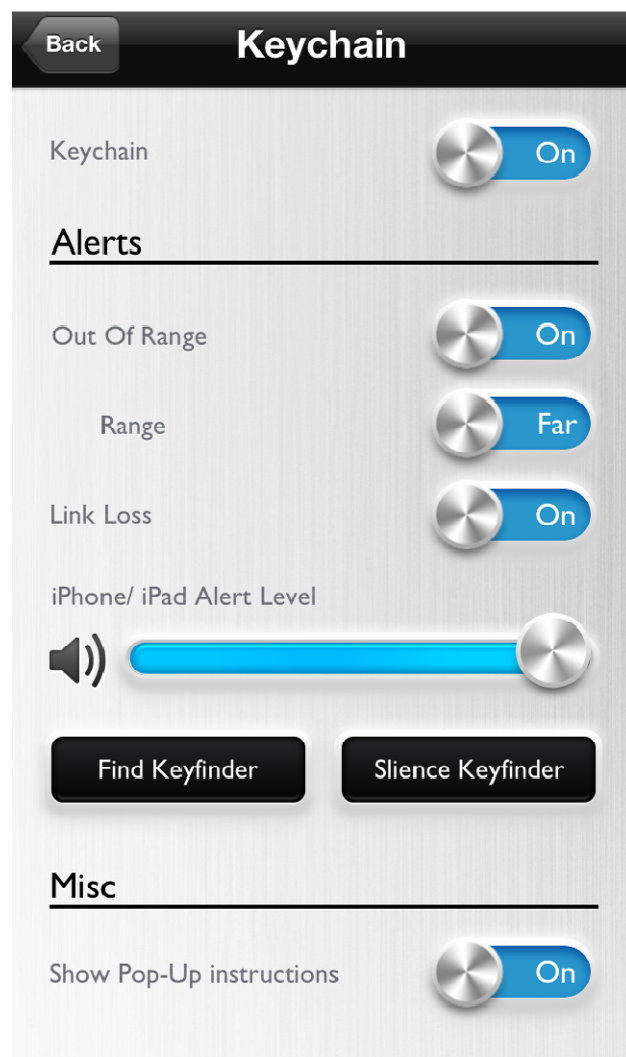

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .End users must follow the specific operating instructions for satisfying RF exposure compliance.This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.