

EAZYLIFT REMOTE CONTROL MANUAL

FUNCTION

The function button is used to start programming see the receiver instructions or ask your local dealer


BATTERY CHANGES

In order to change the battery undo the back plate screw & separate the housing . Inside you will find the battery insert.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

TECHNICAL SPECIFICATIONS

Frequency	433.98MHz
Max Current	20mA
Encryption type	Hopping code
Buttons	2
Battery type	12V alkaline battery /27A
Temperature range	-20 to +55°C

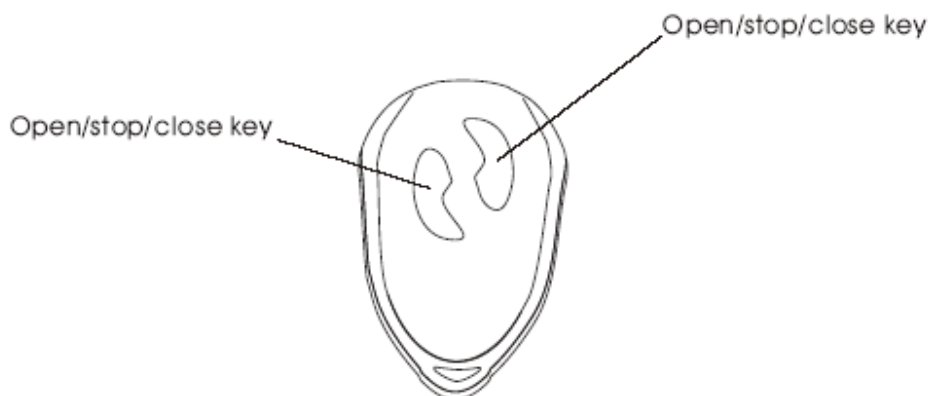

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.