 


PORTABLE BLUETOOTH SPEAKER

MODEL: **BTS-1B**

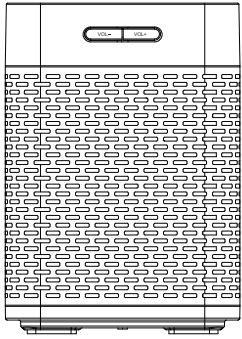

USER MANUAL

 
Please read the manual carefully before use and keep it well for further use




Package Contents

- Rechargeable Speaker
- 3.5mm audio cable
- Micro USB Charging cable
- User guide

Product Description

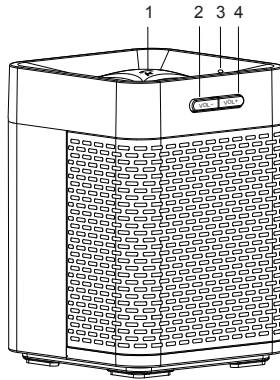

 - 1: Handfree/Play/Pause Button
- 2: Volume-
- 3: MicroPhone
- 4: Volume+

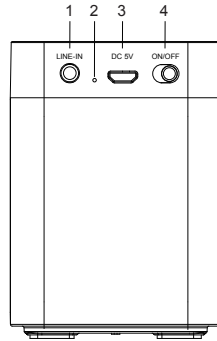

- 1: Aux In-put Jack
- 2: Function Indicates LED
- 3: Micro USB Charge Jack
- 4: Power ON/OFF

Controls And Indicator

Bluetooth mode :

Search Status :Blue LED flash slowly

Successful pairing: Blue lights flash 2 times every 5 seconds

 
Line in mode :

Blue LED light stay on

Charging mode :

Red LED indicates the unit is charging and not full

Red LED will turn off when fully charged

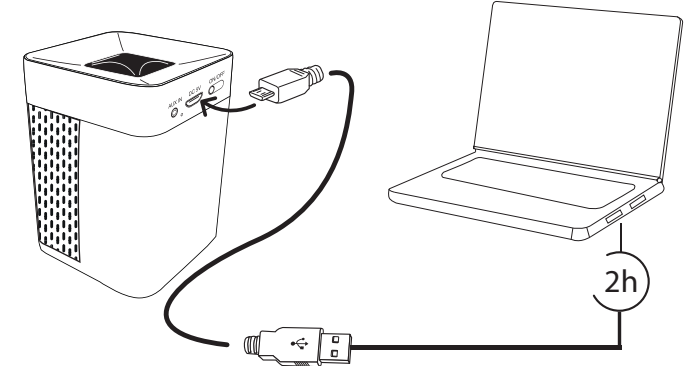

Charging The Battery

1. Use the included USB Charging cable , Plug one end into the DC 5V jack located at the bottom of the unit , Plug the other end into a USB powered port or any other USB AC adapter (not included).
2. The battery is fully charged in 1.5 hours .(Charging time will be longer if play music while charging .)
3. The red LED light indicates that the unit is charging , The red LED turns off when the battery is fully charged ,You can disconnect the charging cable when charging is complete.

AUX Play Mode


1. Plug one end of the included 3.5mm audio cable into the headphone or line-out jack of your audio device.
2. Plug the other end of the cable into the LINE IN jack located on the back of the unit.
3. Slide the power switch of the speaker to ON position.
4. Turn on your audio device and play music .Make sure your audio device is charged and turned to medium volume.
4. Adjust the volume of your audio device to the desired level.
5. Press the vol- or vol+ Button on the unit to adjust the system volume.
6. Slide the power switch to the off position when you are finished listening. You may also turn off your audio device.

NOTE : The speaker is powered by a Lithium-ion rechargeable battery, if you start to notice sound distortion or the LED is flashing, the battery is low and needs to be recharged.

Bluetooth Play Mode

If you are using a Bluetooth audio device, make sure the working distance is within 20 - 30 ft, different environment may have effect on the working distance.



1. Slide the power switch of the speaker to ON position, The unit will give a beeping sound to indicate it is in Bluetooth mode.
2. Turn on the Bluetooth on your audio device
3. Searching Devices Choose "ProMini X11".No password is required.If your device does require a password,type"0000"
4. Adjust the volume on your audio device to the desired level.

5. Press the vol- or vol+ Button on the unit to adjust the system volume.
6. Press  button to pause/play music

NOTE : When the sound becomes distorted or LED light flashing , the battery is low and needs to be recharged .

Making Calls with a Bluetooth Mobile Phone

Before you make a call with the unit, you need to pair and link your Bluetooth-enabled phone with the unit. Please refer to Pairing procedure

1. To answer a call, press the  Button. Now you can use the unit as a speaker phone.
2. Speak into the MIC and press the vol- or vol+ Button on the unit to adjust the call volume.
3. To end the call, press the  Button.

NOTE : When the sound becomes distorted or LED light flashing , the battery is low and needs to be recharged, Please volume up your mobile volume and speaker volume if handfree voice is low.



NOTE:The product is designed for use with Bluetooth wireless devices compatible with the **HFP,HSP,A2DP** and **AVRCP** streaming audio profiles. Refer to your Bluetooth device's user manual or technical support to determine if your Bluetooth device supports these profiles.



To prevent the possibility of the battery from leaking, heating, fire .please observe the following precautions:

Warnings

- 1: Please use attached USB charging cable in the package to charge unit
- 2: Please disconnect charge cable after full charged the unit , Do not charge the unit for long time after unit full charged
- 3: Do not immerse the product in water and seawater
- 4: Do not use and leave the product near a heat source as fire or heater
- 5: Do not place it into water , any other liquid ,Fire or any heater machine .
- 6: Do not strike or throw the product.

Cautions

- 1: Do not use or leave the product at very high temperature (for example, at strong direct sunlight or a vehicle in extremely hot conditions).Otherwise, it can overheat or fire or its performance will be degenerate and its service life will be decreased.
- 2: Do not use it in a location where static electricity is great, otherwise, the safety devices may be damaged, which will cause hidden trouble of safety.
- 3: The batteries should be stored at room temperature, charged to about 30% to 50% of capacity. In case of over-discharge, batteries should be charged for one time every month while storing and batteries should be discharge and charge after being stored more than a year in order to activate it and restore energy.
- 4: Please following Waste battery recycling method to dispose the unit



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste.Please recycle where facilities exist.Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Power is so low that no RF exposure calculation is needed.