


LOOP WIRELESS SPEAKER

User Manual

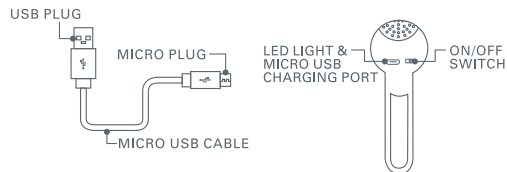

Instructions:

For best results, completely charge speaker before using for the first time.

1. Connect Micro plug into the speaker's micro port and insert the USB Plug to an USB port in the computer or any similar energy source.
2. The LED light will turn red to indicate the battery is charging. Once the battery is fully charged, the light will turn off. It'll take around 1 hour to fully charge.


To sync:

1. Turn on speaker until you hear a beep.
2. A blue LED light will blink fast, meaning that the speaker is on "syncing mode".
3. Turn on bluetooth setting on your mobile device.
4. Start searching for devices.
5. Select "Kikkerland" in the menu.
6. If necessary, enter passcode "0000" to confirm syncing.
7. Once is successfully sync, you will hear a beep and the blue LED light will blink slowly.
8. Play your favorite song and enjoy!

Care instructions:

- Clean the device with a soft and humid cloth.
- Never use hard chemicals on the device.
- Keep this device away from direct water and excessive heat.

Guide d'utilisation

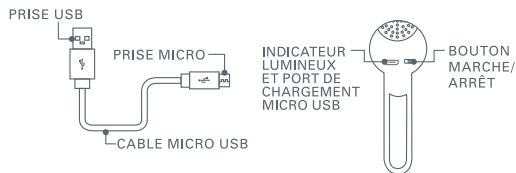

Instructions :

Pour de meilleurs résultats, chargez complètement le haut-parleur avant de l'utiliser pour la première fois.

1. Connectez la prise micro dans le port micro USB du haut-parleur et insérez la prise USB dans un port USB d'ordinateur ou autre source d'énergie similaire.
2. L'indicateur lumineux s'allumera rouge. Cela signifie que la batterie se recharge. Une fois la batterie pleine, l'indicateur lumineux s'éteindra. Il faut compter environ 1 heure pour une charge complète.

Pour synchroniser :

1. Allumer le haut-parleur, le bruit "beep" indiquera qu'il est allumé.
2. L'indicateur lumineux bleu clignotera rapidement, le haut-parleur est maintenant en mode "synchronisation"
3. Activez le Bluetooth sur votre appareil mobile.
4. Commencez à chercher des appareils.
5. Sélectionnez "Kikkerland" dans le menu.
6. Si nécessaire, entrez le mot de passe "0000" pour confirmer la synchronisation.
7. Le haut-parleur émettra un bruit et l'indicateur lumineux bleu clignotera lentement.
8. Écoutez vos morceaux préférés!

Entretien :

- Nettoyez le haut-parleur avec un tissu doux et humide.
- Ne jamais utiliser de produits chimiques sur l'appareil.
- Conservez l'appareil éloigné d'un point d'eau et d'une source de chaleur excessive.

The statements should be displayed in the user manual:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.