

# User Guide

## Getting Started

Thank you for choosing Lineable.  
Read this guide to get started.


## How to set up your Lineable

### Install Lineable app

1. Download App from App Store or Google Play.
2. Sign up for a new account or sign in if you already have an account.
3. Turn on **Bluetooth** and **GPS** on your smartphone.

### Add a new device:

1. Please make sure that the device is within a distance of 1ft (30cm).
2. Tap + in the top-right corner of the **Dashboard** screen.
3. Follow the instruction and begin scanning your device.
4. Once the scan is done, name it, and add a photo and tap **Register**.
5. Go to **Dashboard** and make sure that the device has been added.

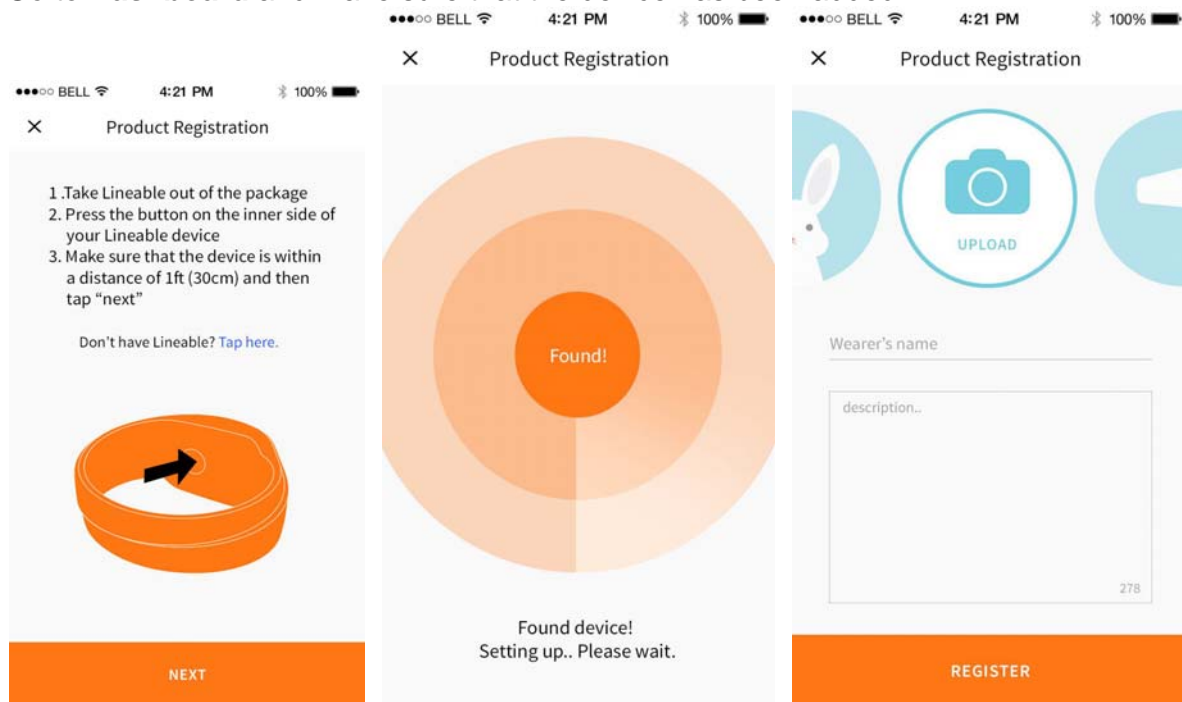

### Add co-protectors:

1. Go to your child's page.

## Specification

Frequency Range : ISM Band 2.4GHz

Bluetooth version : 4.0

Active distance : 10~30m / 30ft ~90ft

Battery life : CR2032 x 1 cell

MADE IN KOREA

## FCC Statement

### FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Part 15.21

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

### RF Exposure Statement (2.1091)

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 5 mm between the radiator and your body.

RF du FCC d'exposition aux radiations: Cet équipement est conforme à l'exposition de la FCC rayonnements RF limites établies pour un environnement non contrôlé.

L'antenne pour ce transmetteur ne doit pas être même endroit avec d'autres émetteur sauf conformément à la FCC procédures de produits Multi-émetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 5 mm entre le radiateur et votre corps.

## IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.