

INSTRUCTION MANUAL - 5003.325-A INTERFACE BOARD

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES AND INDUSTRY CANADA LICENSE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.


NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CET APPAREIL EST CONFORME AU 15 REGLES DE LA FCC ET D'INDUSTRIE CANADA EXEMPTS DE LICENCE STANDARD RSS (S). FONCTIONNEMENT EST SOUMIS AUX DEUX CONDITIONS SUIVANTES: (1) CET APPAREIL PEUT CAUSER DES INTERFERENCES NUISIBLES, ET (2) CET APPAREIL DOIT ACCEPTER TOUTE INTERFERENCE REÇUE, INCLUANT TOUTE INTERFERENCE POUVANT CAUSER UN FONCTIONNEMENT INDESIRABLE.

REMARQUE: LE BENEFICIAIRE EST PAS RESPONSABLES DES EVENTUELLES MODIFICATIONS OU MODIFICATIONS NON EXPRESSEMENT APPROUVES PAR LA PARTIE RESPONSABLE DE LA CONFORMITÉ. CES MODIFICATIONS PEUVENT ANNULER LE DROIT DE L'UTILISATEUR À UTILISER L'APPAREIL.

1. PLUG INTERFACE BOARD INTO SIT MODULE.
2. CONNECT THE WIRE HARNESS AND COMMUNICATION CABLES SHOWN IN FIGURE A.

FIG A

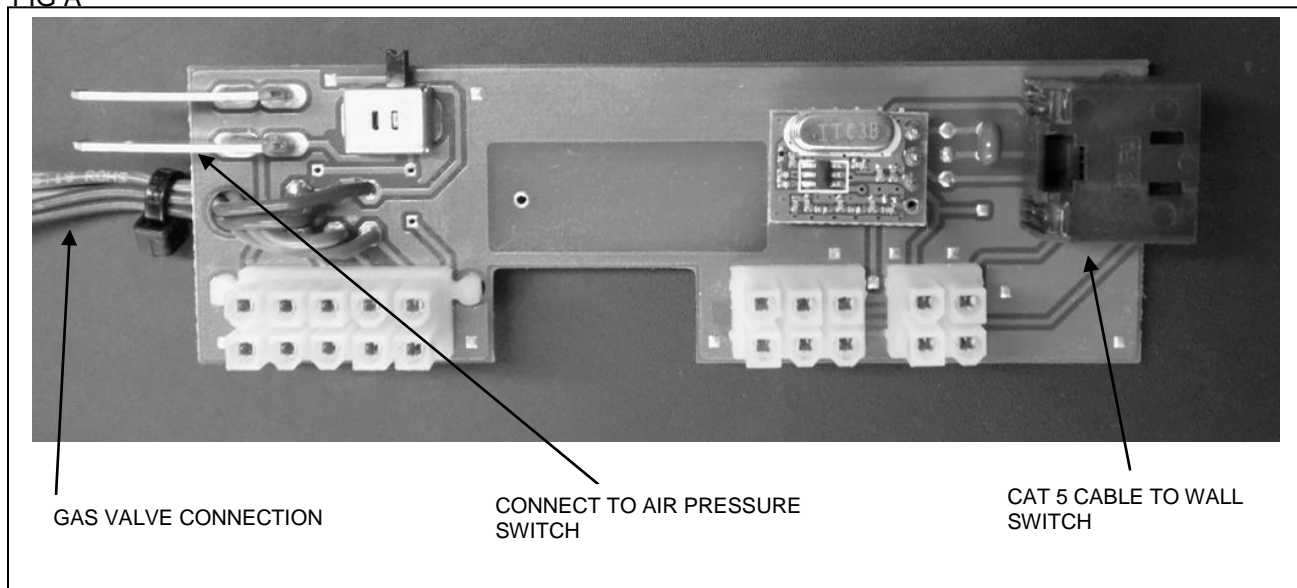

3. OPERATE AS PER THE FIREPLACE OPERATING INSTRUCTIONS.