

CONSUMER INFORMATION

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separately collected for their proper treatment and recovery.

The crossed out bin symbol, placed on the product, reminds you of the need to dispose of the product correctly at the end of its life. In this way you will assist in the recovery, recycling and re-use of many of the materials used in this product. Where possible recycle your packaging.

With your help it is possible to reduce the amount of electrical and electronic waste ending up in landfill and to improve quality of life by preventing the release of potentially hazardous substances into the environment.

Invisua Limited is delighted to support the WEEE directive (Waste Electrical and Electronic Equipment) and is registered with the Environment Agency.

Correct Disposal of this Equipment
(Waste Electrical & Electronics Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed of with other household waste at the end of its working life. To prevent any possible harm to the environment or human health from uncontrolled waste disposal, please separate this and recycle it responsibly. Householders should contact either the retailer they purchased from or their local waste authority for details how to dispose of this item safely.

This item has been tested by our Quality Control Inspectors and has been thoroughly checked and registered as working efficiently before leaving the factory.

Please follow the following Safety, Installation & Setup Instructions thoroughly.

WARRANTY RECORDS
Product::
Model:
Customer Name:
Contact Telephone:
Date of Purchase:
Series/Model No.
Invoice No.
Purchased from:

Contents

- 2 Tv Front View & Input Connections List of accessories.
- 3 Unit Control Buttons
- 4 Remote Control
- 5 Remote Control Buttons
- 6 Remote Control Buttons
- 7 Input Source Selection • FM MODE • BT MODE
- 8 TV mode--Picture
- 9 TV mode--Audio
- 10 TV mode--Time
- 11 TV mode--Setup
- 12 TV mode--Lock
- 13 TV mode-Chanel
- 14 TV mode-Customizing TV setting
- 15 DVD mode--General setup
- 16 DVD mode--Audio setup/Preference setup
- 17 DVD mode--Basic operation
- 18 DVD mode--USB play
- 19 ALARM mode--Time setting/Alarm setting
- 20 ALARM mode--Alarm clock&Radio operation
- 21 Trouble shooting TV mode●Trouble shooting TV mode

ACCESSORIES

 
Before you start setting up please make sure you have all the accessories in the box

1. User Manual
2. Power Supply
3. Remote Control

TV FRONT VIEW & INPUT CONNECTIONS


FRONT VIEW

1. DVD Control Keys
2. Infra-Red Eye
3. Swivel Axis
4. TIME & FM LED Display
5. TIME & FM Control Keys
6. TV Control Keys
7. Speakers
8. LED Panel

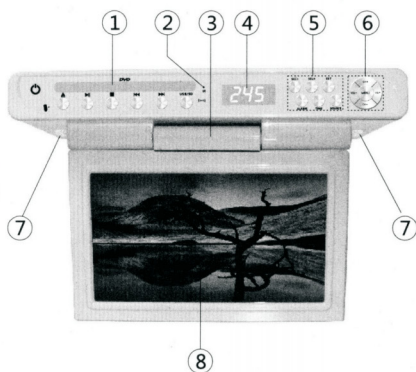


INPUT CONNECTIONS

 1. FM Antennae
2. DC 12V
3. USB UPDATE
4. HDMI
5. Composite Video-Yellow
6. Composite Audio Right-Red
7. Composite Audio Left-White
8. Antennae.
9. USB Slot

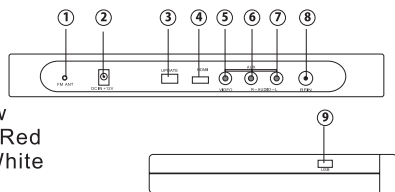

CONTROL BUTTONS

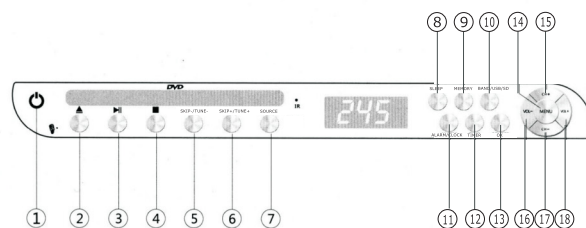 

1. **POWER** Power ON/Power OFF.
2. **▲ Eject/Absorb** When in DVD Mode press this button to Eject/Absorb the disc.
3. **▶|| Play /Pause** Press once to play the disc from stop. Pressing during Playback will pause the disc. Press again to resume Playback.
4. **■ Stop** Press this button to play again.
5. **SKIP-/TUNE-** Press to go back to chosen chapter.
6. **SKIP+/TUNE+** Press to go forward to chosen chapter.
7. **SOURCE** Switches through all modes-DVD/FM/BT/TV/AUX/HDMI
8. **SLEEP** Press to select the Shutdown time
9. **MEMORY** Press to store the received station.
10. **BAND/USB** Press this button to switch USB/BAND/DVD
11. **ALARM/CLOCK** Timer Display, Set/Cancel the Alarm, press Alarm to switch between Timer/Alarm1/Alarm2, hold the alarm for a while will enter the alarm1 / Alarm2 Setting Mode.
12. **TIMER** hold the MODE for while and it enter the TIMER Setting-FM states
13. **OK** Press to confirm the function.
14. **MENU** Selects Main Menu
15. **CH+** Moves up one Channel
16. **VOL-** Decreases Volume
17. **CH-** Moves down one Channel
18. **Vol+** Increases Volume.

4 ● REMOTE CONTROL



5 ● REMOTE CONTROL BUTTONS

POWER SOURCE

For switching On or switching Off
Press this button to switch through the Modes:
ATV/DTV/Media/AV/FM/PC/Component/DVD/
Scart/HDMI

SLEEP MUTE ENTER

Switch the TV off within a certain time
Muting the sound; To turn off the sound
Select/Confirm: For selecting a Menu or confirm
a selected Option. Under DTV and TV Mode press
once to display the Channels List

FAV

In DTV and TV Mode, press it to display
Favourite Channels previously selected

MENU EXIT

Main Menu: to call up or cancel this menu
Leave the current Menu displayed on-screen
Press to choose one of the items on-screen and
to change its values

▲ ▼ ◀ ▶

Press to choose one of the items on-screen and
to adjust one of its related values

VOL +/- CH+/- 0-9

Increasing and decreasing the volume
Move to the previous Channel or next Channel
Select Channel by pressing relevant numbers

R/L

To switch to NICAM Mode "mono" stereo I & II.
Only available on TV programmers with INCAM
transmission.

PLIST DISPLAY

Display the channel list.
Display the present channel information.

-/-- RETURN

Switch the program digit.
Return to the previous viewing channel.

ZOOM

The picture may be enlarged by up to 4 times
picture. Press <ZOOM> key 6 times, the zoom
scales will be 2X, 3X, 4X, 1/2, 1/3, 1/4.

PROGRAM

Press to come into program status; enter the track ,
numbers desired then using direction key move the
cursor to start button, then <ENTER> key to start playing.
To exit the programmed play mode,

CLEAR SLOW

Press to remove the numbers if you enter wrong number,
Press to enjoy the slow motion at a 1/2x, 1/4x, 1/8x and
1/16x slower forward/backward speed

REMOTE CONTROL BUTTONS

■	In DVD and USB Mode you can STOP items playing that you have previously recorded.
⏸	In DVD and USB Mode you can PAUSE items that are playing that you recorded previously.
⏮	In DVD and USB Mode, this key will move you forward to play the next programme in your list.
⏭	In DVD and USB Mode, this key will move you back to play the previous programme in your list.
⏩	In DVD and USB Mode, this key will start to fast forward the programme.
⏪	In DVD and USB Mode, this key will start to rewind the programme.
MENU	In DVD Mode, press it to switch Language.
TITLE	In DVD Mode, shows the title of the disk.
R/L	In DVD and DTV Mode, press to adjust sound
SETUP	In DVD Mode, press to access DVD system menu
▲	In DVD Mode, press to EJECT disk.
AUTO	Moves vision or sound to the section selected.
USB SD	In DVD Mode, press to switch between USB
SUBTITLE/CC	This function may enable you to select multi subtitle language, in TV mode, Press this key to select the CC, ON or OFF mode and CC on Mute.
ANGLE	During athletic match, concert or the atrecal program, press<ANGLE> key continually on remote controller to select various angle to view the same image (this operation works only for the disc with multi angle encoded).
LANGUAGE/MTS	Press to select language (This operation works only for the disc with multi language encoded). in TV mode, When stereo program is received, press this key to switch sound system between mono and stereo.
A-B	Press to set initial point (A), second time Pressing <A-B> key to set end point (B) playing from A to B. Third time pressing <A-B> key to cancel repeat.
REPEAT	For DVD disc playing, press<REPEAT>key to repeat title, chapter, all or close repeat. For VCD disc playing, press<REPEAT> key to repeat track, all or close repeat.

INPUT SOURCE SELECTION

 
- Press **SOURCE** button to select the input source list:

1. Turn on the power, boot settings in FM status.
2. Press **SOURCE** button to convert into BT status.
3. Press **SOURCE** button to convert into TV status.
4. Press **SOURCE** button to convert into AUX status.
5. Press **SOURCE** button to convert into HDMI status.
6. Press **SOURCE** button to convert into DVD status.



RADIO MODE

Press **SOURCE** to FM status.
The FM frequency will be displayed automatically on the LCD



- **Searching for stations manually.**

1. Press **SKIP-/TUNE-** or **SKIP+/TUNE+** briefly to adjust the turning requency manually.
2. To change station, press **SKIP-/TUNE-** or **SKIP+/TUNE+** to choose a station.
3. Press **MEMORY** to store the current station, the frequency will blink and the **P00** (Stored station) will be displayed.

- **Searching for stations automatically.**

1. Press **SKIP-/TUNE-** or **SKIP+/TUNE+** for 3 seconds to enter automatic search mode when a station is received, searching stops.
2. To store the station, press **MEMORY** and the station frequency will blink. The frequency selected will be stored in the station list.
3. To change station, continue to press **SKIP-/TUNE-** or **SKIP+/TUNE+** (for 3 seconds)

BT MODE

Press **SOURCE** to BT status.
The BT will be displayed automatically on the LCD



1. Pls press button "**Source**" and enter into Bluetooth mode;
2. find the Bluetooth name "KTSV1020" in your smart device, Match it.
3. You can choice your favourity song by **▶||** or **SKIP-/TUNE-** or **SKIP+/TUNE+**

● TV MODE

■ How to Navigate Source

 
- Press SOURCE button to display the input source list. The input source TV, AV and USB will take turns to display by pressing SOURCE button in a consecutive way.

■ Picture

- Press MENU button on the TV or on the remote control to display the main menu; after pressing MENU button, PICTURE will be highlighted. Then press ► button to select the sub menu and adjust the value in the sub menu. You can press MENU button to go back to the upper menu or EXIT button to close the OSD.
- After pressing MENU button, Picture will be highlighted. Press ▼ button to select Color Mode, Zoom Mode, 3DNR, DLC or PanelRotateType, and then press ◀/▶ to adjust the corresponding value of each option.
- After pressing MENU button, PICTURE will be highlighted, then press ► to select Picture Mode, and press ENTER or ► to adjust the following settings.

TIPS:

- You can change the value of Contrast, Brightness, Sharpness, Tint and Color when in Picture Mode.
- You can press P.MODE button on the remote control to change the PICTURE directly

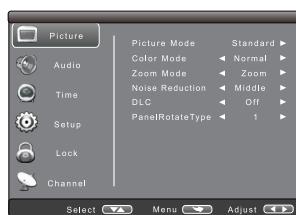

1



2

Picture Mode	Cycle among picture modes: Personal/Standard/Dynamic/Soft. Alternative: you may press the P.MODE on the remote control to change Picture Mode directly.
Color Mode	Cycle among color modes: Warm/Cool/Normal
Zoom Mode	Cycle among Zoom Mode: Standard/Wide/Wide Zoom/Zoom
Noise Reduction	Reduce the noise level of the connected device: Middle/Strong/Off/Weak
DLC	Cycle between ON and OFF dynamic luminance control function.
PanelRotateType	This function can invert the information.

● TV MODE

■ Audio

- You can select the type of sound which best corresponds to your listening. Press MENU button to enter the OSD menu, then press ▼ button to select Audio.
- Press ► to enter to Audio Mode, you can also press ▲/▼ buttons to select Audio Language, Audio Only or AVC, and then press ◀/▶ to change the corresponding mode.

Attention:

Audio Language can only be shown when in TV mode.

- After pressing ► to select Audio Mode, you can then press ENTER/► button to enter this sub menu, in which you can select among different modes: Standard/Music/Movie/Sports/Personal. When in Personal mode, you can change the following settings.



1



2



3

Audio Mode	Allow the selection of an audio-enhancement technique: Standard/Music/Movie/Sports/Personal. Alternative: you may press the S.MODE on the remote control to select the audio mode directly.
Audio Language	Select audio language among: English, French or Spanish.
Audio Only	Only support sound output.
AVC	Auto Volume Control: cycle between On and Off to control volume.