

Description:

Kit, which is a kind of smart anti lost device, it can help you to find your items. It is connected with mobile phone by Bluetooth and you can self definition the item name or distance, once walk out the setting distance it will alarm to remind you. Kit, make your life easier!

Features:

1. Small size easy carrying;
2. Multi options of appearance: wristband/key chains/necklace;
3. Wide application for mobile phones, wallets, bags, kids, pets etc.
4. Vibration or ring alarm for options;
5. Adjustable distance: 20 meters indoor and 50 meters outdoors;
6. Continuous Bluetooth connection to find items any time.

Function:

- Anti lost: Dual way anti lost, once walk out the setting distance the mobile will alarm you.
- Finding : Click finding icon the device alarm
- Remote camera: support remote camera in effective distance
- Incoming call alert
- Adjustable distance Indoor 20 meters outdoor 50 meters

Specification:

Brand: Ktag

Model:CR203

Support: iPhone 4S /Android 4.3 and above versions

Bluetooth version: Bluetooth 4.0

Effective distance:1m-50m

IOS system support 4 devices connection at most the same time while android system just support one device connection.

Alarm way: Mobile phone ring or vibrating, the anti lost device ring and LED flash.

Standby time: 3 months at most

Battery model: 2032button battery

Weight: 9G

Size: 36 (Diameter)* 10MM(Thickness)

Material: ABS device + silicon wristband

App Name: KTag (Download in Apple Store or Google Play)

Packing List

One anti lost device

One user Manuel

One wristband

One button battery

Instructions:

1. Download and install the Ktag APP in Apple Store or Google Play.
2. Long press 3 seconds to turn on the device and the indicator will flash. Then open the APP to turn on the Bluetooth connection and location function according to the tips, enter to the device page and it will search and connect automatically. If do not use it for long time please long press the button 3 seconds to turn off the device or the device will remain Bluetooth connected all the time. After turn off the device, the indicator will turn off and the device image in APP will disappear.
3. Please references to the Help page in APP learn how to operate the device.
4. Replace battery: When the power is low the battery icon in APP will turn red and need to be replaced. Open the back shell by screwdriver and replace the battery inside.

FCC compliance statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.