



Attention information:

Note information below using this earphone.

- When Children use the earphone need to under the supervision of adults.
- Do not remove or modify the earphone for any reason, otherwise it may cause the earphone to malfunction or even burn down.
- Please do not use the earphone to the authorized repair center for repair.
- Please use the earphone in 0-40°C under the environment, reducing charging capacity and shortening service life.
- Extreme temperature can result in deforming equipment, do not use the equipment in the high temperature environment, do not use the equipment in the low temperature environment with wet hands. The manufacturer will not guarantee any damage caused by water entering the equipment.

- Please avoid using the device indicator light near the eyes of children or animals;
- Do not use the device in thunderstorm weather;
- Do not use the device in the high-voltage power line area, equipment and increase the risk of electric shock;
- Listening for a long time at a high volume can damage your hearing. It is recommended to avoid accidents within 2 hours.
- Changes in the use of the equipment are supported by the manufacturer. For details, please refer to the user's manual to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

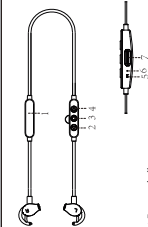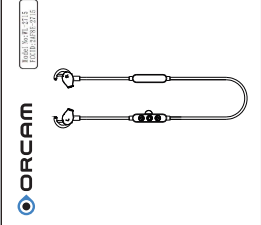

- Battery shell
- Volume + /Track Back Button
- Power /Play/Pause Button
- Volume - /Track FWD Button
- LED indicator
- Microphone
- USB Charging port

Basic functions and features:

- Support platform: computer/mobile phone/laptop
- Support connection devices
- Dual channel stereo output
- Reception range (free space) more than 10 meters;
- Built-in lithium polymer battery: 3.7V/100mAh;
- With Micro USB charging port;
- Support sleep mode and power saving mode and low power consumption
- Support function: play/pause/power on/power off/pairing
- Working current: <21mA; Power off Current: 0uA;
- 5-6 hours of continuous operation on one charge;
- Speaker diameter 10 mm, 32 Ω, 2 mW;
10. Output rating: 20mW, SNR(Signal to Noise Ratio) >70dB;
11. Charging time: about 2-3 hours;
12. Charge time: about 2-3 hours;
13. Net weight: 17g;

Charging:

- The earphone with a non-removable built-in battery, which can be recharged. When used at first time make sure the headset is fully charged.
- Plug the charging cable into the Micro USB charging port on the earphone.
- When the earphone is fully charged, the red indicator light will turn off. When the red indicator light is on, the earphone is charging. The red indicator light will turn off when the headset is fully charged.
- Repeated charging and discharging of the earphone will lead to battery performance degradation over time.
- Do not call or answer the phone when charging.
- When the headset battery is low, the headset indicator is on.
- The charging time is about 2-3 hours; playing time is about 6 hours.

How to Use:

- Bluetooth Version: The bluetooth specification complies with bluetooth V4.2;
- Under the power off: Long press the power button to turn on the power of the headset.
- Under the power off: Long press the power button with 6 seconds, bluetooth is search pairing status (Red/blue lights flashing alternately);
- Pairing Name: Orcam earphones. After the connection is successful, the headset will automatically connect to the phone.
- Press the Power button once to start playing music, and press Power button again to pause music.
- To answer an incoming call: press power button for 1 second when it calls in. To end a call: press power button for 1 second when it calls in.
- Volume may be adjusted on your earphone by pressing the Volume + button or Volume - buttons. Press the Volume + button with two seconds, will playing the next song; Press the Volume - button with two seconds, will go back to the previous.

2mm