



User Manual
C80
Mini PC Box



GETTING STARTED

1. Turn on your TV / Monitor, change video output to HDMI.
2. Connect mini PC box to HDMI port of your TV / Monitor with the HDMI cable.
3. Connect mini PC box to power by using AC power adapter. Check that LED indicator is on.

USING YOUR MINI BOX

1. Press power key and hold it for 5 seconds, Start screen will appear.
2. To turn off the device, press power key and hold it for 10 seconds.

Note: Never unplug the power adapter to turn off device.

ENTERING DESKTOP

1. Recovery: Choose "See advanced repair options".
2. Choose an option: "Continue".
3. Choose Region and Language.
4. Choose "Personalize".
5. Get online: please don't choose network, just skip it.
6. Settings.
7. Your account.
8. Start screen.
9. Connect to network.

TROUBLESHOOTING

Unable to connect to wireless network

Make sure that you are within network range and signal strength is good. And double check network and password.

Unstable Operation

Installing too many apps or apps from unknown sources can cause system instability. Reset device and uninstall some apps.

Black Screen, unable to turn mini box on

Connect your mini box to the AC power outlet, Restart the device.

No Sound in Headphones

Increase the volume.

Check headphone cable connection.

Check if headphone jack is dirty.

Try another headphone.

Right click on the speaker icon in the bottom right corner, choose "Playback Device" – "Sound" – "Playback Options" - "Intel SST Audio Device". Right click "Intel SST Audio Device" and choose "Set Default Device".

If you have other problems, please send email to:

hncsmile@hotmail.com

TECHNICAL SPECIFICATIONS

Processor: Quad-Core Intel Atom processor Z3735F

Graphic:Processor provides 2D and 3D acceleration

Operating System: Windows 10

Memory: 2GB DDR3 RAM

Storage: 16GB/32GB eMMC

Wireless LAN: Wi-Fi 802.11 b/g/n

Built-in Bluetooth : V4.0

Micro SD Cardslot : up to 32GB compatible

Ports: 1*micro USB, 1*3.5mm mini audio jack, 2*USB
1*micro HDMI, 1*TF card slot

Battery: Li-Polymer battery, around 3 hours of work
without external power supply

Operating Environment: 5°C to 35°C Celsius

Relative Humidity: 10%-75%

Dimensions:152.7*82.5*11.5mm

Weight: 250g

HNCSMILE reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Information in this document is subject to change without prior notice.

DECLARATION

The user manual includes all the information of safe and correct operation instruction. To avoid accident and product damage, please study the manual carefully before using the device.

1. Please keep the device away from high temperature, humid and dusty environment.
2. Do not drop or crash the device.
3. Do not cut off the device when it is under formatting or upgrading, otherwise system error will occur.
4. Do not dismantle the device or clean it with alcohol, thinner or benzene.
5. We reserve the right to upgrade and modify the product.
6. Disclaimer: we only provide warranty and after-sale service of the device hardware. We are not responsible for any data loss.
7. Device is not water-proof.
8. All pictures in the manual are for reference only.

WINDOWS

User manual for HNCSMILE C80 mini box

This manual explains the basic operations of HNCSMILE C80 mini box. If you are looking for detailed information on Windows 10, please visit the website:

<http://windows.microsoft.com/en-gb/windows-10/getstarted-whatsnew>

Before you begin

Thank you for choosing HNCSMILE C80 mini box. We wish you like the device.

HNCSMILE C80 mini box is a multi-purpose device, and can be used for work, education and entertainment.

Thanks to its minimal size and light weight you can now go online everywhere without having to carry along the usual more bulky personal computers . Clear and intuitive interface helps you navigate the menu at ease. Please read the user guide and keep it for further reference. The user guide contains important information regarding safe and effective use of the mini box.

Product & Accessories

1. 1*HNCSMILE C80 MINI BOX
2. 1*HDMI Cable
3. 1*AC Power Adapter
4. 1*User Manual


PRODUCT OVERVIEW

Parts and buttons of the device



PRODUCT CONNECTION

Connect C80 mini PC box to HDMI port of your TV / Monitor with the HDMI cable. Then connect mini PC box to power by using AC power supply. Finally connect the input device(wired or wireless mouse, etc) to the USB connector of your C80 mini box.

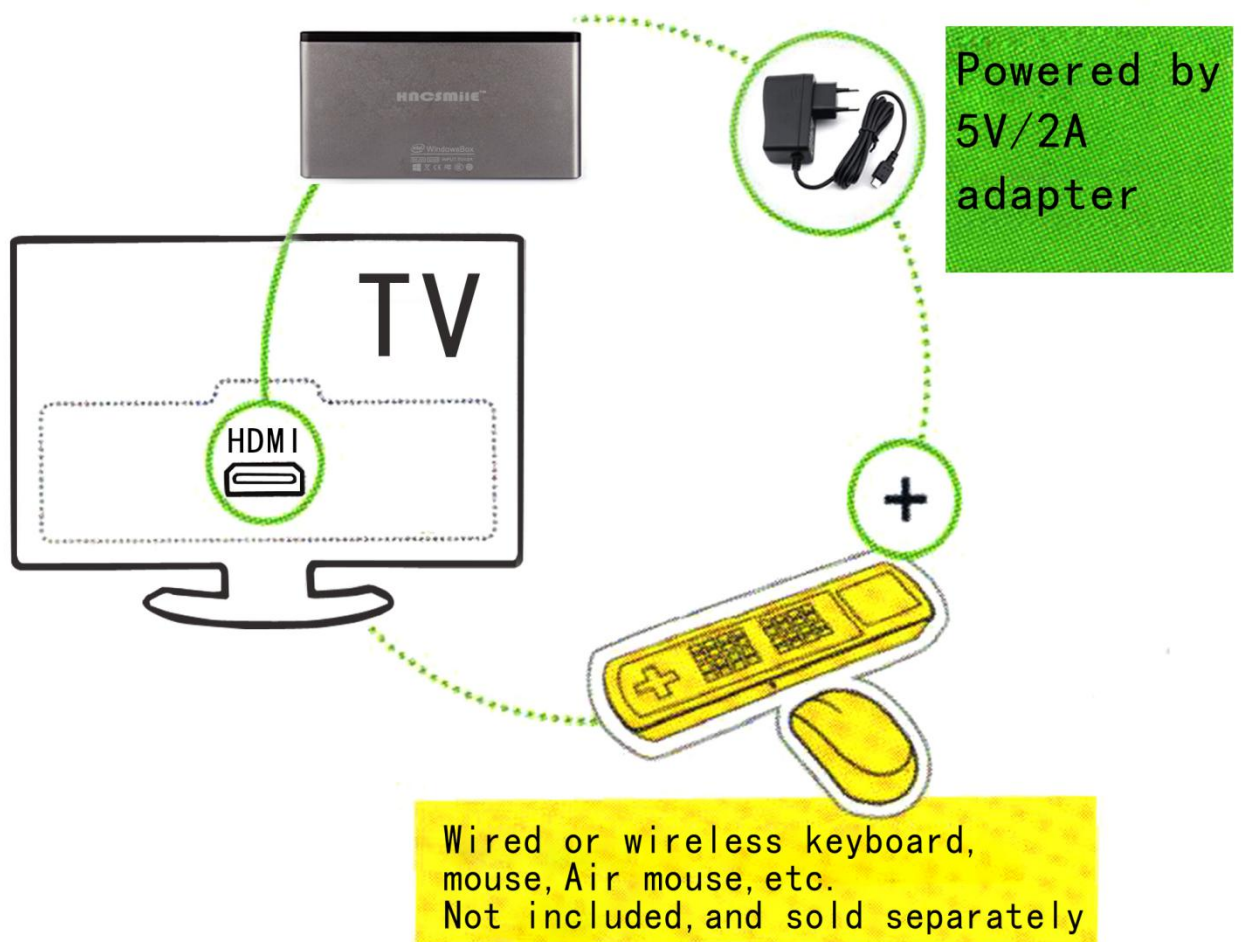

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.