

## How to connect to Bluetooth

Mit Bluetooth verbinden | Verbinding maken met Bluetooth | Connexion Bluetooth



1 |

Press Mode button to display Bluetooth

Drücken Sie die Modus-Taste, um Bluetooth anzuzeigen

Druk op de Mode-knop om de Bluetooth weer te geven

Appuyer sur le bouton Mode pour afficher le Bluetooth

Presione el botón Modo para visualizar Bluetooth

Premere il tasto Mode per visualizzare il Bluetooth



2 |

Monty will display "Bluetooth Pairing"

Das Monty zeigt daraufhin an "Bluetooth Kopplung"

Monty toont nu "Bluetooth Koppelen"

Monty affiche "Bluetooth Jumelage"

Monty mostrará "Bluetooth Emparejamiento"

Monty mostrerà "Bluetooth Pairing"



3 |

Scan for Bluetooth devices on your smart device

Suchen Sie auf Ihrem Smartphone nach Bluetooth-Geräten

Zoek naar Bluetooth apparaten op je smarttoestel

Scanner les appareils Bluetooth sur l'appareil intelligent

Busque dispositivos Bluetooth en su dispositivo inteligente

Scansione per dispositivi Bluetooth sullo smart device

## How to connect to Bluetooth Cómo conectar el modo Bluetooth | Come collegarsi al Bluetooth



4 |

Connect to “Monty” on your smart device

Verbinden Sie das Monty mit Ihrem Smartphone

Maak verbinding met “Monty” op je smarttoestel

Connecter “Monty” à l'appareil intelligent

Conéctese a “Monty” desde su dispositivo inteligente

Connettersi a “Monty” sul proprio smart device



5 |

If successful display will show “Bluetooth Connected”

Sobald die Verbindung hergestellt wurde, zeigt das Gerät “Bluetooth Verbunden” an

Als dit lukt, toont het display “Bluetooth Aangesloten”

Si cela a fonctionné, le message “Bluetooth Connecté” apparaîtra sur l'écran

Si se efectúa la conexión, la pantalla mostrará “Bluetooth Conectado”

In caso di connessione riuscita, sul display comparirà “Bluetooth Connected”

## How to set an Alarm

### Wecker einstellen | Alarm instellen | Réglage de l'alarme



1 |

Press Alarm Button (1x for Alarm 1 or 2x for Alarm 2)

Drücken Sie die Taste Wecker (1x für Weckruf 1, 2x für Weckruf 2)

Druk op de Alarm-knop (1x voor Alarm 1 of 2x voor Alarm 2)

Appuyer sur le bouton ALARM (1x pour l'alarme 1, 2x pour l'alarme 2)

Presione el botón de alarma (x1 para Alarma 1, x2 para Alarma 2)

Premere il tasto Alarm (1x per sveglia 1 o 2x per sveglia 2)



2 |

Use left and right arrows to turn Alarm On and Off

Schalten Sie den Alarm mit den linken und rechten Pfeiltasten ein (On) und aus (Off)

Gebruik de pijlen links en rechts om het alarm in en uit te schakelen

Utiliser les flèches gauche et droite pour allumer ou éteindre l'alarme

Utilice las flechas izquierda y derecha para encender o apagar la alarma

Utilizzare le frecce destra e sinistra per attivare e disattivare la sveglia



3 |

Press OK button to progress

J Drücken Sie die OK-Taste, um fortzufahren


Druk op de OK-knop om verder te gaan

Appuyer sur le bouton OK pour confirmer

Presione el botón de OK para continuar

Premere OK per proseguire

## How to set an Alarm Cómo fijar una alarma | Come impostare una sveglia

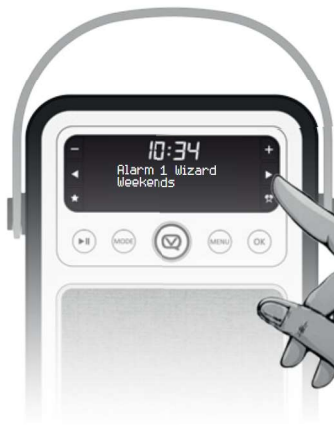

4 |

Use left and right arrows to set your alarm preference

Nutzen Sie die linken und rechten Pfeiltasten, um Ihre bevorzugte Weckfunktion auszuwählen

Gebruik de pijlen links en rechts om je alarm in te stellen

Utiliser les flèches gauche & droite pour configurer l'alarme

Utilice las flechas izquierda y derecha para establecer su preferencia de alarma

Utilizzare le frecce destra e sinistra per impostare le preferenze per la sveglia



5 |

Press OK button to confirm

Drücken Sie die OK-Taste, um fortzufahren

Druk op de OK-knop om verder te gaan

Appuyer sur le bouton OK pour confirmer

Presione el botón de OK para continuar

Premere OK per proseguire



6 |

Use left and right arrows to set the hour of alarm

Nutzen Sie die linken und rechten Pfeiltasten, um die Stunde der Weckzeit einzustellen

Gebruik de pijlen links en rechts om het uur van het alarm in te stellen

Utiliser les flèches gauche & droite pour régler l'heure de l'alarme

Utilice las flechas izquierda y derecha para establecer la hora de la alarma

Utilizzare le frecce destra e sinistra per impostare l'ora della sveglia

## How to set an Alarm

### Wecker einstellen | Alarm instellen | Réglage de l'alarme



7 |  
Press OK button  
to confirm

Bestätigen Sie die  
Auswahl mit OK

Druk op de OK knop om  
te bevestigen

Appuyer sur le bouton OK  
pour confirmer

Presione el botón OK  
para confirmar

Premere OK per confermare la  
propria selezione



8 |  
Use left and right arrows to set the  
minutes of the alarm

Nutzen Sie die linken und rechten  
Pfeiltasten, um die Minuten der  
Weckzeit einzustellen

Gebruik de pijlen links en rechts om de  
minuten van het alarm in te stellen

Utiliser les flèches gauche & droite  
pour régler les minutes de l'alarme

Utilice las flechas izquierda y derecha  
para establecer el minuto de la alarma

Utilizzare le frecce destra e sinistra per  
impostare i minuti della sveglia



9 |  
Press OK button  
to confirm

Bestätigen Sie die  
Auswahl mit OK

Druk op de OK knop om  
te bevestigen

Appuyer sur le bouton OK  
pour confirmer

Presione el botón OK  
para confirmar

Premere OK per confermare la  
propria selezione

## How to set an Alarm Cómo fijar una alarma | Come impostare una sveglia



10 |

Use left and right arrows to choose type of alarm

Nutzen Sie die linken und rechten Pfeiltasten, um die Art der Weckfunktion einzustellen

Gebruik de pijlen links en rechts om het type van het alarm in te stellen

Utiliser les flèches gauche & droite pour régler le type d'alarme

Utilice las flechas izquierda y derecha para establecer el tipo de alarma

Utilizzare le frecce destra e sinistra per impostare il tipo di sveglia



11 |

Press OK button to confirm

Bestätigen Sie die Auswahl mit OK

Druk op de OK knop om te bevestigen

Appuyer sur le bouton OK pour confirmer

Presione el botón OK para confirmar

Premere OK per confermare la propria selezione



12 |

Use left and right arrows to choose volume of alarm

Nutzen Sie die linken und rechten Pfeiltasten, um die Lautstärke der Weckfunktion einzustellen

Gebruik de pijlen links en rechts om het volume van het alarm in te stellen

Utiliser les flèches gauche & droite pour régler le volume de l'alarme

Utilice las flechas izquierda y derecha para establecer el volumen de la alarma

Utilizzare le frecce destra e sinistra per impostare il volume della sveglia

## How to set an Alarm Wecker einstellen | Alarm instellen | Réglage de l'alarme



13 |  
Press OK button  
to confirm

Bestätigen Sie die Auswahl  
mit OK

Druk op de OK knop om  
te bevestigen

Appuyer sur le bouton OK  
pour confirmer

Presione el botón OK  
para confirmar

Premere OK per confermare la  
propria selezione



14 |  
Use left and right arrows to select  
Snooze time

Nutzen Sie die linken und rechten  
Pfeiltasten, um eine  
Schlummerzeit einzustellen

Gebruik de pijlen links en rechts om je  
sluimertijd te selecteren

Utiliser les flèches gauche & droite  
pour régler l'intervalle de répétition

Utilice las flechas izquierda y derecha  
para seleccionar la hora de repetición

Utilizzare le frecce destra e sinistra per  
selezionare l'ora per la funzione snooze



15 |  
Press OK button  
to confirm

Bestätigen Sie die Auswahl  
mit OK

Druk op de OK knop om  
te bevestigen

Appuyer sur le bouton OK  
pour confirmer

Presione el botón OK  
para confirmar

Premere OK per confermare la  
propria selezione

How to set an Alarm  
Cómo fijar una alarma | Come impostare una sveglia



16 |  
Monty will display  
**"Alarm Saved"**

---

Das Monty zeigt daraufhin  
"Alarm Saved" an

---

Monty toont nu  
"Alarm Saved"

---

Monty affiche  
"Alarm Saved"

---

Monty mostrará  
"Alarm Saved"

---

Monty mostrerà  
"Alarm Saved"





Need Help?



[www.MyVQ.com](http://www.MyVQ.com)



0333 1234 601



[support@myvq.com](mailto:support@myvq.com)

**FCC Caution.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**IC Warning**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences  
L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.