



learn to earn

© 2016 Spiral Toys

STEP 5: Create Tasks

NOTE: Pre-existing Tasks from the drop-down list are the Tasks the toy can speak out loud.

1. Press "Add Task", enter a Task Name or select a Pre-existing Task from the drop-down list. Enter a Reward Value for the Task as Money or Star-Points. Add details in the Notes area. Press the "Add Photo" box to add a photo.

2. Notifications will appear and be heard when tasks are added to your child's Task List.
3. A child can review all tasks in their list, and mark them off as they complete them by pressing the "TASK DONE" button in the Task Details popup. The Child can include a photo as "proof" that the Task was completed properly for when reviewed by the Parent during the "Pending Approval" stage.
4. When a Task is marked as "Done" by the Child, the Task will automatically change to a "Pending Approval" state, awaiting a review by a Parent. Parents can "Approve" or "Deny" the approval request, and include a photo and note with the response. If the Task is "Approved", the Reward Value will automatically be added to the Child's Balance.

Page 3

STEP 6: My Bank and Funds

1. "Funds" is the term for anything to do with either Money or Star-Point currency accumulation.
2. A record of incoming Funds is listed within the child's "My Bank" Screen. The record includes incoming funds from "Approved Tasks" and funds "gifted" to the child out of the kindness of the parent's heart.

3. On the child's "My Bank" Screen, a parent can choose to simply add Money or Stars to the child's account at any time, by pressing the "Add Funds" button.
4. When a fund is "gifted" to the child, the child can send a "Thank You" notification to the parent to express appreciation for the "gifted" fund.

5. Within Wiggy, "Money" implies physical cash, and the child's Money Balance is considered "Promised Cash" to the child by the parent. The child may request the physical cash from the parent as a "Withdrawal" from their cash balance, and it can be deducted from the balance by using the "Withdraw" button (-) on the My Bank Screen. "Stars" imply a form of currency that has an arbitrary value according to the parent.

Page 4

STEP 1: Insert Batteries

1. Insert 3 'AAA' batteries (not included) on the bottom of the Wiggy.
2. Turn the switch to "ON" on the bottom of the toy. Note: When the Wiggy is powered on correctly the tail will light up.
3. Turn your Bluetooth "ON" in your phone settings.

STEP 2: DOWNLOAD THE FREE APP!

1. Available on IOS and Android devices.
Download Wiggy Toy App on the App Store or Google Play Store.

For Compatible Devices visit wiggyapp.com

STEP 3: Create a Family Account

1. Enter valid email address and mobile phone number (**We will NEVER share this info!**).
2. Create a 4-Digit PIN Code for Parental use, **We recommend not sharing PIN with children.**
3. "Login" with your email, or mobile # and PIN.
NOTE: This email (or mobile #) and PIN will be the master login for the family account.

Please contact us at support@wiggyapp.com with any account issues.

Page 1

QUESTIONS

Please email
support@wiggyapp.com
for additional instructions, questions,
and comments.

FCC ID: 2AJ2MSPT16100 **CE**

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Seveco Global Limited **SEVECO**
1 Jianxiang Street, Hanxishui, Chashan Town, Dongguan, Guangdong, China

Page 6

Page 2

SETTINGS

1. Create a Child profile by pressing "Add Child". Enter a Name, add a photo, and an optional PIN for that Profile.
 2. After entering your Child info, you will be asked to "Link Wiggy" to that child profile. If you choose to skip this step, you may do so later in that profile's My Wiggy Screen.
 3. To switch between Child Profiles, press the desired Profile in the Select Profile Screen list. If currently in a Child Profile, go back to the Select Profile Screen by pressing the Change Profile Button in the upper left corner of the screen.
- Located on the upper left corner of the Home screen and Profile screen. **Adjust music & sound volume**
Edit Account Info; Edit Child Info.
- NOTE: A unique PIN Code for the child is optional, but recommended if there is more than one child in the household. The master PIN will always allow access of any Child-locked profile.**
2. After entering your Child info, you will be asked to "Link Wiggy" to that child profile. If you choose to skip this step, you may do so later in that profile's My Wiggy Screen.
3. To switch between Child Profiles, press the desired Profile in the Select Profile Screen list. If currently in a Child Profile, go back to the Select Profile Screen by pressing the Change Profile Button in the upper left corner of the screen.

STEP 4: Add a Child and Link a Wiggy

NOTE: You can download the Wiggy App on multiple devices, and login with same master Family Account email or phone number (and PIN). You will have all the functionality on any device to add Tasks, Approve, Add Funds, etc. All interactions will update on all devices!

Page 5

1. The Wiggy Wishlist allows a child to make a list of Wish Goals they would like to "Redeem" their earned Money or Stars on (through a parent).
 2. Press "Add Wish" to create a new Wish goal. Describe the Wish and enter a value for that item, using either Stars or Money.
 3. The child (and parent) can track the progress towards their Wish goal while the child earns funds as rewards for completing Tasks.
 4. Once the target amount of Money or Stars for a Wish goal is reached, the child can choose to "Redeem" the Wishlist item through a parent.
- Note: It is up to the parent to purchase the item for their children, then make sure to "Redeem" that item in the Wishlist, which will mark it as "Redeemed" and subtract the Funds from the child's total balance.**
- ## STEP 7: My Wishlist (Goals)