

Visit us!  
[www.tuckertoys.com](http://www.tuckertoys.com)




8 +



QUICK START GUIDE


## PRODUCT FEATURES

### Control Button

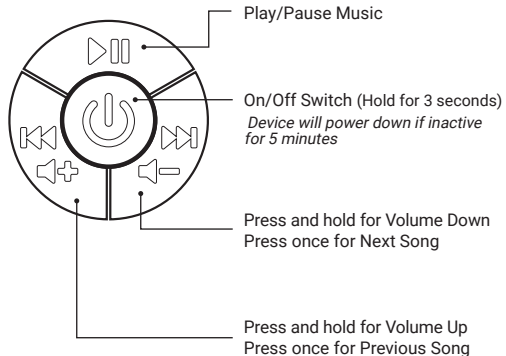

## PRODUCT FEATURES

### Back Side of Disc Jock-e™

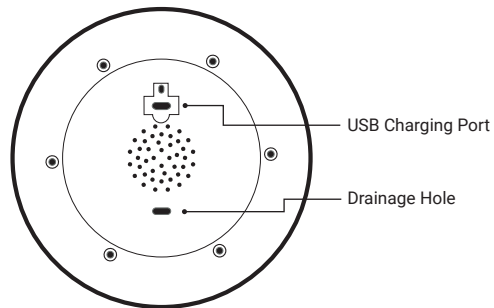

## SPECIFICATIONS

Range: 32 Meters

Transmitting Frequency: 21 KHz

Charging Input: DC 5V/100-120mA

Battery Capacity: 3.7V, 500mAh lithium ion battery

Charging Time: About 3 hours

## PACKAGE CONTENTS

- Disc Jock-e™
- USB Charging Cable
- Quick Start Guide

## CHARGING

Please charge battery for 4 hours prior to initial use to optimize battery performance. A red light signals the disc is charging. A blue light will appear when charging is complete.

## CONNECTING

To connect Disc Jock-e™ to a device, make sure your Bluetooth settings are on. Flashing red & Blue lights indicate that it's searching for your device.

It's normal for Disc Jock-e™ light to blink every 5 seconds to acknowledge it's connected.

Disc Jock-e™ will turn off if left unconnected for 5 minutes.

## TROUBLESHOOTING

**Disc Jock-e™ won't turn on:** Press and hold the on/off button for 3 seconds. Low battery level, recharge battery.

**Disc Jock-e™ won't connect to my device:** Turn on Bluetooth settings on your device. Refer to Connecting section for more information.

**Volume is too low:** Battery is not charged fully, recharge battery. Double press the volume up button until volume is at set level. Turn volume up on media device.

**Water is in Disc Jock-e™:** Tilt Disc Jock-e™ to let out excess water. Keep in dry location to avoid water damage.

## SAFETY

Do not use Disc Jock-e™ if it has been damaged in any way.

Do not disassemble the product, or tamper with the battery.

Do not expose battery to excessive heat, sunlight, or open flame.

Keep Disc Jock-e™ away from dirty conditions that may interfere with its useage.

Do not set sound at excessive levels as it may damage hearing.

This product is not waterproof, do not submerge in water.

Do not kick, step on, or use product than otherwise intended.

Chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with charger until the damage has been repaired.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.