

USER MANUAL

 
WARNING

- STRANGULATION HAZARD – Children can be strangled by cords. Keep this cord out of reach of children.
- Adult assembly required. Keep small parts away from children when assembling.
- Do not use monitor near water (e.g. Bathtub, sink, etc.)
- Keep monitor away from heat sources (e.g. Stoves, radiators, etc.)
- The product is not a toy. Do not allow children to play with it.
- For your safety, please only use original rechargeable battery provided.


Keep all batteries away from children.

Package contains:

- 2.4” Wireless monitor \*1
- 2.4G Wireless camera \*1
- DC Adapter\*2
- Instruction manual\*1

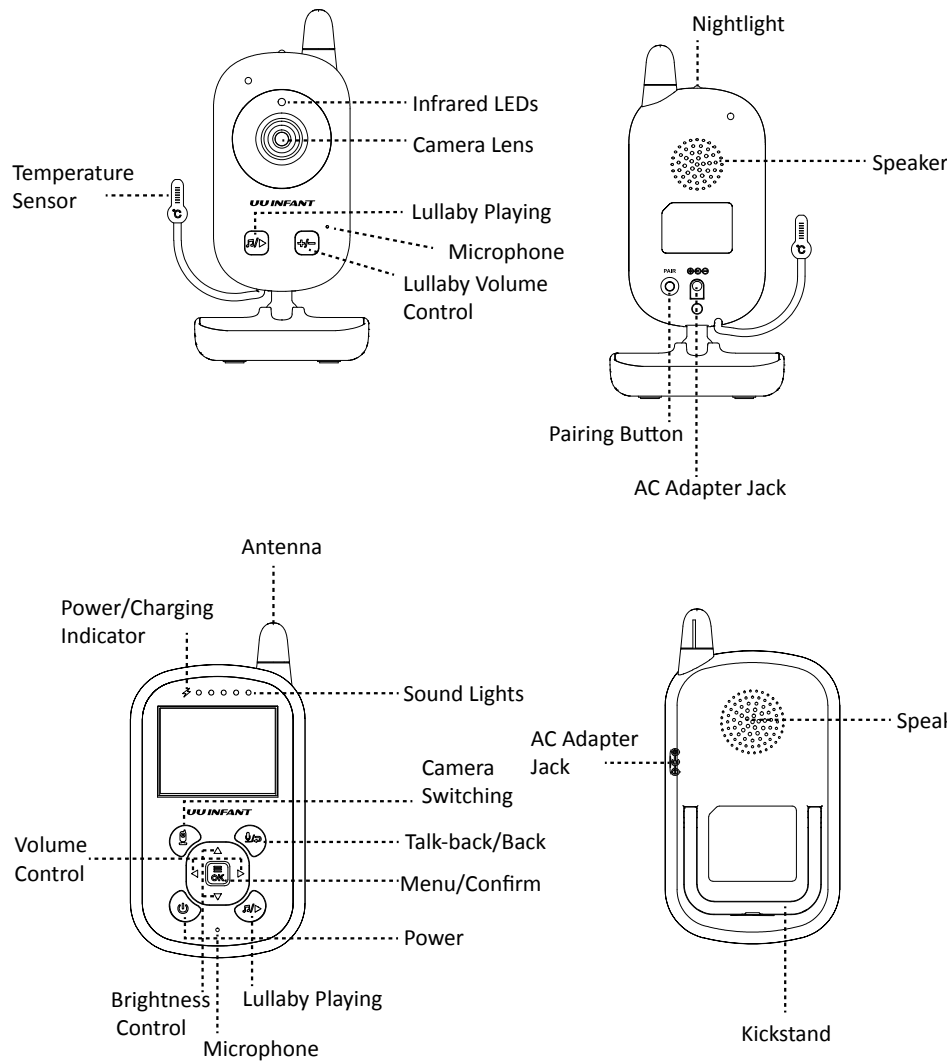


 Press the OK button on the monitor to enter the menu. Blue color means your selection. Press the “Left” and “Right” button to browse the icons and press “confirm” button to select. From left to right of the menu bar, you can find:

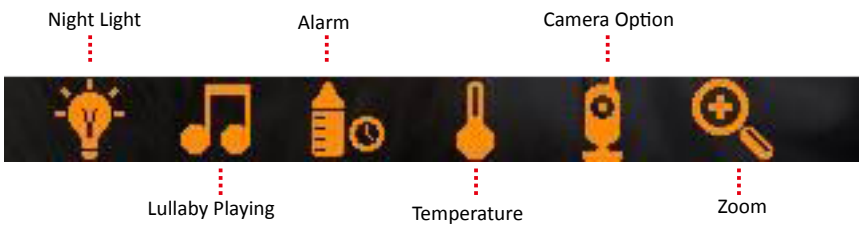

Switch from different setting by pressing the “Left” and “Right” button. Browse different options in each setting by pressing the “Up” and “Down” buttons and press “Ok” button to confirm your selection.

Functional icons on the monitor display

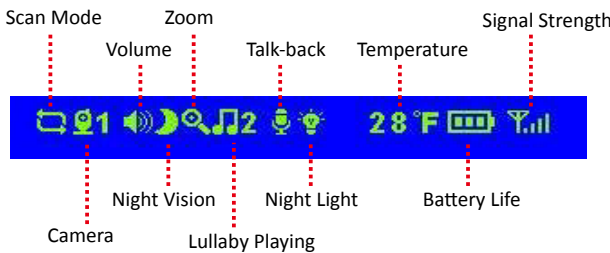 

Pairing and adding camera

The monitor and camera are paired at the factory for privacy reasons. If the monitor and camera are not paired for any reason, follow the steps to pair:  
Step 1: Make sure monitor is turned on and camera is plugged in.  
Step 2: Press the OK button. Use the Left/Right arrows to highlight the CAMERA OPTIONS .  
Step3: Use Up/Down arrows to highlight **Add** (\* means already added). Press OK button. Use Up/Down arrows to highlight camera No.  
**(Camera 1, Camera 2, Camera 3, Camera 4)**. Press **OK** button, the camera No. is winking. Then press PAIR button on the back of the child unit camera. Live video will appear once the camera is successfully paired. Press **Back** button to exit pair.

If this is unsuccessful, you should repeat steps mentioned above.

Delete camera

Press the OK button. Use the Left/Right arrows to highlight the CAMERA OPTIONS . Use Up/Down arrows to highlight **Del**. Press **OK** button. Use Up/Down to highlight the camera No. which you want to delete. Press **OK** button, the camera is unpaired with the monitor.

Additional cameras view mode

Up to four cameras can be added to one monitor, giving parents to ability to monitor and scan more than one room. There will be two view mode if you have more than one camera.

CAMERA has **Scan** and **View OPTIONS**. **Scan** is a scan mode, the video switch from one camera to another camera automatically in ten seconds. **View** mode keep the video staying at the camera No. you select.

TROUBLESHOOTING

No picture and sound

- Make sure the camera and monitor are turned on
  - Make sure the AC adapters are plugged in
  - Make sure the camera and monitor are paired
  - Make sure the outlets are working
- Sound but no picture**
- Press the Power button to turn on a video mode
  - Check to make sure nothing is blocking the camera
  - Test by moving the monitor and/or camera to different locations
  - Reset the monitor by pressing a Reset hole on the back of the Kickstand

Picture but no sound

- Turn up the volume using Volume Control
- Test by moving the monitor and/or camera to different locations
- Reset the monitor by pressing a Reset hole which on the back of the Kickstand

Picture not clear

- Position the monitor closer to the camera
- Move the monitor away from other electronic devices, cordless phones, etc.
- Test by moving the monitor and/or camera to different locations

Squealing sound coming from speaker on monitor

- Move the monitor and camera further away from each other
- Turn the volume down using Volume Control
- Restart the monitor

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following.

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which thereceiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator&your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.