

External Photos



Figure 1 - EUT Front

External Photos



Figure 2 - EUT Left Side

External Photos



Figure 3 - EUT Right Side

External Photos



Figure 4 - EUT - Back Side

Power supply and RS-232 cables are shown coming from outside of the bottom of the enclosure. These go to the RFID module identified in Figure 7.

External Photos



Figure 5 - Power Supply

External Photos



Figure 6 - EUT, Tank Storage Drawer Open

External Photos

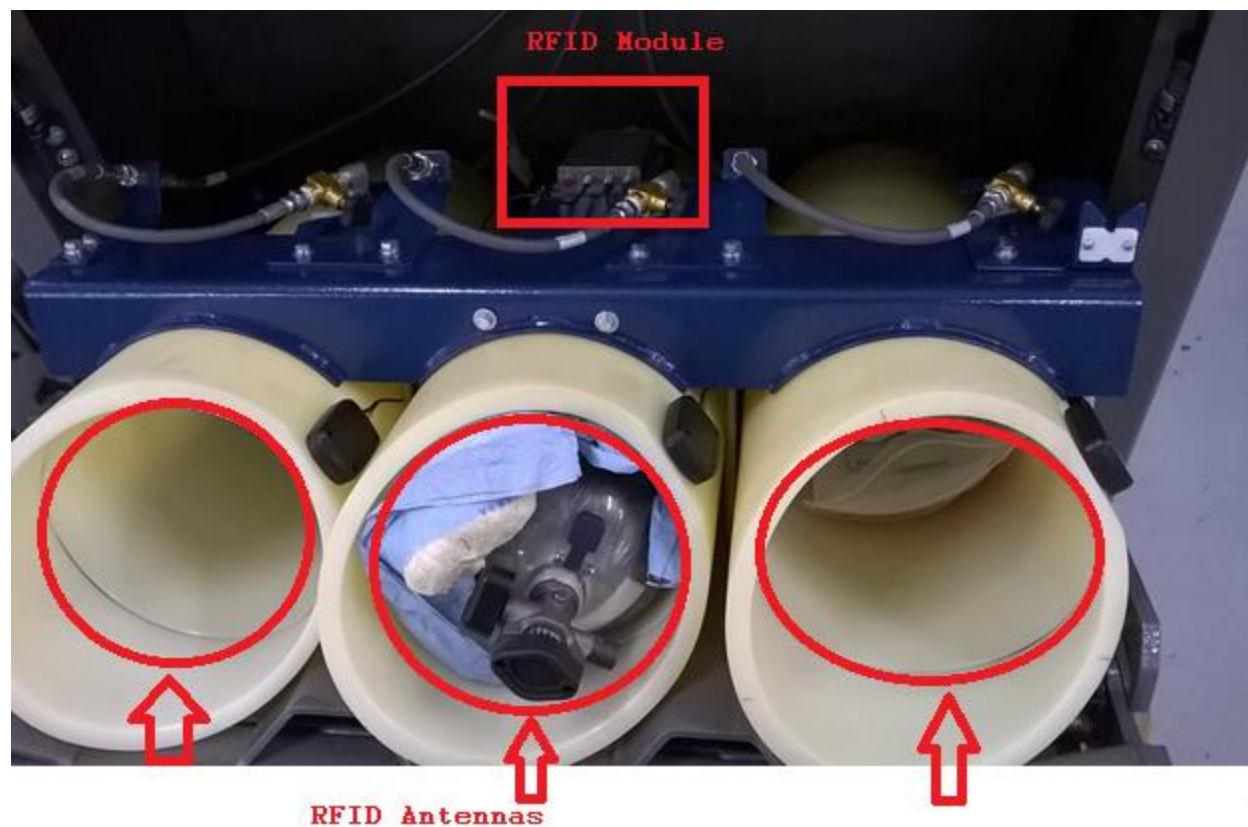


Figure 7 - Identify Antennas


External Photos



Figure 8 - RFID module detail

Shrink wrap is used to prevent access to antenna connectors. The port with red cap is not active in the firmware.

External Photos

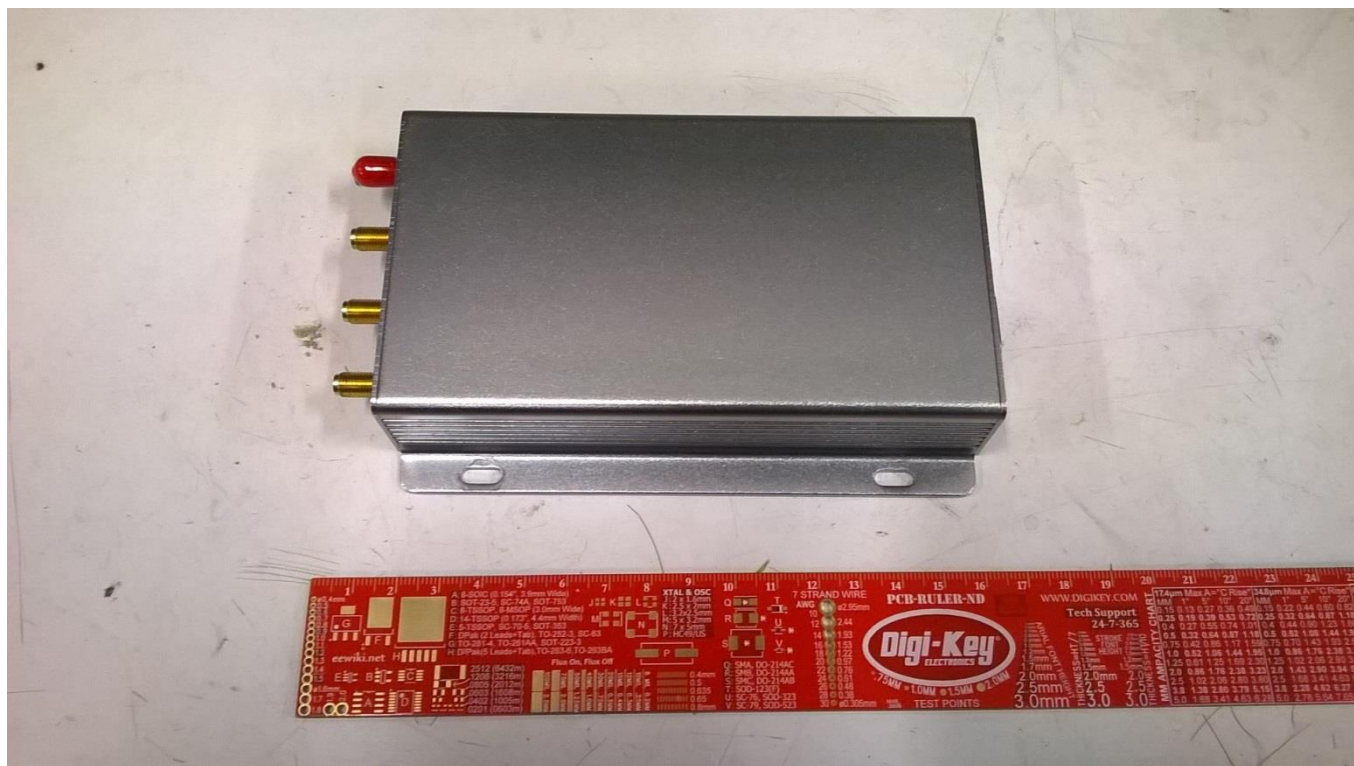

External Photos



Figure 9 - RFID Module, Detail

External Photos



Figure 10 - RFID Module, Detail

External Photos



Figure 11 - RFID Module, Detail

External Photos

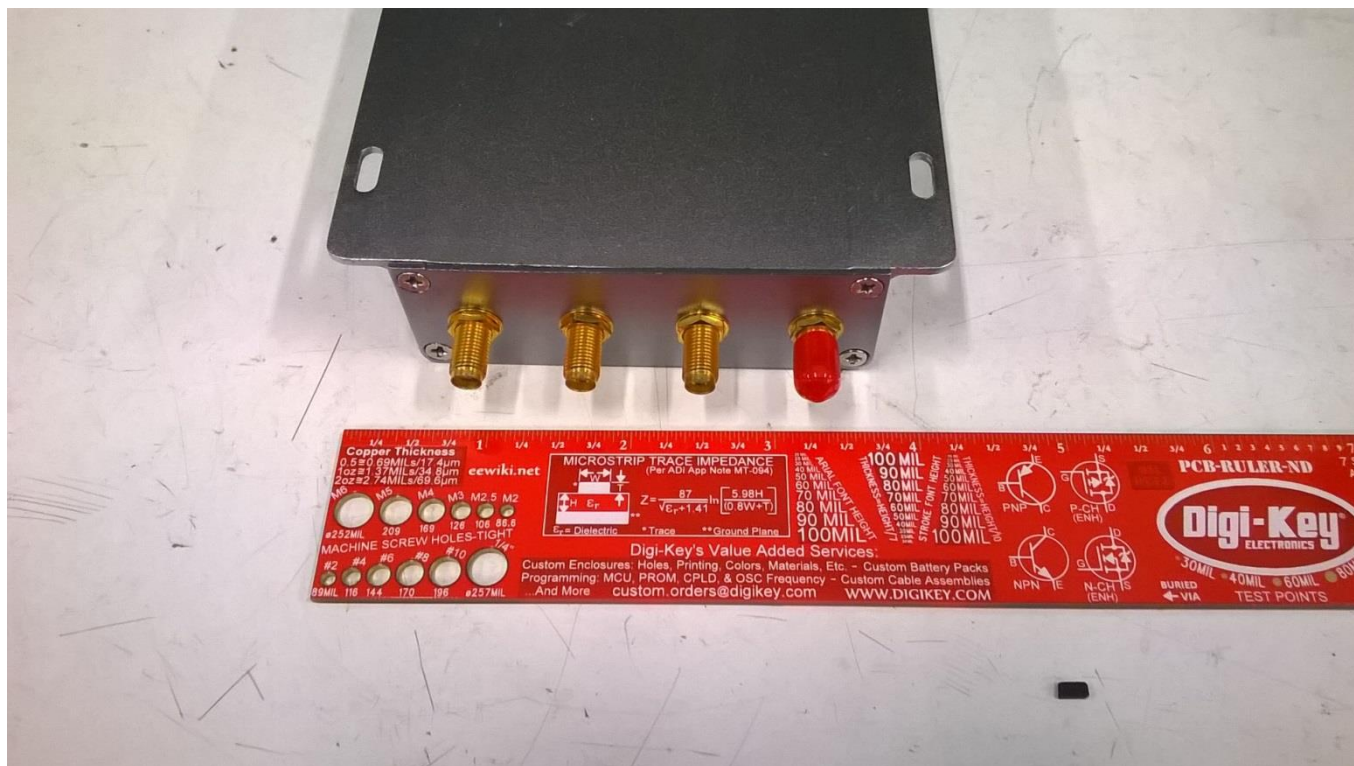


Figure 12 - RFID Module, Detail

External Photos



Figure 13 - RFID Module, Detail