

10.7MHz Communication Device

User Manual

(EFC-SPLC-02M)

R&D Center
Electromechanical Control Business Division
Automotive & Industrial Systems Company
Panasonic Corporation

■ About This Manual

This document is the user manual for “10.7MHz Communication Device”, which consists of the RF transmitter and the RF receiver.

The following items are described in the document.

- System configuration
- How to operate
- Communication Interface

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

■ System Configuration

The configuration of this system is shown in Figure 1.

Turn on the both device;

The "Master" sends the ID request at a fixed interval.

When the "Slave" receives the ID request from the "Master", The "Slave" will reply its own ID.

You can get the ID and other data by using external equipment(PC/Tablet).

The "Master" can communicate the external equipment(PC/Tablet) via the Serial Communication.

The ID of the connected the "Slave" will be output on the terminal software (Teraterm etc.).

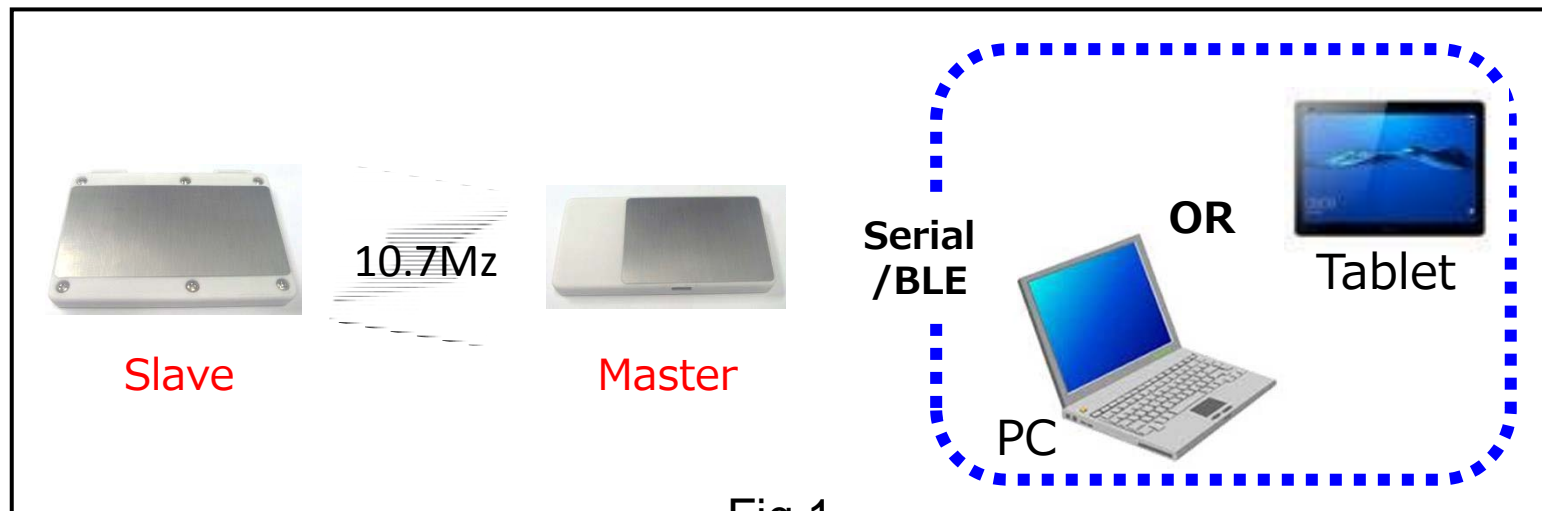


Fig.1

■ Sequence Between Master And Slave

The sequence between “Master” and “Slave” is shown in Figure 2.

The “Master” sends the ID request at a fixed interval.

When the “Slave” receives the ID request from the “Master”, The “Slave” will reply its own ID.
Both devices communicate using the frequency of 10.7 MHz.

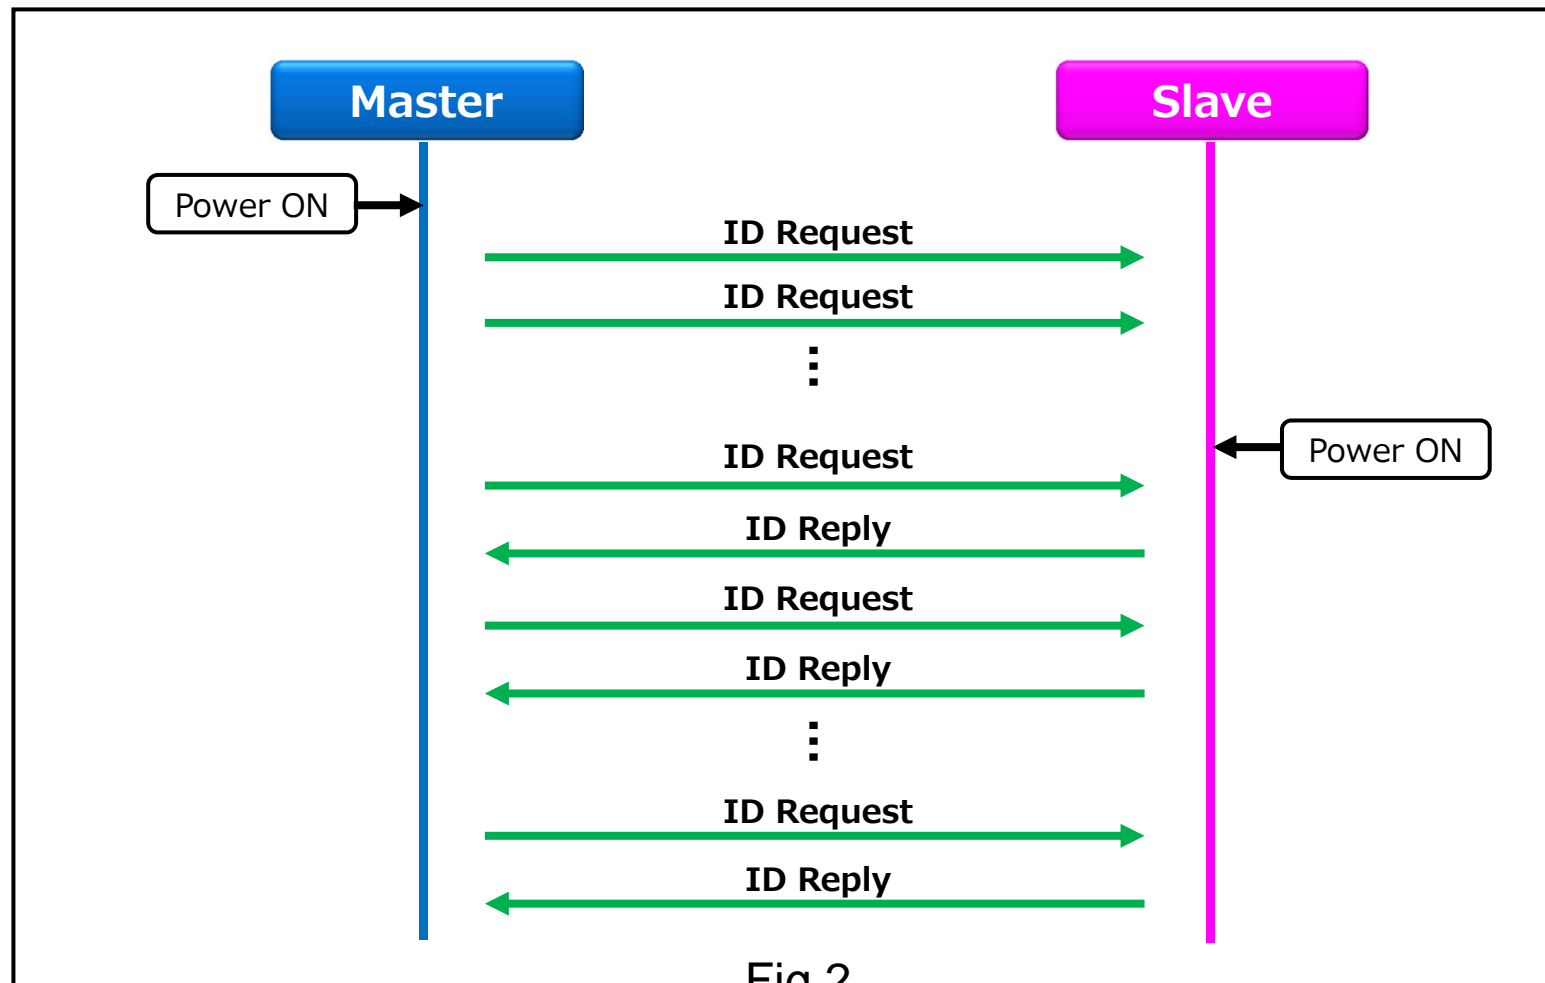


Fig.2

■ Communication I/F in External Equipment

Serial port settings :

Speed	:115200	[bps]
Data bits	:8	[bits]
Stop bits	:1	[bit]
Parity	:None	
Flow control	:None	

Setting example (Teraterm):



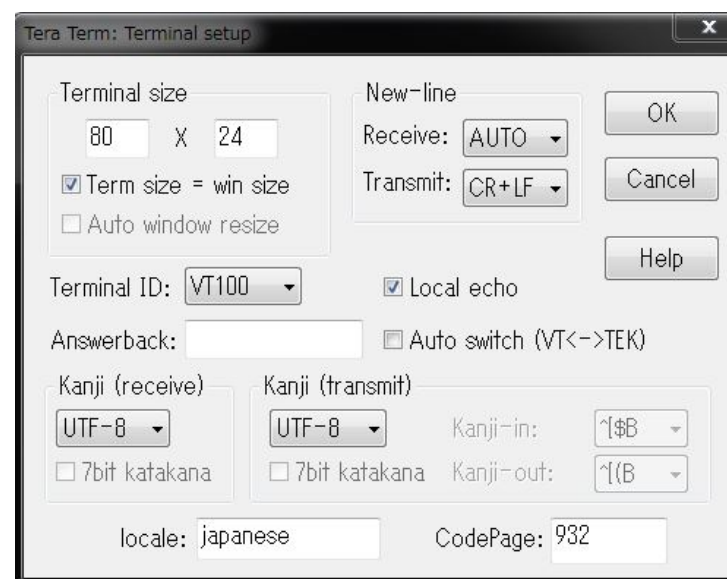


Fig.3
[4]

■ Communication I/F in External Equipment

Command execution examples :

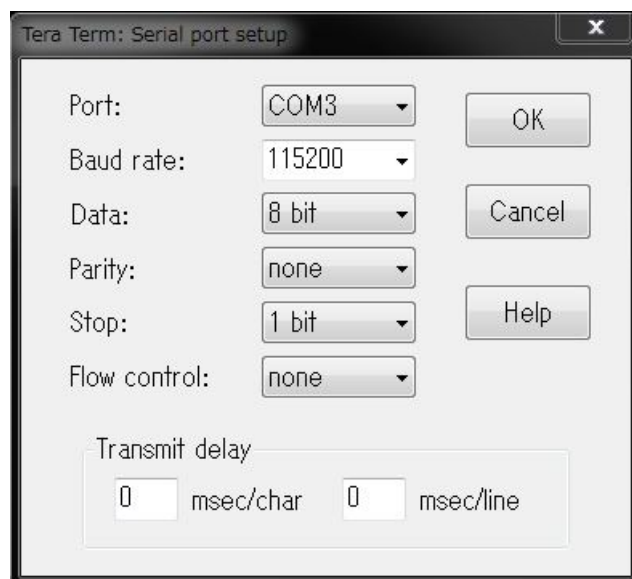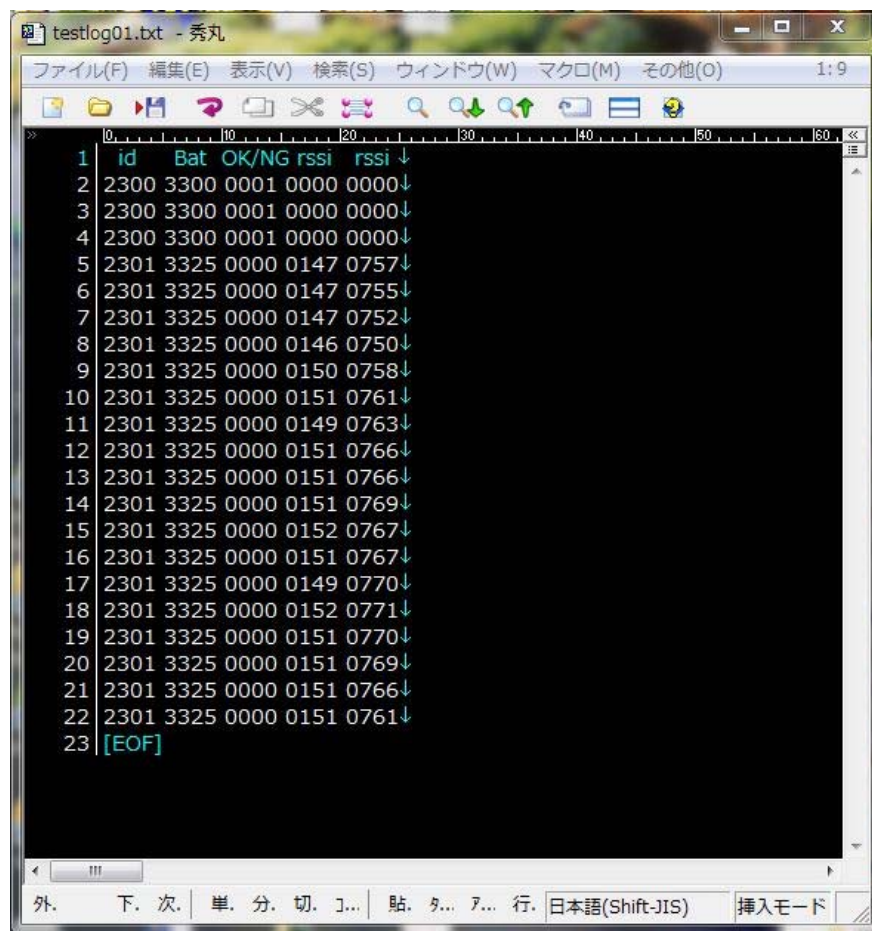

The screenshot shows a text editor window titled 'testlog01.txt - 秀丸'. The window contains a log of command execution results. The data is organized into columns: 'id', 'Bat', 'OK/NG', 'rssi', and 'rssi ↓'. The log entries are numbered 1 through 23. The last entry (23) is '[EOF]'. The status bar at the bottom indicates '日本語(Shift-JIS)' and '挿入モード'.

	id	Bat	OK/NG	rssi	rssi ↓
1					
2	2300	3300	0001	0000	0000↓
3	2300	3300	0001	0000	0000↓
4	2300	3300	0001	0000	0000↓
5	2301	3325	0000	0147	0757↓
6	2301	3325	0000	0147	0755↓
7	2301	3325	0000	0147	0752↓
8	2301	3325	0000	0146	0750↓
9	2301	3325	0000	0150	0758↓
10	2301	3325	0000	0151	0761↓
11	2301	3325	0000	0149	0763↓
12	2301	3325	0000	0151	0766↓
13	2301	3325	0000	0151	0766↓
14	2301	3325	0000	0151	0769↓
15	2301	3325	0000	0152	0767↓
16	2301	3325	0000	0151	0767↓
17	2301	3325	0000	0149	0770↓
18	2301	3325	0000	0152	0771↓
19	2301	3325	0000	0151	0770↓
20	2301	3325	0000	0151	0769↓
21	2301	3325	0000	0151	0766↓
22	2301	3325	0000	0151	0761↓
23					[EOF]

⇒ID information, etc.

図 5

[5]

■ Disclaimer

Please note that the information or the program it in this document may be changed or updated without notice. For any damages caused by these changes and updates, we are not responsible.