

Power Dog Schematics Guide

- 1 · CPU CL3116V032
- 2 · Transmit RF and handle TX4915
- 3 · Receive RF and handle RX3930
- 4 · Store voice files and handle AM4EG1707
- 5 · Voice amplifier UTC2206L

Main Oscillator's Working Frequency for Power Dog

- 1 · CPU frequency: 32.768KHz
- 2 · Transmitter RF: Crystal frequency 14.289 MHz, working frequency 914.5MHz.
- 3 · Receiver RF: Crystal frequency 14.121875MHz, working frequency 903.8MHz.