

Operation description for Microphone

1. The power supply voltage select switch locates on the back panel. The voltage has been made sure be the same as the purpose area' energy supply voltage before transportation. Please check the switch before energizing whether it is being operated right. If the voltages are not accordant or when you are in a different energy supply voltage area, please adjust the switch as following.
 - 1). Remove the power supply cord.
 - 2). Then get a middle-type screwdriver.
 - 3). Adjusting the switch with the screwdriver until the arrow of the switch point to the same voltage as the area's.
2. adjust the receiver's volume to the minimum level, connect the speaker's MIC input receptacle with the sound signal wire and adjust the speaker's volume to the minimum level.
3. Power on the receiver, adjust the volume to middle level.
4. Microphone batteries installation
 - 1). Spin and open the lid, put in the batteries in accordance with the right position then close the lid.
 - 2). Make sure the batteries' polarity is correct.
5. Push the microphone's switch to the 'ON' position, the signal lamp shine and you can enjoy the microphone.
6. adjust the microphone's volume to the most comfortable level.
7. Keep away from sound box to avoid noise and echo.