

User Guide WirelesStat 6400 & A/C Modules RRF-6410

PROGRAMING/PAIRING

It's necessary to pair the wireless thermostat to the remote A/C transceiver RRF-6410.

After installing the batteries into the wireless thermostat and installing the RRF-6410 into the A/C unit (see user guide WIRING) you can now pair the wireless thermostat to the RRF-6410 following the step-by-step procedure outlined below.


1. On the backside of the wireless thermostat (see drawing) using a nonmetallic pin engage the pairing button by lightly pushing downward and releasing. An LED will illuminate the thermostat is now in the pairing mode.
2. On the end side of the RRF-6410 (see drawing) using a nonmetallic pin engage the pairing button by lightly pressing inward and releasing. A successful pairing will be indicated by the pairing LED blinking 3 times

NOTE:

The pairing process must be completed within 15 seconds.

An unsuccessful pairing will be indicated by quad blinking 3 times.

To clear the memory in the RRF-6410 for the purpose of pairing to a different thermostat simply hold down the pairing button for 10 seconds a successful memory clear will be indicated by double blinking 3 times.

 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment

