

Wireless FM Transmitter

----BeeBird

User's Guide

1. Plug in the earphone plug to your portable music player.
2. Turn-on the power by pushing the middle button for at least 1 second.
(Insert 1.5V AAA battery or car power cable before turning-on the power)
3. Turn-on your car or home radio.
4. Select and save your car or home radio's frequency to the channel that has no broadcasting on it.
5. Match FM Transmitter frequency with your radio's frequency by pressing up or down button.
6. Turn on your portable music player(i.e. Portable CD Player,Mp3 player and etc) and play the music
(Due to the characteristics of FM , for good quality music, you should adjust the volume by adjusting your radio's volume while leaving your portable player's volume to a medium level)
Change your frequency if you hear static.
Reduce the volume I you hear distortion.

Caution:

1. Turn-off the power if FM Transmitter is not in use.
2. Do not expose FM Transmitter to direct sunlight or hot and humid areas.
3. Do not disassemble FM Transmitter or give bump to FM Transmitter.
4. Change old battery when the transmission strength become weakens.

Warning:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information to user

Any Changes or modifications not expressly approve by the manufactures could void the user's authority to operate the equipment.