


When it passes R102, means 4 frequency points
When it passes R103, means 5 frequency points

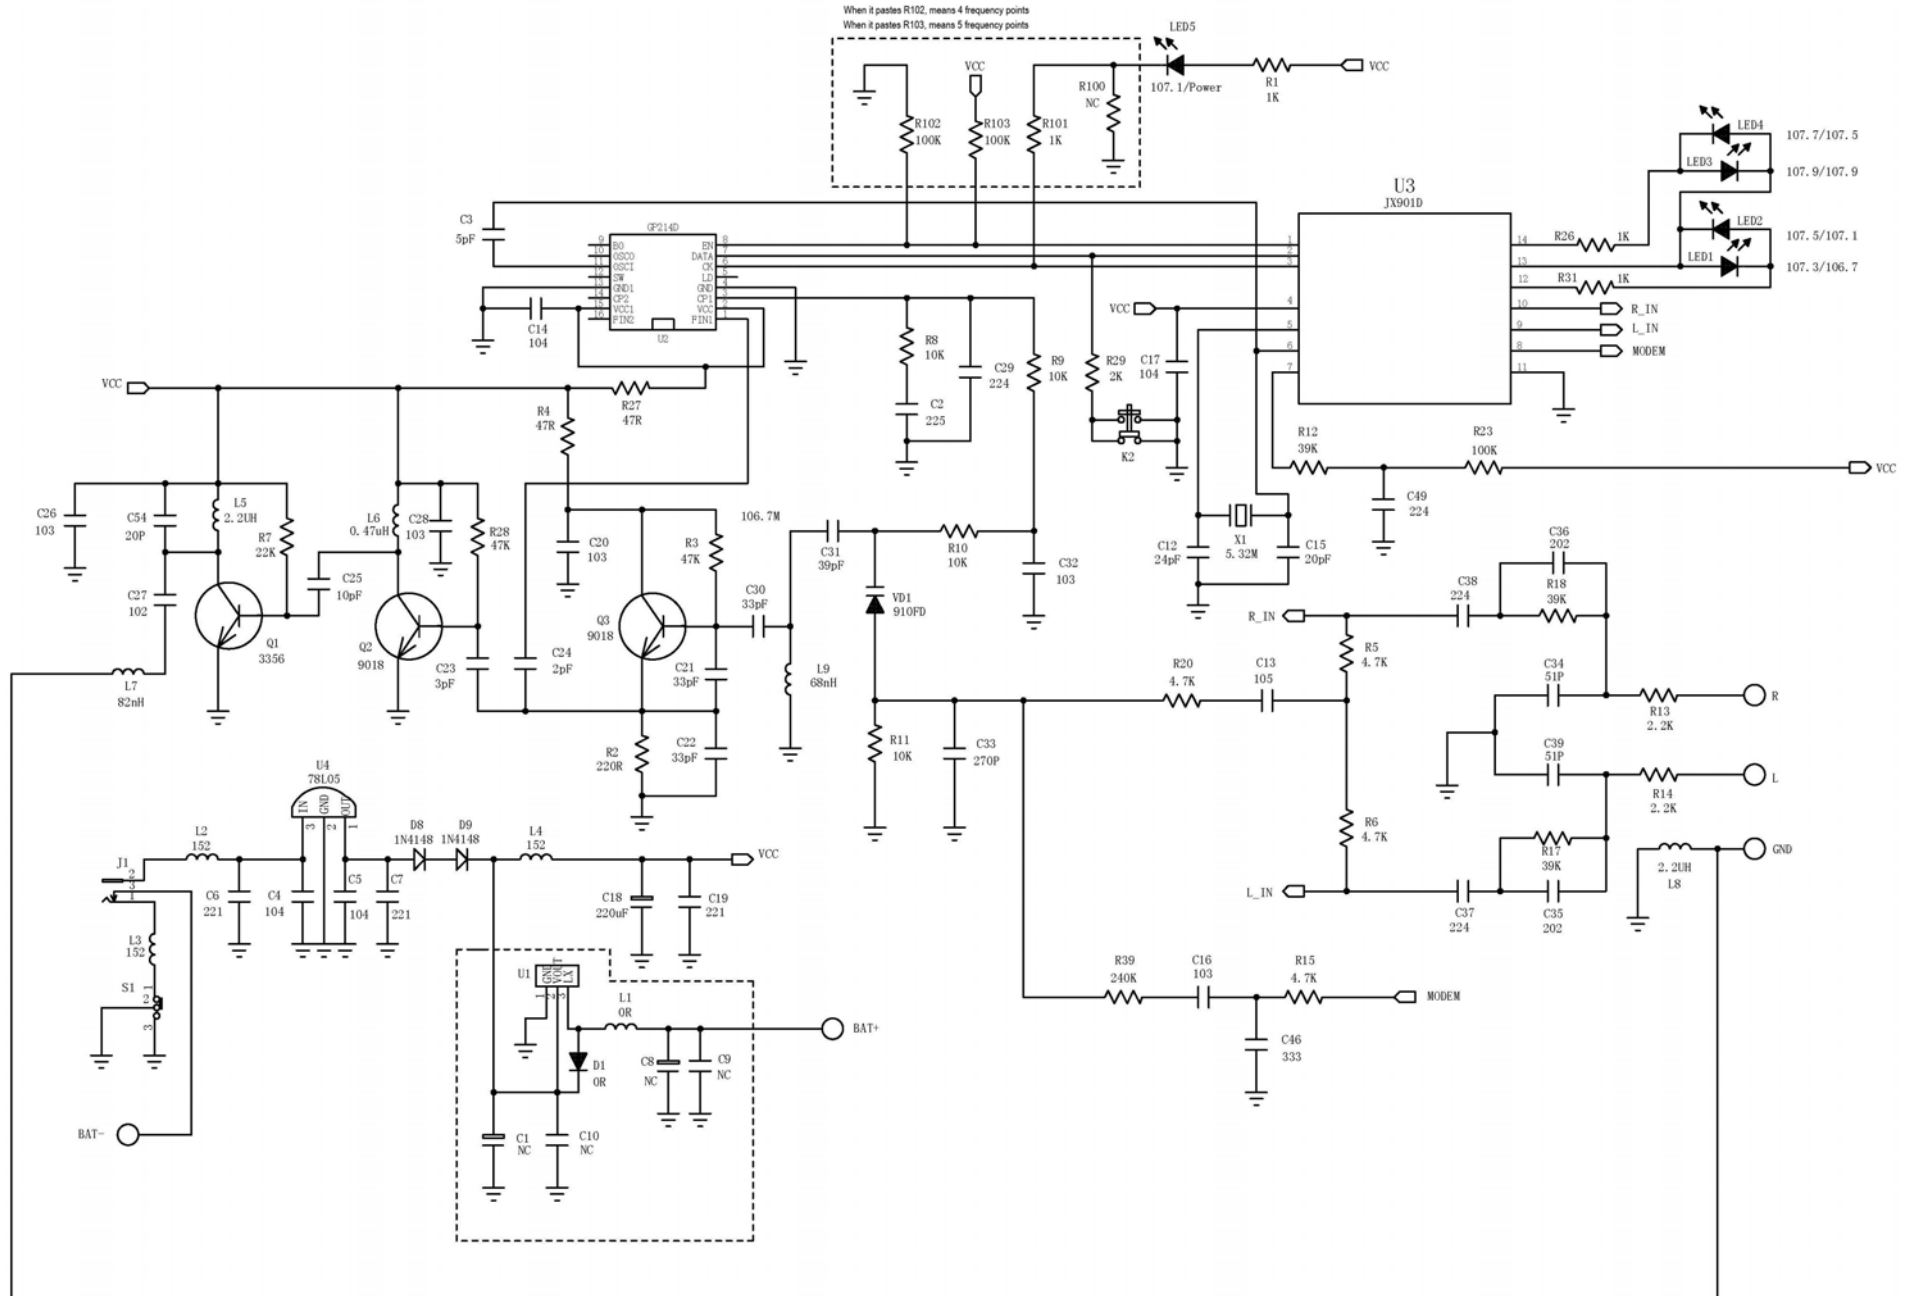

JX901D_A_00 3

2006. 1 1. 1