

User Manual

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

1. 110V AC volt power outlet

The 110 Volt AC Outlet can power or recharge Laptops, DVD Players, Cam-corders, Video Games, & TVs up to 13"

1. With the vehicle's engine running and the 12 Volt adaptor plugged into the unit, insert the 12 Volt adaptor into the vehicle's cigarette lighter plug or 12 Volt Power Port. You will hear the fan when the unit is running.

2. Plug your 110 Volt AC powered device into the 110 Volt AC Power Outlet. Do not use a device that uses more than 100 Watts, otherwise the fuse will blow. Always plug the VRTP4N1C into a 12 Volt power supply before powering a high current device.

3. Operate your device normally, as described by the manufacturer.

The inverter can handle an output of 100 watts for 20 minutes maximum.

2. 5 Volt DC USB charging port

The USB Port can recharge iPods & other devices that use a USB Port to recharge.

1. With the vehicle's engine running, insert the 12 Volt adaptor end into the vehicle's cigarette lighter plug or 12 Volt Power Port.

2. Insert the USB plug of the device you want to recharge into the USB port of the VRTP4N1C.

3. Operate your device normally, as described by the manufacturer.

3. 12 volt DC power outlet

Use the 12VDC Outlet for powering or recharging 12VDC devices while using one of the other outlets.

1. With the vehicle's engine running and the 12 Volt adaptor plugged into the unit, insert the 12 Volt adaptor into the vehicle's cigarette lighter plug or 12 Volt Power Port. You will hear the fan when the unit is running.

2. Insert the keyed end of the 12VDC Recptacle into the unit, then insert the plug of the 12 Volt DC device into the 12 Volt DC Recptacle.

3. Operate your device normally, as described by the manufacturer.

4. FM transmitter

1. With the vehicle's engine running, insert the 12 Volt adaptor end into the vehicle's cigarette lighter plug or 12 Volt Power Port.
2. Insert the 3.5mm plug of the supplied audio cable into the stereo headphone jack of an MP3, CD, or DVD player. Insert the other end of the cable into the 3.5mm stereo input jack of the VRTP4N1C. When the VRTP4N1C detects input voltage it will automatically start.
3. Tune your car stereo to one of the 15 pre-set FM frequencies that is not being broadcast on by any local radio stations.
(88.1, 88.3, 88.5, 88.7, 88.9, 89.1, and 106.7, 106.9, 107.1, 107.3, 107.5, 107.7, 107.9 MHz)
5. Press the Channel Up or Channel Down Button to select the FM Preset that you tuned the car stereo to.
6. Press the Play Button on the player that you connected to the VRTP4N1C.
7. The Music/Audio will transmit from the VRTP4N1C to the vehicle's FM stereo receiver.
8. Adjust the volume on the audio player to about half the maximum volume, then adjust the volume of the car stereo to suit your listening preferences.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Statement for Industry Canada

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.