


EAS02M

Wireless Speaker

Thank you for choosing Enermax EAS02M Wireless Speaker! Before you use the speaker, make sure to completely charge the device, and become familiar with the Bluetooth function on your paired devices.

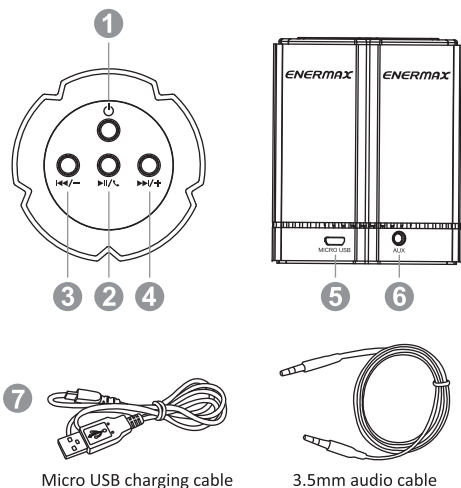

Micro USB charging cable

3.5mm audio cable

Specifications

Model Name	EAS02M
Audio Specifications	
Speaker Unit	ø52mm 4W driver + ø52mm passive radiator
Frequency Response	70Hz-18KHz
Maximum Sound Level	110db
Signal-to-Noise Ratio	80db

General Specifications	
Battery Type	Li-Po rechargeable battery
Battery Life	Approx. 8 hours (varies by volume level and audio content)
Battery Charge Time	3 hours
Weights	320g
Dimensions	ø72mm x H85mm

Connectivity Specifications	
Frequency Range	2.4 GHz ~ 2.48 GHz
Profile Support	HFP, A2DP, AVRCP, HSP, GAVDP, IOP
Line of Signal Range	70 ~ 75ft (actual operating distance depending upon environmental factors)

EN

The General Features

• Function

- On / Off**
 - Hold : Power on / off
 - Press : Light on / off
- Play / Pause, answering call**
 - Press : Play / Pause music
 - Short press the button to play / pause the music in Bluetooth mode
 - Short press the button to answer incoming calls, and press it again to end the call
 - Hold the button to reject incoming calls
- Prev / Volume down**
 - Press : Prev. the track
 - Hold : Volume down
- Next / Volume up**
 - Press : Next track
 - Hold : Volume up
- Charging interface**
- Audio input**
- Accessories**
- Bluetooth Connection**

1. Turn on the speakers (Default prompt tone). Bluetooth indicator light 1s pulse flashing.
2. Mobile / computer / other devices / open Bluetooth, and then click on the search, in the search to the machine inside the choice of EAS02M. After the pairing is successful, Bluetooth indicator light 1s pulse slow flashing. Default prompt tone.
3. Keep press the play button to disconnect the Bluetooth connection, Default prompt tone.

CZ

Hlavní funkce

• Funkce

- Vypínač / přepínač režimů**
 - Podržte : zapnutí / vypnutí napájení
 - Kliknutí : Světlo zapnuto / vypnuto
- Přehrát / Pauza / Přijmout hovor**
 - Krátkým stiskem tlačítka zapnete přehrávání / pauzu hudby v Bluetooth režimu.
 - Krátkým stiskem tlačítka přijmete příchozí hovory a dalším stiskem hovor ukončíte.
 - Dlouhým stiskem tlačítka odmítnete příchozí hovory.
- Předchozí skladba / Snížit hlasitost**
 - Krátkým stisknutím tlačítka přehrajete předchozí skladbu.
 - Dlouhým stisknutím tlačítka snížíte hlasitost.
- Další skladba / Zvýšit hlasitost**
 - Krátkým stisknutím tlačítka přehrajete následující skladbu.
 - Dlouhým stisknutím tlačítka zvýšíte hlasitost.

5 Nabíjecí rozhraní

6 Audio vstup

7 Příslušenství

ES

Características Generales

• Funciones

- Encendido / Apagado**
 - Mantener apretado : encendido / apagado
 - Haga clic en : La luz de encendido / apagado
- Play / Pausa / Contestar Llamadas**
 - Pulsar brevemente el botón para reproducir / pausar la música en modo Bluetooth.
 - Pulsar brevemente el botón para contestar llamadas, y pulsarlo de nuevo para terminar la llamada.
 - Pulsar durante más tiempo el botón para rechazar las llamadas.
- Pista anterior / Bajar Volumen**
 - Pulsar brevemente el botón para reproducir la pista anterior.
 - Pulsar durante más tiempo el botón para bajar el volumen.
- Pista siguiente / Subir el volumen**
 - Pulsar brevemente el botón para pasar a la pista siguiente.
 - Pulsar durante más tiempo el botón para subir el volumen.

5 Rozhranie nabíjania

6 Entrada de audio

7 Accesorios

IT

Caratteristiche generali

• Funzioni

- On / Off**
 - Tenere premuto : Acceso / spento
 - Clicca : Luce on / off
- Play / Pausa / risposta chiamata**
 - Premere brevemente il bottone per eseguire / mettere in pausa i brani in modalità Bluetooth.
 - Premere brevemente il bottone per rispondere alle chiamate in entrata e premerlo di nuovo per terminare la chiamata.
 - Premere il bottone per un periodo più lungo per rifiutare la chiamata entrante.
- Brano Precedente / Abbassare Volume**
 - Premere brevemente il bottone per eseguire il brano precedente.
 - Premere per un periodo più lungo il bottone per abbassare il volume.
- Brano successivo / Aumentare Volume**
 - Premere brevemente il bottone per passare al brano successivo.
 - Premere per un periodo più lungo il bottone per aumentare il volume.

5 Interfaccia di Carica

6 Ingresso audio

7 Accessori

SK

Všeobecná charakteristika

• Funkcia

- Zapnúť / vypnúť**
 - Podržte : Zapnúť / vypnúť napájanie
 - Kliknutie : Svetlo zapnuté / vypnuté
- Play / Pause, answering call**
 - Press : Play / Pause music
 - Short press the button to play / pause the music in Bluetooth mode.
 - Short press the button to answer incoming calls, and press it again to end the call.
 - Long press the button to reject incoming calls
- Predchádzajúca skladba / Znížiť hlasitosť**
 - Ak chcete prehrať predchádzajúcu skladbu, krátko stlačte tlačidlo č.
 - Ak chcete znížiť hlasitosť, dlho stlačte tlačidlo č.
- Dalšia skladba / Zvýšiť hlasitosť**
 - Ak chcete preskočiť ďalšiu skladbu, krátko stlačte tlačidlo č.
 - Ak chcete zvýšiť hlasitosť, dlho stlačte tlačidlo č.

5 Nabíjacie rozhranie

6 audio vstup

7 Príslušenstvo

Safety information

- The unit should only be repaired by authorized service center. Do not repair by yourself.
 - Do not take speaker apart to avoid electrocution.
 - Only use approved attachments and accessories specified by Enermax audio.
 - Warning! Electric shock hazard : To reduce the risk of fire of electric shock, do not expose this product to water.
 - Noted : To prevent possible hearing damage, do not listen at high volume levels for long periods.
 - Do not use or charge a battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
 - In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner.
- Federal Communication Commission Interference Statement. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio / TV technician for help.
- FCC Caution : Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- Radiation Exposure Statement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.