


BUTTON / PULSADOR
DRUCKKNOPF / BOUTON-PRESSION
BOTÃO DE PRESSÃO / PULSANTE

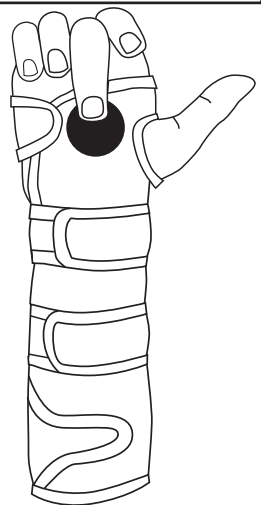


REVERSE
ATRÁS

FORWARDS
ADELANTE

LEFT
IZQUIERDA

RIGHT
DERECHA

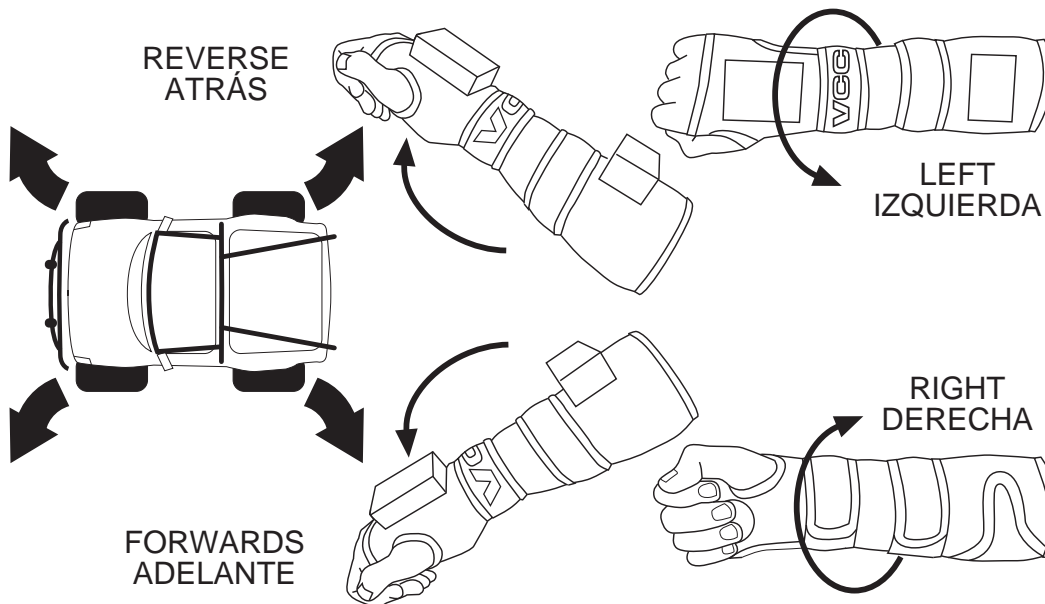

MOLTO
VCC
LANDER
TURBO



USER HANDBOOK



BATTERIES MUST BE CHANGED BY AN ADULT.

Please read this user handbook through carefully before operating the vehicle.

OPERATING INSTRUCTIONS. (ILLUSTRATION 1)

- Place remote control glove on hand.
- Move the switch under the car to the ON position.
- Press the button on the control glove to move the car.
- Point the control glove in the desired direction of movement of the car.
- Release the button to stop the car.
- After playing, move the switch to the OFF position.
- If the car does not move in a straight line, adjust the alignment lever under the car to correct the tracking.

CHANGING THE BATTERY IN THE CONTROL GLOVE. (ILLUSTRATION 2)

SAFETY MEASURES:

- 01Do not recharge batteries which are not rechargeable.
- 02Load rechargeable batteries under the supervision of an adult.
- 03Remove rechargeable batteries from the toy, before you recharge them.
- 04Do not mix old and new batteries. do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 05Only batteries of the type 6LR61 9 V or similar may be used.
- 06The batteries must be inserted in accordance with the respective polarity.
- 07Flat batteries must be removed from the toy.
- 08The connectors of a battery must not be short-circuited.

If the car is not to be used for a long period, we recommend removing the batteries from both the car and the transmitter.

CHANGING THE BATTERIES IN THE CAR. (ILLUSTRATION 3)

- Make certain that the switch on the car is in the OFF position before inserting the batteries.
- Make sure that the poles of the batteries are aligned correctly.
- Only use batteries of the stated type (or equivalent).

NOTES ON USE AND MAINTENANCE

- Find a safe place for playing with the car. Do not drive it onto the road. Do not use it close to small children or in heavily frequented areas.
- Avoid driving the car into sand or puddles. This can impair its function.
- If water enters the car, remove the batteries and dry them with a hair-dryer.
- Do not leave the car or the transmitter close to sources of heat or in direct sunlight for extended periods of time.
- Do not leave the car outside overnight, because moisture will harm the internal mechanism.
- Clean the car regularly using as cloth moistened with water and a toothbrush. Do not use any organic cleaners or other chemical products.
- Avoid collisions – they can damage the motor and the transmission.
- After a serious crash, check the car thoroughly before re-starting it.

RADIO FAULTS:

- On occasion, high-voltage lines, high-voltage transformers, narrow passages, etc. can lead to distortion in the radio signal and can result in the car being impossible to steer.
- Faults can also occur if other radio-controlled vehicles or urban radio transmitters are being run in the immediate neighbourhood on the same frequency. In this case, please look for another place for playing with the car.

TROUBLE-SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The car won't move	It is not switched on The batteries are flat	Move switch to ON position Replace or recharge batteries
The car only works over short distances	The transmitter battery is weak	Replace battery
Slow reaction times or slow movement	The batteries are weak	Replace or charge batteries

GUARANTEE

This product is subject to the legal guarantee period. The rights of the consumer are unaffected. This guarantee will not apply if during the guarantee period the toy is improperly handled or if the user instructions in the handbook have not been followed.

To make a claim under guarantee, you will need a document showing the date of purchase of the toy (e.g. the invoice, a receipt or other legal proof of payment).

MANUAL DEL USUARIO



LAS PILAS DEBEN SER CAMBIADAS POR UN ADULTO.

Por favor, lea atentamente este manual antes de utilizar el vehículo.

INSTRUCCIONES DE USO. (FIGURA 1)

- Colocarse el guante-mando en el brazo.
- Seleccionar la posición ON del interruptor situado bajo el vehículo.
- Presionar el pulsador del guante-mando para iniciar el movimiento.
- Inclinarse el guante-mando en la dirección en que se desee dirigir el vehículo.
- Soltar el pulsador para detener el vehículo.
- Al terminar de jugar, sitúe el interruptor en posición OFF.
- Cuando el vehículo no circule recto, ajuste la palanca de alineación de la dirección que se encuentra bajo el vehículo para corregir la trayectoria.

CAMBIO DE PILAS DEL GUANTE-MANDO. (FIGURA 2)

PRECAUCIONES:

- 01No recargar pilas no recargables.
- 02Recargar las pilas recargables bajo la vigilancia de un adulto.
- 03Retirar las pilas recargables del juguete antes de ser cargadas.
- 04Diferentes tipos de pilas o pilas nuevas y usadas no debende ser mezcladas.
- 05Sólo deben de ser usadas pilas del tipo 6LR61 9 V, o similar.
- 06Las pilas deben de ser colocadas respetando la polaridad.
- 07Las pilas usadas deben ser retiradas del juguete.
- 08Los bornes de una pila no deben de ser cortocircuitados.

Si va a estar algún tiempo sin utilizar el juguete, recomendamos que saque las pilas del vehículo y del transmisor.

CAMBIO DE PILAS DEL COCHE. (FIGURA 3)

- Asegúrese de que el interruptor del vehículo está en posición OFF antes de colocar las pilas.
- Asegúrese de colocar las pilas siguiendo la polaridad correcta.
- Solo deben ser usadas pilas del tipo indicado o equivalentes.

ADVERTENCIAS DE USO Y MANTENIMIENTO

- Elija un lugar seguro para jugar. No lo conduzca en la calle. No lo utilice cerca de niños pequeños o en áreas concurridas.
- Evite conducir el vehículo sobre arena o charcos de agua. Estos lugares pueden perjudicar su funcionamiento.
- Si entra agua en el interior del vehículo, extraiga las pilas y séquelo con un secador de pelo.
- No deje el vehículo ni el transmisor cerca de fuentes de calor o bajo la luz directa del sol durante largos periodos de tiempo.
- No deje el vehículo ni el transmisor a la intemperie durante la noche, la humedad es perjudicial para el mecanismo interior.
- Limpie el vehículo periódicamente con un trapo humedecido en agua y un cepillo de dientes.
- No utilice disolventes orgánicos ni otros productos químicos.
- Evite colisiones, podría dañarse el motor o la caja de cambios.
- Revise su vehículo a conciencia tras una colisión fuerte antes de ponerlo de nuevo en funcionamiento.

INTERFERENCIAS DE RADIO

- En ocasiones, las líneas de alta tensión, los transformadores de alta tensión, los lugares estrechos, etc. pueden distorsionar las señales de radio, provocando la pérdida de control del vehículo.
- También habrá interferencias si otro vehículo controlado por radio o un transmisor de radio de banda ciudadana están funcionando en las inmediaciones con la misma frecuencia. Si esto ocurre, cámbiese a un lugar diferente.

SOLUCIÓN DE PROBLEMAS

PROBLEMA	POSIBLE CAUSA	SOLUCIÓN
El vehículo no se mueve	El interruptor no está activado Las pilas están gastadas	Posicione el interruptor en ON Cambie o recargue las pilas
El vehículo solo funciona en distancias cortas	La pila del transmisor está gastada	Cambie la pila
Respuesta de maniobra lenta o velocidad reducida	Las pilas están gastadas	Cambie o recargue las pilas

GARANTÍA:

Este producto está garantizado por el periodo que marca la ley. Esto no afecta a los derechos del consumidor.

Esta garantía no tendrá validez si durante el periodo de garantía el juguete ha sufrido malos tratos o no se han respetado los consejos que incluye el manual.

Para la validez de la garantía es requisito indispensable evidenciar la fecha de compra del juguete (por ejemplo, una factura, un recibo o cualquier otro justificante de pago legal).



© 2008 MOLTO

MOLTO Y CIA, S.A.

Avda. Azorín, 18-P.O. Box nº 49

03440 IBI (ALICANTE) SPAIN.

N.R.I. 03-10142

MOLTO HONG KONG LIMITED
1/F, CHUNG NAN BLDG., 1 LOCKHART ROAD
WANCHAI - HONG KONG

FCC ID : WH9VCLANDER

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



SEPARARE I COMPONENTI ELETTRICI PER ESSERE RICICLATI.
SEPARATE THE ELECTRIC PARTS TO BE RECYCLED.
SÉPARER LES ÉLÉMENTS ÉLECTRONIQUES POUR ÊTRE RECYCLÉS.
SEPARARE OS COMPONENTES ELÉCTRICOS, AFIM DE SEREM RECICLADOS.
A.U.B DE ELECTRICHE ONDERDELEN SCHEIDEN OM ZE TE RECYCLEREN.
SEPARARE LE PARTI ELETTRONICHE AL FINE DI RICICLARLE.
DIE ELECTROTEILE ZUM ENTSORGEN TRENNEN.

Cod.: 0670862003